

Keor MOD

EN

ENGLISH

3

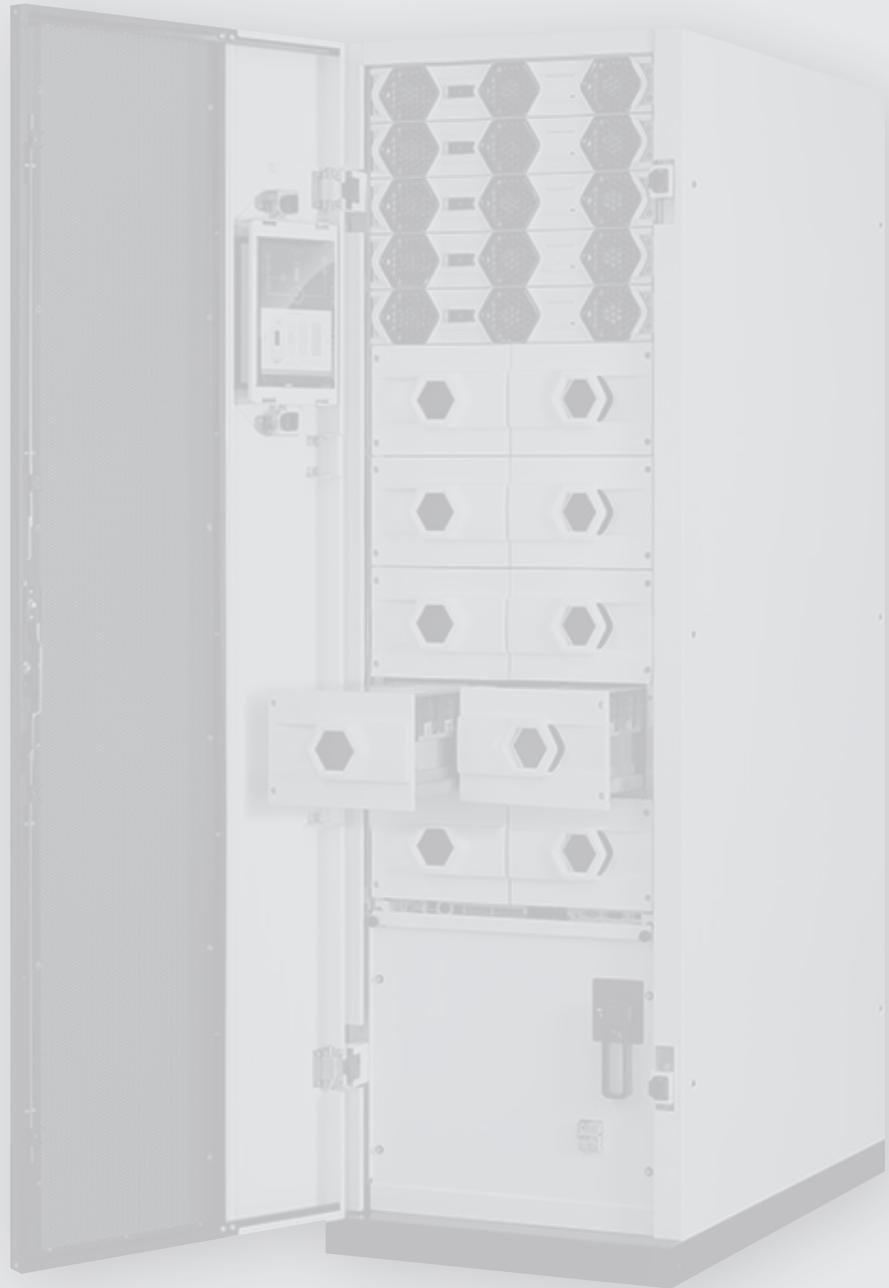


Table of Contents

1	Introduction	5
1.1	Overview	5
1.2	Purpose of the manual	5
1.3	Symbols in the manual	5
1.4	Where and how to keep the manual	6
1.5	Update of the manual	6
1.6	Manufacturer's liability and guarantee	6
1.6.1	Guarantee terms	6
1.6.2	Extension of the guarantee and maintenance contracts	7
1.7	Copyright	7
2	Safety regulations	8
2.1	General notes	8
2.2	Definitions of "Skilled Technician" and "Operator"	8
2.2.1	Skilled Technician	8
2.2.2	Operator	8
2.3	Personal Protective Equipment	8
2.4	Hazard signs in the workplace	9
2.5	Signs on the equipment	9
2.6	General warnings	10
2.7	How to proceed in an emergency	11
2.7.1	First-aid procedures	11
2.7.2	Fire procedures	11
3	Unpacking and moving	12
3.1	Visual check	12
3.2	Equipment check	12
3.3	Unpacking	13
3.4	Movement	14
3.5	Positioning constraints	15
4	Control panel	16
4.1	Synoptic area	18
4.1.1	Input line	19
4.1.2	Rectifier	20
4.1.3	Charger - Booster	20
4.1.4	Batteries	21
4.1.5	Inverter	21
4.1.6	Bypass	22
4.2	System area	23
4.3	Status bar	24
4.4	Menu bar	25

Table of Contents

5. Operations	26
5.1 Switching on the UPS	26
5.2 Setting the UPS in forced bypass mode	26
5.3 Switching off the UPS	26
6. Installation and maintenance	27
6.1 Installation	27
6.2 Preventive maintenance	27
6.3 Periodical checks	27
6.4 Ordinary maintenance	27
6.5 Extraordinary maintenance	27
7. Warehousing	28
7.1 UPS	28
7.2 Batteries	28
8. Dismantling	29
8.1 Battery disposal	29
8.2 UPS dismantling	29
8.3 Electronic component dismantling	29
9. Technical data	30

1. Introduction

1.1 Overview

Congratulations on your LEGRAND purchase!

Thanks to this UPS, your critical equipments will always be protected by a constant and reliable electricity supply.

LEGRAND is specialized in designing and producing UPS units. Keor MOD is unique in its kind: it is modular, redundant and belongs to the latest generation of high power UPS units.

High reliability, low running costs and excellent electrical performance are only some of its characteristics. The high quality standards of LEGRAND in design and production allows Keor MOD to pass the strictest quality tests.

The UPS has been designed in compliance with the existing European community directives, with the technical standards that include their requirements and with the eco-design guidelines.

The equipment is produced at an ISO14001 certified factory.

This publication, simply defined "user manual" herein, contains all the information for the use of the Keor MOD UPS, also referred to as "equipment" in this manual.

The contents of the user manual are intended mainly for an operator (see paragraph 2.2.2) or for people, generically defined as "users", who have the need and/or obligation to provide instructions or work directly on the equipment for their assigned tasks.

These people can be the following:

- managers;
- heads of operating areas;
- department heads;
- direct private users.

1.2 Purpose of the manual

The purpose of this manual is to provide the operator with instructions for safely using the equipment after the installation performed by a skilled technician.

Extraordinary maintenance operations are not dealt with because they are the sole preserve of the LEGRAND Technical Support Service.

The reading of this manual is essential but does not substitute the skill of technical personnel who must have received adequate preliminary training.

The intended use and configurations envisaged for the equipment as shown in this manual are the only ones allowed by the Manufacturer.

Any other use or configuration must be previously agreed with the Manufacturer in writing and, in this case, the written agreement will be attached to the installation and user manuals.

This manual also refers to laws, directives and standards that the skilled technician is required to be aware of and consult.

The original text of this publication, drafted in English, is the only reference for the resolution of disputes of interpretation linked to translations into other languages.

1.3 Symbols in the manual

Some operations are shown in graphic symbols that draw the attention of the reader to the danger or the importance they imply:



DANGER

This indication shows a danger entailing a high degree of risk that, if not avoided, will lead to death or serious injury or considerable damage to the equipment and things around it.



WARNING

This indication shows a danger entailing a medium degree of risk that, if not avoided, could lead to death or serious injury or considerable damage to the equipment and the things around it.



CAUTION

This indication shows a danger entailing a low level of risk that, if not avoided, could lead to minor or moderate injury or material damage to the equipment and the things around it.

1. Introduction

INDICATION

This symbol indicates important information which should be read carefully.

1.4 Where and how to keep the manual

This manual must be kept in a safe, dry place and must always be available for consultation.

It is recommended to make a copy of it and file it away.

If information is exchanged with the Manufacturer or the authorized assistance personnel, it is essential to refer to the equipment's rating plate data and serial number.

INDICATION

The manuals provided with the equipment are an integral part of it and must therefore be kept for its entire lifetime. In case of need (for example in case of damage that even partially compromises its consultation) the operator is required to get a new copy from the Manufacturer, quoting the publication code on the cover.

1.5 Update of the manual

The manual reflects the state of the art when the equipment was put onto the market. The publication conforms to the directives current on that date. The manual cannot be considered inadequate when new standards come into force or modifications are made to the equipment.

Any addition to the manual the Manufacturer considers appropriate to send to the users, must be kept together with the manual of which they will become an integral part.

The version of the manual updated to its latest release is available on the Internet at <http://www.ups.legrand.com>

1.6 Manufacturer's liability and guarantee

The skilled technician and the operator shall scrupulously comply with the precautions and installation instructions indicated in the manuals. They must:

- always work within the operating limits of the equipment;
- always carry out constant and careful maintenance through a skilled technician who complies with all the procedures indicated in the installation and maintenance manual.

The Manufacturer declines all indirect or direct responsibility arising from:

- assembly and cabling made by personnel not fully qualified according to national standards to work on equipment presenting electrical hazards;
- assembly and cabling made without using safety equipment and tools required by national safety standards;
- failure to observe the installation and maintenance instructions and use of the equipment which differs from the specifications in the manuals;
- use by personnel who have not read and thoroughly understood the content of the user manual;
- use that does not comply with the specific standards used in the country where the equipment is installed;
- modifications made to the equipment, software, functioning logic unless they have been authorized by the Manufacturer in writing;
- repairs that have not been authorized by the LEGRAND Technical Support Service;
- damage caused intentionally, through negligence, by acts of God, natural phenomena, fire or liquid infiltration;
- damage caused using batteries and protections not specified in the manuals;
- accidents caused by a wrong assembly of the safety protections or due to the lack of application of the safety labels specified in the installation manual.

The transfer of the equipment to others also requires to hand over all the manuals. Failure to do it will automatically nullify any right of the buyer, including the terms of the guarantee where applicable.

If the equipment is sold to a third party in a country where a different language is spoken, the original owner shall be responsible for providing a faithful translation of this manual in the language of the country where the equipment will be used.

1.6.1 Guarantee terms

The guarantee terms may vary depending on the country where the UPS is sold. Check the validity and duration with LEGRAND's local sale representative.

If there should be a fault in the product, contact the LEGRAND Technical Support Service which will provide all the instructions on what to do.

Do not send anything back without LEGRAND's prior authorization.

The guarantee becomes void if the UPS has not been brought into service by a properly trained skilled technician (see paragraph 2.2.1).

If during the guarantee period the UPS does not conform to the characteristics and performance laid down in this manual, LEGRAND at its discretion will repair or replace the UPS and relative parts. All the repaired or replaced parts will remain LEGRAND's property.

LEGRAND is not responsible for costs such as:

- losses of profits or earnings;
- losses of equipment, data or software;
- claims by third parties;
- any damage to persons or things due to improper use, unauthorized technical alterations or modifications;
- any damage to persons or things due to installations where the full compliance with the standard regulating the specific usage applications have not been guaranteed.

1.6.2 Extension of the guarantee and maintenance contracts

The standard guarantee can be consolidated in a single extension contract (maintenance contract).

Once the guarantee period has passed, LEGRAND is available for giving a technical assistance service able to meet all requirements, maintenance agreements, 24/7 availability and monitoring.

Please, contact the LEGRAND Technical Support Service for further information.

1.7 Copyright

The information contained in this manual cannot be disclosed to any third party. Any partial or total duplication of the manual by photocopying or other systems, including electronic scanning, which is not authorized in writing by the Manufacturer, violates copyright conditions and may lead to prosecution.

LEGRAND reserves the copyright of this publication and prohibits its reproduction wholly or in part without previous written authorization.

2. Safety regulations



DANGER

Before carrying out any operation on the equipment, it is necessary to read the entire manual carefully, especially this chapter.

Look after this manual carefully and consult it repeatedly during installation and maintenance by a skilled technician.

2.1 General notes

The equipment has been made for the applications given in the manual. It may not be used for purposes other than those for which it has been designed, or differently from those specified in this manual.

The various operations must be carried out according to the criteria and the chronology described in this manual.

2.2 Definitions of “Skilled Technician” and “Operator”

2.2.1 Skilled Technician

The figure that will carry out the installation, start up and ordinary maintenance is called “Skilled Technician”.

This definition refers to people who have the specific technical qualification and are aware of the method of installing, assembling, repairing, bringing online and using the equipment safely.

In addition to the requirements listed in the section below for a general operator, the Skilled Technician is qualified according to national safety standards to work under dangerous electrical voltage and uses the personal protective equipment required by national safety standards for all the operations indicated in this manual (see the examples listed in paragraph 2.3).

INDICATION

The safety manager is responsible for protection and company risks prevention according to what is indicated in European directives 2007/30/EC and 89/391/EEC regarding safety in the workplace.

The safety manager must ensure that all the people working on the equipment have received all the instructions concerning them in the manual, especially those contained in this chapter.

2.2.2 Operator

The figure assigned to the equipment for normal use is called “Operator”.

This definition refers to people who know how to operate the equipment defined in the user manual and have the following requisites:

1. technical education, which enables them to operate according to safety standards in relation to the dangers linked to the presence of electric current;
2. training on the use of personal protective equipment and basic first aid interventions.

The company safety manager, in choosing the person (operator) who uses the equipment, must consider

- the person's work fitness according to the laws in force;
- the physical aspect (not disabled in any way);
- the psychological aspect (mental stability, sense of responsibility);
- the educational background, training and experience;
- the knowledge of the standards, regulations and measures for accident prevention.

He shall also provide training in such a way as to provide thorough knowledge of the equipment and its component parts.

Some typical activities the operator is expected to carry out are:

- the use of the equipment in its normal functioning state and the restore of the functioning after it shuts down;
- the adoption of the necessary provisions for maintaining the quality performance of the UPS;
- the cleaning of the equipment;
- cooperation with personnel responsible for ordinary maintenance activities (Skilled Technicians).

2.3 Personal Protective Equipment



DANGER

The UPS poses a considerable risk of electric shocks and a high short circuit current. During installation, use and maintenance operations, the equipment mentioned in this section must be used.

People responsible for operating this equipment and/or passing close to it must not wear garments with flowing sleeves, nor may laces, belts, bracelets or other metal pieces that might cause a danger.

The following list sum up the minimum Personal Protective Equipment to wear always. Additional requirements may be needed according to national safety standards.

-  Anti-accident and non-sparking shoes with rubber sole and reinforced toe
-  Protective gloves for handling operations
-  Isolated rubber gloves for operations of connection and work under hazardous voltage
-  Protective garments for electrical work
-  Protective face and head shield
-   Isolated tools

INDICATION

The skilled technician must work on electrical insulated carpet and he must not wear any kind of metal objects like watches, bracelets, etc.

2.4 Hazard signs in the workplace

The following signs must be exhibited at all points of access to the room where the equipment is installed:



Electric current
This sign indicates the electrical live parts.



How to proceed in an emergency
Do not use water to quench fires but just the extinguishers specially designed for putting out fires in electrical equipment.



No smoking
This sign indicates that smoking is not allowed.

2.5 Signs on the equipment

Displayed on the UPS are explanatory plates that can vary depending on the country the equipment is intended for and constructional standards applied.

Make sure the instructions are adhered to. Removing these plates and working in a way that differs from what written there, is strictly prohibited.

The plates must always be clearly read and they must be cleaned periodically.

If a plate deteriorates and/or it is no longer legible, even partially, the Manufacturer must be contacted for another one.



CAUTION

The plates must not be removed or covered. Signs in different languages are provided along with the equipment to replace those in English. No other plates may be affixed to the equipment without the Manufacturer's prior written authorisation

2. Safety regulations

WARNING

Potential risks can be drastically reduced by wearing the Personal Protective Equipment listed in this chapter, which are indispensable. Always operate with due care around dangerous areas marked by the appropriate warning notices on the equipment.

2.6 General warnings

DANGER

The UPS works with dangerous voltages. Only Skilled Technicians must perform the installation and ordinary maintenance operations. No part of the UPS can be repaired by the operator.

Extraordinary maintenance operations must be carried out by LEGRAND Technical Support Service personnel.

DANGER

Before beginning any installation and/or maintenance operation, make sure that all the DC and AC power sources are disconnected.

The UPS and the external battery cabinet, if present, must be installed with an earth connection to avoid high leakage currents. First connect the earthing cable.

Check during each installation and/or maintenance operation the continuity of the earthing system.

DANGER

The UPS is powered by its own DC energy source (batteries). The output terminals may have a dangerous voltage even if the UPS is not connected to the AC power network.

Disconnect all battery drawers and external battery cabinets before performing any installation and/or maintenance operation.

WARNING

A battery can present a risk of electrical shock and burns by high short-circuit current. Failed batteries can reach temperatures that exceed the burn thresholds for touchable surfaces. The following precautions should be observed when working on batteries:

- a) remove watches, rings or other metal objects.
- b) use tools with insulated handles.
- c) wear rubber gloves and boots.
- d) do not lay tools or metal parts on top of batteries.
- e) disconnect the charging source prior to connecting or disconnecting battery terminals.
- f) determine if battery is inadvertently grounded. If inadvertently grounded, remove source from ground.
Contact with any part of a grounded battery can result in electrical shock. The likelihood of such shock can be reduced if such grounds are removed during installation and maintenance (applicable to equipment and remote battery supplies not having a grounded supply circuit).
- g) never leave live cable terminals without an insulated protection.
- h) When replacing batteries, replace with the same type and number of batteries or battery packs. There is the risk of explosion if batteries are replaced by an incorrect type.

Do not dispose of batteries in a fire. The batteries may explode.

Do not open or mutilate batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic. The batteries installed inside the cabinet must be disposed of correctly. For the disposal requirements refer to local laws and relevant standards.

INDICATION

The UPS functions with TT, IT, TN-C and TN-S systems. Input and output neutral are referenced to the same neutral potential: the output neutral status is the same as the input neutral status.

When the output load needs a different neutral status, it is necessary to place downstream of the UPS a suitably scaled isolation transformer that must be protected in compliance with the standards in force.

CAUTION

Do not open the battery fuse holders while the UPS is powering the loads in battery mode.

 **WARNING**

To reduce the risk of fire or electric shock, the UPS must work in closed, clean environments with controlled temperature and humidity. It must be kept away from inflammable liquids and corrosive substances. The room temperature must not be above +40°C (+104°F) and the relative humidity must be a maximum of 95% not condensing.

INDICATION

The equipment generates, uses and can radiate radio frequency energy. If it is not installed and used in accordance with the instructions, it may cause harmful interference with radio communications.

Keor MOD is a category C3 UPS according to the standard EN62040-2

The UPS can be used in commercial and industrial environments; nevertheless, restrictions or adequate countermeasures might be necessary to avoid radio interference.

 **CAUTION**

- The equipment must be maintained and used according to the instructions of this manual.
- The departmental manager must instruct the operating and maintenance personnel on the safe use and maintenance of the equipment.
- Only specifically-trained, highly skilled personnel are allowed access to the equipment in order to perform maintenance. While the maintenance operation is being carried out, signs saying "Maintenance work in progress" must be affixed in the department in such a way that they can be easily seen from any access area.
- The connection of the equipment (and of any accessory devices) must always be perfectly grounded to discharge short-circuit currents and electrostatic voltages. The input voltage must correspond with the value shown on the rating plate. Current adapters must not be used under any circumstances. Pay attention to polarity when connecting.
- Any intervention on the equipment must be done only after it has been disconnected from the power supply network by means of a switch disconnecter and must be locked with an appropriate padlock.
- The UPS must not be turned on if liquid is leaking from the batteries.
- The equipment used for any maintenance operations (pliers, screwdrivers etc.) must be electrically insulated.
- Depositing flammable material near the equipment is strictly forbidden. The equipment should always be locked, and only specifically trained personnel are allowed access to it.
- Do not disable any safety, notification or warning device and do not ignore any alarm, warning message or notice, no matter whether they are generated automatically or represented by plates fixed to the equipment.
- Do not run the equipment with fixed protections not installed (panels etc.).
- In case of breaking, buckling or malfunctioning of the equipment or parts of it, repair or replace immediately.
- For no reason can the structure of the equipment, the devices mounted on it, the operation sequence etc., be modified, manipulated or tampered with in any way, without prior consultation with the Manufacturer.
- When replacing fuses, only use ones of the same type.
- The replacement of the batteries is an operation intended to be carried out by a skilled technician.
- Keep a register in which to enter the date, time, type, performer's name and any other useful information about each and any routine and extraordinary maintenance operation.
- Do not use oils or chemical products for cleaning because they could scratch, corrode or damage certain parts of the equipment.
- The equipment and workplace must be kept completely clean.
- Upon completion of the maintenance operations, before connecting the power supply, carefully check that no tools and/or material of any kind have been left next to the equipment.

INDICATION

The skilled technician must not leave at the disposal of the operator:

- the keys for opening the UPS door;
- the installation and maintenance manual.

2.7 How to proceed in an emergency

The following information are general. For the specific interventions consult the regulations in force in the country where the equipment is installed.

2.7.1 First-aid procedures

When administering first aid, adhere to the company rules and the usual procedures.

2.7.2 Fire procedures

Do not use water to quench fires but just the extinguishers specially designed for putting out fires on electrical equipment.

3. Unpacking and moving

3.1 Visual check

On delivery of the UPS, carefully inspect the packaging and the equipment for any damage that might have occurred during transport. Check there is no damage to the indicator on the outer label reading "Shock Watch".

If there is possible or ascertained damage, immediately inform:

- the transporter;
- the LEGRAND Technical Support Service.

Check that the equipment corresponds with the items indicated in the delivery documentation.

If the UPS must be stored, follow the instructions of Chapter 7.

3.2 Equipment check

The equipment and the relative supplied accessories must be in perfect conditions.

Check that:

- the shipping data (address of the recipient, no. of packages, order no, etc.) correspond to what is contained in the delivery documentation;
- the technical rating plate data on the label applied to the UPS correspond with the material described in the delivery documentation;
- the documentation accompanying the equipment includes the installation and user manuals.

In case of discrepancy, immediately inform the LEGRAND Technical Support Service before commissioning the equipment.

The content of the supply is subject to thorough checking before the shipment. Nonetheless it is always advisable to check that it is complete and in order on receiving the material.

The following list is general:

- 1 UPS (empty cabinet) with keys to close the doors;
- 1 envelope of accessories;
- user manual;
- installation and maintenance manual.

In case of defects and/or missing items, immediately inform the LEGRAND Technical Support Service before commissioning the equipment.

INDICATION

The installation manual must be used and consulted only by skilled technicians.





INDICATION

Power modules and battery drawers to be installed must be bought separately.

3.3 Unpacking

To remove the packaging material, comply with the following procedure:

- bring the UPS to the installation site using a forklift and/or a transpallet with suitable characteristics (see fig. 1);
- remove the plastic film and cardboards protecting the UPS;
- bring down the wooden chute attached to the pallet (see fig. 2)
- loose the screws of the brackets that fix the equipment on the pallet (see fig. 3);
- gently slide by hand the equipment along the chute using the wheels (see fig. 4).

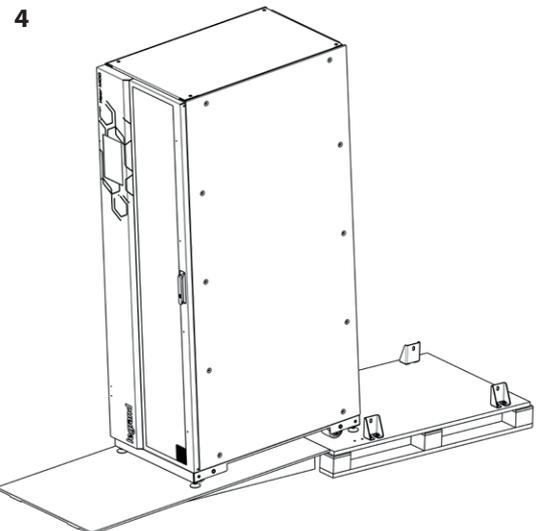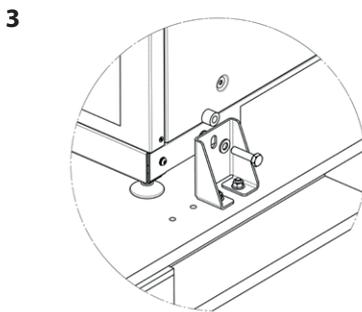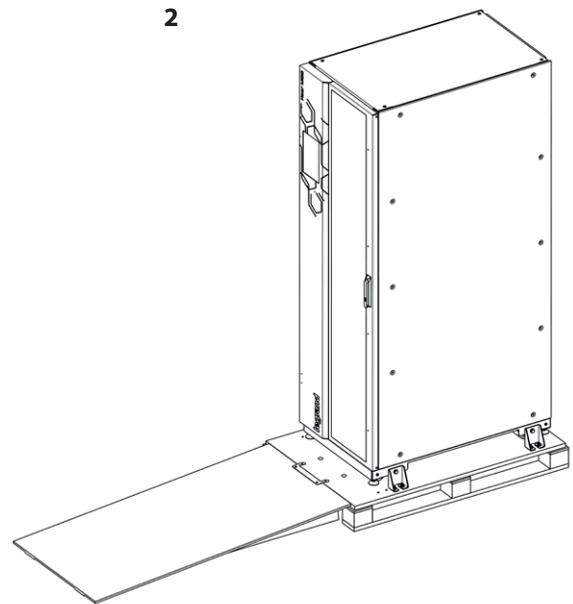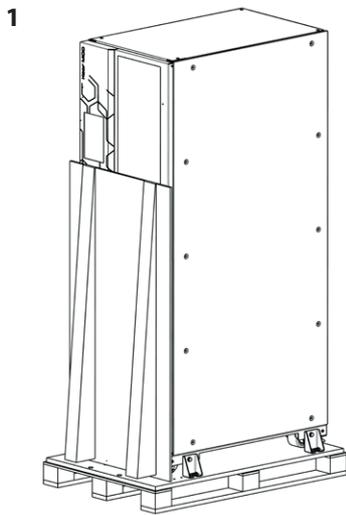

3. Unpacking and moving

3.4 Movement



WARNING

Move the UPS very carefully, lifting it as little as possible and avoiding dangerous swings or falls.

Follow always the directions indicated in the symbols present on the packaging.

The equipment must always be handled by trained and instructed personnel. Comply with the safety regulations in force in your country relative to the usage of lifting equipment and/or accessories.

The Keor MOD UPS has four wheels at the bottom of the cabinet. Before installations and while it is still empty, it can be moved by hand by at least two people.

For any lifting, use a forklift or a transpallet with an adequate carrying capacity, placing the forks in the specific spaces of the base and making sure they come out on the other side by at least twenty centimetres.




CAUTION

Do not move the UPS after the installation or following the insertion of the power modules.

3.5 Positioning constraints

(all the dimensions are in mm)

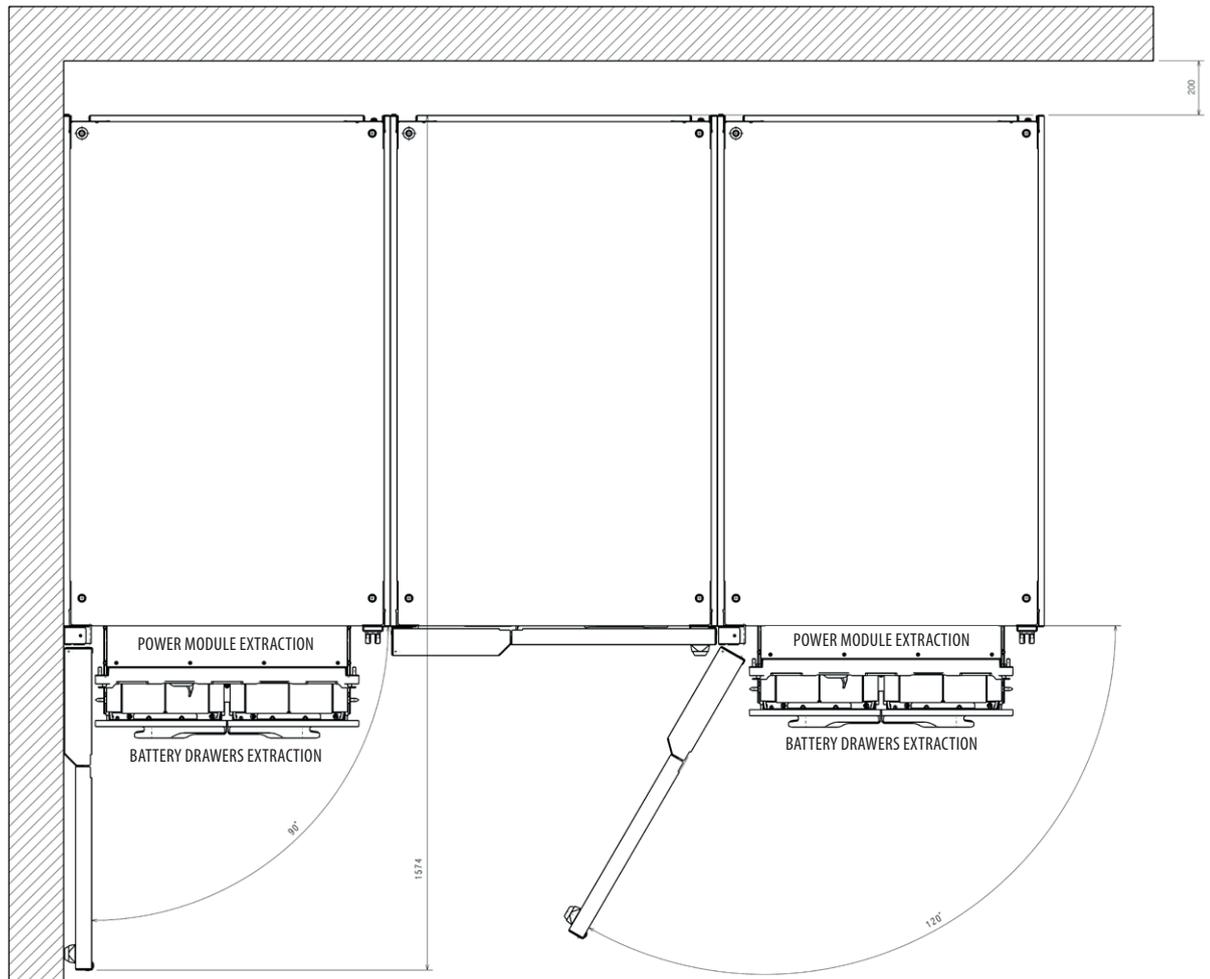

The UPS must be positioned respecting the following conditions:

- do not cover the cooling vents of the power modules and keep a clearance of 20 cm beyond the cabinets real panels;
- keep a clearance of 160 cm on the front to allow the opening of the door;
- temperature and humidity must be within permitted limits;
- fire regulations must be respected;
- the wiring must be simply made;
- front and rear accessibility must be available for assistance or periodic servicing;
- the cooling flow of air must be guaranteed;
- the air conditioning system must be adequately sized;
- dust, corrosive and explosive atmospheres must be absent;
- the installation site must be free of vibration;
- the support surface must be sized for the weight necessary to support the equipment;
- regulate the equipment feet to have perfect perpendicularity and level of the UPS compare with the floor.

To safeguard the batteries as well as possible it is necessary to bear in mind that their average lifetime is strongly influenced by the operating room temperature. Position the UPS in an environment with a temperature range between +20°C (+68°F) and +25°C (+77°F) to guarantee the optimum life of the batteries.

Before proceeding with the installation operations, make sure that there is enough lighting to clearly see every detail. Provide artificial lighting if the natural lighting does not satisfy this requirement.


In case of maintenance operations in places that are not sufficiently well lit, portable lighting systems must be used, avoiding shadows that prevent or reduce visibility on the point where you intend to work or on the surrounding areas.


4. Control panel

 **WARNING**

The control panel allows to change some functional settings of the UPS.
Only a skilled technician (paragraph 2.2.1) is authorized to modify the configuration set during the installation. Wrong settings could lead to injury or material damage to the equipment and the things around it.

The control panel is made up of a 10" touch-screen colored display that is also portrait oriented. It is located on the front door of the UPS.

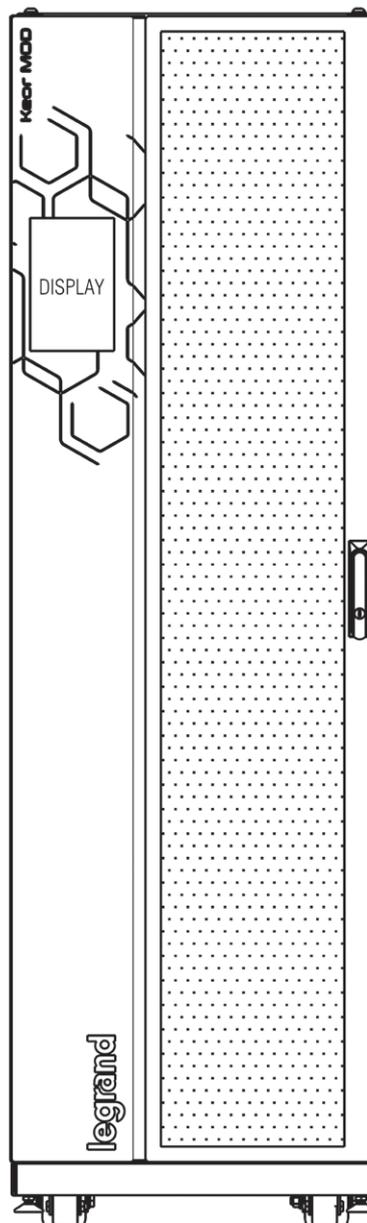

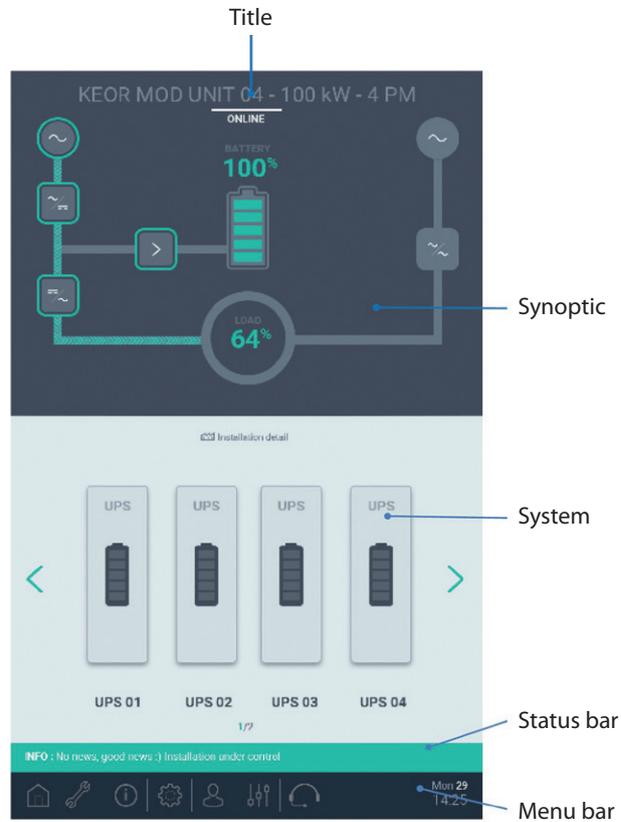


Each screen is made up by five parts:

- TITLE: it describes the element selected in the bottom area (SYSTEM);
 - "System": the page shows the system view;
 - "UPS name": the page shows the UPS view;
 - "UPS name / Module name": the page shows the UPS modules.
- SYNOPTIC (top area): it includes details of the element selected in the bottom area.
- SYSTEM (bottom area): it shows all the UPS that make up the system and each UPS Status Bar. The user can navigate through the modules that build up each UPS.
- UPS STATUS BAR: it shows the status of the UPS installed on the selected cabinet.
- MENU BAR: it contains links to other sections such as the system view, service, settings, log in, traditional menu, date and time and actions control.

4. Control panel

4.1 Synoptic area

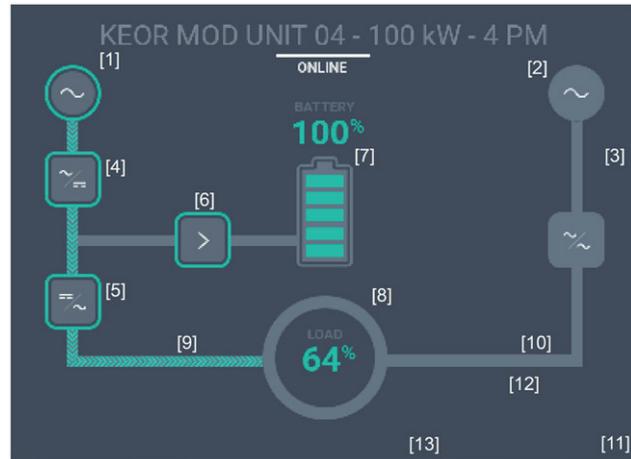

The SYNOPTIC area is strictly connected to the SYSTEM area. It shows the details of what is selected in the bottom area. The SYNOPTIC includes the following blocks:

- [1] - [2] Input
- [3] Bypass
- [4] Rectifier
- [5] Inverter
- [6] Booster-charger
- [7] Batteries
- [8] Output
- [9] Active flow
- [10] Inactive flow
- [11] Fan icon
- [12] Mute alarm icon
- [13] Temperature icon

It is possible to see which blocks are active or not by the graphical flow indication:

	DESCRIPTION
	Active flow
	Inactive flow

When an icon in the SYNOPTIC area is tapped, a popup window is displayed close to the icon. The popup window contains 4 elements:

	DESCRIPTION
	Measurements
	Settings
	Historical data
	Additional info

By tapping on one of these elements, a new popup window with more details is displayed in the SYSTEM area.

4.1.1 Input line

The icons regarding the input line are the following ones:

	INPUT ICON COLOR	DESCRIPTION
	Fixed light white icon and green stroke	The input line is present. Normal behavior.
	Fixed dark grey icon	The input line is not present
	Flashing light yellow icon	Some warnings of medium gravity are occurring
	Flashing light red icon	Some warnings of high gravity are occurring

4. Control panel

4.1.2 Rectifier

The icons regarding the rectifier are the following ones:

	RECTIFIER ICON COLOR	DESCRIPTION
	Fixed light white icon and green stroke	The rectifier is active. Normal behavior.
	Fixed dark grey icon	The rectifier is not active
	Flashing light yellow icon	Some warnings of medium gravity are occurring
	Flashing light red icon	Some warnings of high gravity are occurring


4.1.3 Charger - Booster

The icons regarding the charger and the booster are the following ones:

		CHARGER-BOOSTER ICON COLOR	DESCRIPTION
		Fixed light white icon and green stroke	The charger is active. Normal behavior.
		Fixed dark grey icon	The charger is not active
		Flashing light yellow icon	Some warnings of medium gravity are occurring
		Flashing light red icon	Some warnings of high gravity are occurring

4.1.4 Batteries

The icons regarding the batteries are the following ones:

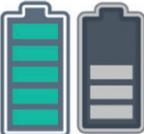	BATTERIES ICON COLOR	DESCRIPTION
	Fixed light grey icon	Normal behavior. The LED bar indicates the level of charge.
	Fixed dark grey icon	The batteries are not present/active
	Flashing light yellow icon	The level of charge is low
	Flashing light red icon	Some warnings of high gravity are occurring

The batteries icon does not open any popup window with data and information.

4.1.5 Inverter

The icons regarding the inverter are the following ones:

	INVERTER ICON COLOR	DESCRIPTION
	Fixed light white icon and green stroke	The rectifier is active.
	Fixed dark grey icon	The rectifier is not active
	Flashing light yellow icon	Some warnings of medium gravity are occurring
	Flashing light red icon	Some warnings of high gravity are occurring

4. Control panel

4.1.6 Bypass

The icons regarding the bypass are the following ones:

	BYPASS ICON COLOR	DESCRIPTION
	Fixed light white icon and green stroke	The bypass is active
	Fixed dark grey icon	The bypass is not active
	Flashing light yellow icon	Some warnings of medium gravity are occurring
	Flashing light red icon	Some warnings of high gravity are occurring

4.2 System area

The icons regarding the UPS are the following ones:

	UPS ICON COLOR	DESCRIPTION
	Light grey	The UPS is active. Normal behavior.
	Dark grey	The UPS is inactive or switched off.
	Yellow	Some warnings are occurring: the corresponding UPS Status Bar becomes yellow and the text explains the situations of warning.
	Red	The UPS has serious problems (alarm): the corresponding UPS Status Bar becomes red and the text explains the situations causing the alarm. In the synoptic area, the involved icons light up red.

4. Control panel

The icons regarding the power modules are the following ones:

	PM ICON COLOR	DESCRIPTION
	Roundish rectangular with a pale grey filling	PM absent
	Roundish rectangular with three fan icons inside	PM present
	Roundish rectangular with a pale blue filling	PM in stand-by
	Roundish rectangular with a pale yellow filling	Warnings related to the PM
	Roundish rectangular with a pale red filling	PM with alarms

4.3 Status bar

The Status Bar is a graphical line that describes the actual status of the UPS.

It can assume different states and sizes:


- Green and thin lane: normal situation (no alarm neither warning)
- Yellow and thin lane with text: warning is occurring. The text explains the warning.
- Red and bigger lane with text: alarm is occurring. The text explains the alarm.

4.4 Menu bar



The menu bar, at the bottom of the interface, contains the section icons related to:

- [1] UPS View
- [2] Diagnostic
- [3] Info
- [4] Settings
- [5] Login
- [6] General Controls
- [7] Help
- [8] Date

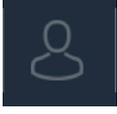	ITEM	DESCRIPTION
	UPS View	Open the UPS view (main screen)
	Diagnostic	Read only info: errors log, historical messages, etc.
	Info	General info of the HW and SW
	Settings	Set the System Mode and its options. It can also show the login popup for some special settings.
	Login	Open the login popup and the keyboard. Two level access: user ID and password
	General Controls	
	Help	Information on how to contact the LEGRAND Technical Support Service

5. Operations

5.1 Switching on the UPS

1. Insert the battery fuses into the appropriate fuse breakers of the external battery cabinets (if present).
2. Press for at least 5 seconds the COLD START button of the SSS interface. The display turns on and the UPS boot starts.
3. The UPS boot ends when the LEDs on the power modules turn to steady blue. Tap on the Setting icon of the menu bar at the bottom of the display:



4. Provide the mains supply to the UPS by closing the external mains input/bypass input disconnectors (ON position).
5. Tap on the tab "System". Then choose the item "System Power" and select ON to turn ON the UPS.
6. The LEDs on the power modules turn to steady yellow while they are powered from the batteries. When they are powered from the mains and the UPS is on-line, the LEDs turn to steady green.
7. Provide the power supply to the load by closing the external output disconnectors (ON position).

5.2 Setting the UPS in forced bypass mode

1. Tap on the Setting icon of the menu bar at the bottom of the display



2. Check on the tab "System" that the item "Bypass Enable" is set to YES. If not, tap on the item and enable the bypass.
3. Tap on the item "Bypass Forced Mode" and set it to YES. The LEDs of the PM blink fast in orange.
4. To exit, tap on the item "Bypass Forced Mode" on the "System" tab. Set it to NO. The LEDs of the PM turn to steady green.

5.3 Switching off the UPS

1. Tap on the Setting icon of the menu bar at the bottom of the display.



2. Tap on the tab "System" and select OFF on the item "System Power" to turn OFF the UPS.
3. The LEDs on the power modules turn to steady blue when they are in stand-by mode and the UPS is no longer supplying the load.

DANGER

In this stand-by condition there are still hazardous voltages on the UPS.

After the removal of power from the UPS, the capacitors discharge time inside the power modules is 40 minutes. It is forbidden to operate inside the power modules before this time has elapsed.

To disconnect the UPS from all sources of supply:

- open the external mains input/bypass input disconnectors (ON position);
- open all the fuse breakers of the external battery cabinets (if present);
- remove at least one battery drawer for every shelf present to interrupt the battery string.

6. Installation and maintenance



DANGER

INSTALLATION and ORDINARY MAINTENANCE operations must be carried out only by SKILLED TECHNICIANS (paragraph 2.2.1).

EXTRAORDINARY MAINTENANCE operations must be carried out only by LEGRAND TECHNICAL SUPPORT SERVICE.

6.1 Installation

The operator (paragraph 2.2.2) is not authorized to install and connect electrically the UPS. These operations are the sole preserve of a skilled technician (paragraph 2.2.1) who must follow the instructions addressed to him in the installation and maintenance manual.



DANGER

The operator is not authorized to carry out the activities listed in the installation and maintenance manual.

LEGRAND declines all liability for any injury or damage caused by activities carried out differently from the instructions written in this manual or by a skilled technician who does not follow the requirements written in the installation and maintenance manual.

6.2 Preventive maintenance

The UPS does not contain parts for preventative maintenance by the operator.

The operator must regularly perform:

- a general external cleaning;
- a check to verify there is no alarm indication on the display;
- a check to verify the correct functioning of the ventilating fans on each power module.

6.3 Periodical checks

The correct functioning of the UPS must be guaranteed by periodical maintenance inspections. These are essential to safeguard the reliability of the equipment.

These inspections should also be made to determine if components, wiring, and connections exhibit evidence of overheating.



WARNING

The periodical checks involve operations inside the UPS in presence of dangerous voltages. Only maintenance personnel trained by LEGRAND are authorized to intervene.

6.4 Ordinary maintenance

Contact a skilled technician if it is necessary to replace or add power modules, battery drawers or external battery cabinets.

6.5 Extraordinary maintenance

Contact the LEGRAND Technical Support Service if there are failures that require the access to internal parts of the UPS.

7. Warehousing



DANGER

All storage operations must be carried out only by a **SKILLED TECHNICIAN** (paragraph 2.2.1)



DANGER

A SKILLED TECHNICIAN must check that there is no voltage present before disconnecting the cables. All the battery isolator switches on the UPS and on the EBC must be open.

All the battery isolator switches on the UPS and on the external battery cabinets must be open. The battery drawers of the UPS and of the external battery cabinet (if present) must be removed.

7.1 UPS

The UPS must be stored in an environment with a room temperature between -20°C (-4°F) and +50°C (+122°F) and humidity less than 90% (not condensing).

7.2 Batteries

It is possible to store batteries without recharging them in the following conditions:

- up to 6 months at +20°C (+68°F);
- up to 3 months at +30°C (+86°F);
- up to 2 months at +35°C (+95°F).



CAUTION

Batteries must never be stored if partially or totally discharged.

LEGRAND is not liable for any damage or bad functioning caused to the UPS by wrong warehousing of the batteries.

8. Dismantling



DANGER

Dismantling and disposal operations must be carried out only by a SKILLED TECHNICIAN (paragraph 2.2.1). The instructions in this chapter are to be considered indicative: in every country there are different regulations regarding the disposal of electronic or hazardous waste such as batteries. It is necessary to strictly adhere to the standards in force in the country where the equipment is used. Do not throw any component of the equipment in the ordinary rubbish.

8.1 Battery disposal

Batteries must be disposed of in a site intended for the recovery of toxic waste. Disposal in the traditional rubbish is not allowed.

Apply to the competent agencies in your countries for the proper procedure.



Pb



WARNING

A battery may constitute a risk of electric shock and high short-circuit current. When working on batteries, the prescriptions indicated in chapter 2 must be adhered to.

8.2 UPS dismantling

The dismantling of the UPS must occur after the dismantling of the various parts it consists of.

For the dismantling operations, it is necessary to wear the Personal Protective Equipment mentioned in paragraph 2.3. Sub-divide the components separating the metal from the plastic, from the copper and so on according to the type of selective waste disposal in the country where the equipment is dismantled.

If the dismantled components must be stored before their disposal, be careful to keep them in a safe place protected from atmospheric agents to avoid soil and groundwater contamination.

8.3 Electronic component dismantling

For the disposal of electronic waste, it is necessary to refer to the relevant standards.



This symbol indicates that in order to prevent any negative effects on the environment and on people, this product should be disposed of separately from other household waste, by taking it to authorised collection centres, in accordance with the EU countries local waste disposal legislations. Disposing of the product without following local regulations may be punished by law. It is recommended to check that this equipment subject to WEEE legislations in the country where it is used.

9. Technical data

Main features

	Keor MOD 25	Keor MOD 50	Keor MOD 75	Keor MOD 100	Keor MOD 125	Keor MOD 150	Keor MOD 175	Keor MOD 200	Keor MOD 225	Keor MOD 250
Nominal Power (kVA)	25	50	75	100	125	150	175	200	225	250
Active Power (kW)	25	50	75	100	125	150	175	200	225	250
Number of power modules	1	2	3	4	5	6	7	8	9	10
Technology	online, double conversion VFI-SS-111 (EN62040-3)									
IN/OUT configuration	Three-phase / Three-phase									
Dual Input	Available on both UPS empty cabinets (3 104 80 and 3 104 81)									
UPS system	Modular, expandable and redundant									
Neutral system	Neutral passing straight from input to output (not isolated)									
Bypass	Automatic (static and electromechanical) Manual (for maintenance)									
Overvoltage category	OVC II									

Input electrical characteristics

	Keor MOD 25	Keor MOD 50	Keor MOD 75	Keor MOD 100	Keor MOD 125	Keor MOD 150	Keor MOD 175	Keor MOD 200	Keor MOD 225	Keor MOD 250
Maximum input current (A)	47	94	141	188	235	282	329	376	423	470
Input voltage (V)	400 + 15% - 20% (3F+N+PE)									
Input frequency (Hz)	50 / 60 ± 2% 50 / 60 ± 14 % (autosensing and/or selectable by the user)									
Input Power Factor	> 0.99									
Total harmonic distortion of the input current	THDi < 3% (at full load)									
Icp Prospective short-circuit current (kA)	10									

Output electrical characteristics (normal mode)

	Keor MOD 25	Keor MOD 50	Keor MOD 75	Keor MOD 100	Keor MOD 125	Keor MOD 150	Keor MOD 175	Keor MOD 200	Keor MOD 225	Keor MOD 250
Maximum output current (A)	36	72	108	144	180	216	252	288	324	360
Output voltage (V)	380/400/415 ± 1%									
Output frequency (Hz)	50 / 60 (selectable by the user)									
Range of the output frequency	If synchronized with the bypass frequency: adjustable range from ±1% to ±14% If not synchronized (free run): ± 0.1 Hz									
Crest factor admitted on the output current	3:1									
Total harmonic distortion of the output voltage	THDv < 0.5% (at full linear load) THDv < 1% (at full non-linear load)									
Efficiency in Normal Mode	up to 96.5%									
Efficiency in Eco Mode	99%									
Overload capacity	125% for 10 minutes without automatic bypass intervention 150% for 60 seconds without automatic bypass intervention									

Output electrical characteristics (battery mode)

	Keor MOD 25	Keor MOD 50	Keor MOD 75	Keor MOD 100	Keor MOD 125	Keor MOD 150	Keor MOD 175	Keor MOD 200	Keor MOD 225	Keor MOD 250
Output voltage (V)	380/400/415 ± 1%									
Output frequency (Hz)	50 / 60 Hz ± 1%									
Total harmonic distortion of the output voltage	THDv < 0.5% (at full linear load) THDv < 2.5% (at full non-linear load)									
Overload capacity	115% for 10 minutes									
Shortcircuit	I _{cc} = 3 I _n for 50 ms I _{cc} = 1.45 I _n for 1 sec									

9. Technical data

Batteries and battery charger characteristics

	Keor MOD 25	Keor MOD 50	Keor MOD 75	Keor MOD 100	Keor MOD 125	Keor MOD 150	Keor MOD 175	Keor MOD 200	Keor MOD 225	Keor MOD 250
Nominal battery voltage (V)	± 288 (48 blocks)									
Battery voltage range (V)	± 264 to ± 312 (44-52 blocks)									
Battery wiring	Internal batteries: string made up of 2 drawers (composed by 4 blocks of 6 batteries)					Only external batteries				
Battery type	VRLA					-				
Unitary capacity	12 Vdc - 9 Ah 12 Vdc - 11 Ah					-				
Type of battery charger	High performance PWM, one for each power module Smart charge technology (3-stage advanced cycle)									
Maximum recharge current (A)	5 (for each power module installed)									
Independent battery configuration	maximum 5 sets of independent batteries (configurable as common or separate units)									

Features

	Keor MOD 25	Keor MOD 50	Keor MOD 75	Keor MOD 100	Keor MOD 125	Keor MOD 150	Keor MOD 175	Keor MOD 200	Keor MOD 225	Keor MOD 250
Display	10-inch rotating colour touchscreen									
Communication ports	2 x RS485 ports (one for external accessories) 10 input floating contacts 8 output floating contacts 1 interface slot USB host port									
Protections	Backfeed protections (NC/NO auxiliary contact) Emergency Power Off (EPO) Electronic against overloads, short-circuit and excessive battery discharge Block of functions due to the end of autonomy In-rush limiter on start up Internal battery circuit fuses (for internal battery drawers)									
Remote management	available									

Mechanical characteristics

	Keor MOD 25	Keor MOD 50	Keor MOD 75	Keor MOD 100	Keor MOD 125	Keor MOD 150	Keor MOD 175	Keor MOD 200	Keor MOD 225	Keor MOD 250
Empty power cabinet	3 104 80					3 104 81				
Net weight (kg)	205					190				
Dimensions H x W x D (mm)	1990 x 600 x 970									
Installable Power modules PM25 3 106 75	up to 5					up to 10				
PM25 net weight (kg)	22,5									
Installable battery drawers	up to 10					-				
Weight of one battery block (kg)	17 (9Ah batteries) 19,2 (11Ah batteries)					-				
Weight of one battery drawer with four battery blocks (kg)	72 (9Ah batteries) 81 (11Ah batteries)					-				


Environmental conditions

	Keor MOD 25	Keor MOD 50	Keor MOD 75	Keor MOD 100	Keor MOD 125	Keor MOD 150	Keor MOD 175	Keor MOD 200	Keor MOD 225	Keor MOD 250
Operating temperature (°C)	0 ÷ +40									
Relative humidity during operation	0% ÷ 95% non-condensing									
Storage temperature (°C)	-20 ÷ +50 (excluding batteries)									
Noise level at 1 metre (dBA)	50 ÷ 65									
Ingress Protection Marking	IP 20									
Pollution degree	PD2									
Environmental category (EN 60721-3-3)	class 3K2									
Operating height	up to 1000 metres above sea level without derating									
Heat dissipation with full load (BTU/h)	3560	7120	10680	14240	17800	21360	24920	28480	32040	35600

9. Technical data

Reference directives and standards

Safety	2014/35/EU Directive EN 62040-1
EMC	2014/30/EU Directive EN 62040-2
Performance and test requirements	EN 62040-3

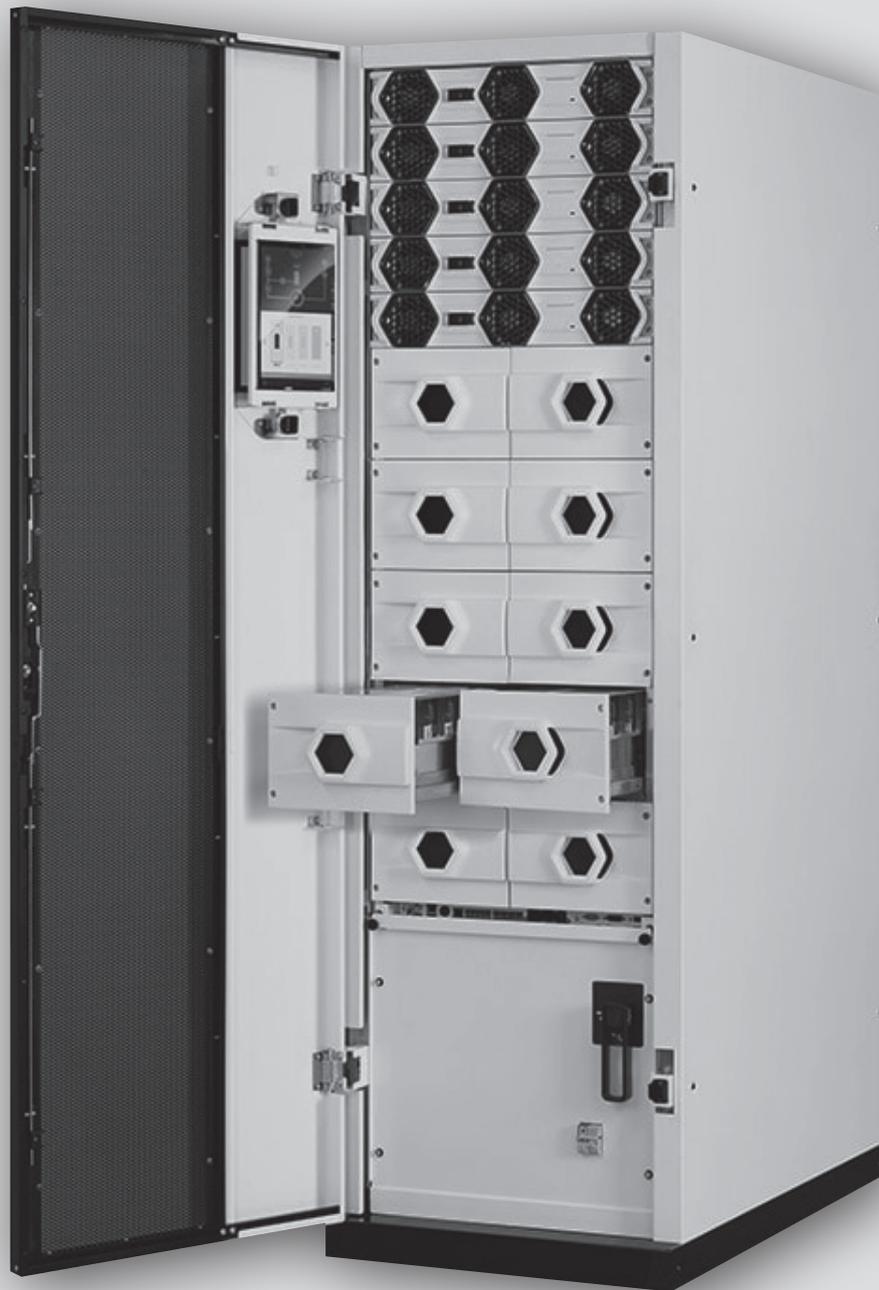

Keor MOD

EN

ENGLISH

3

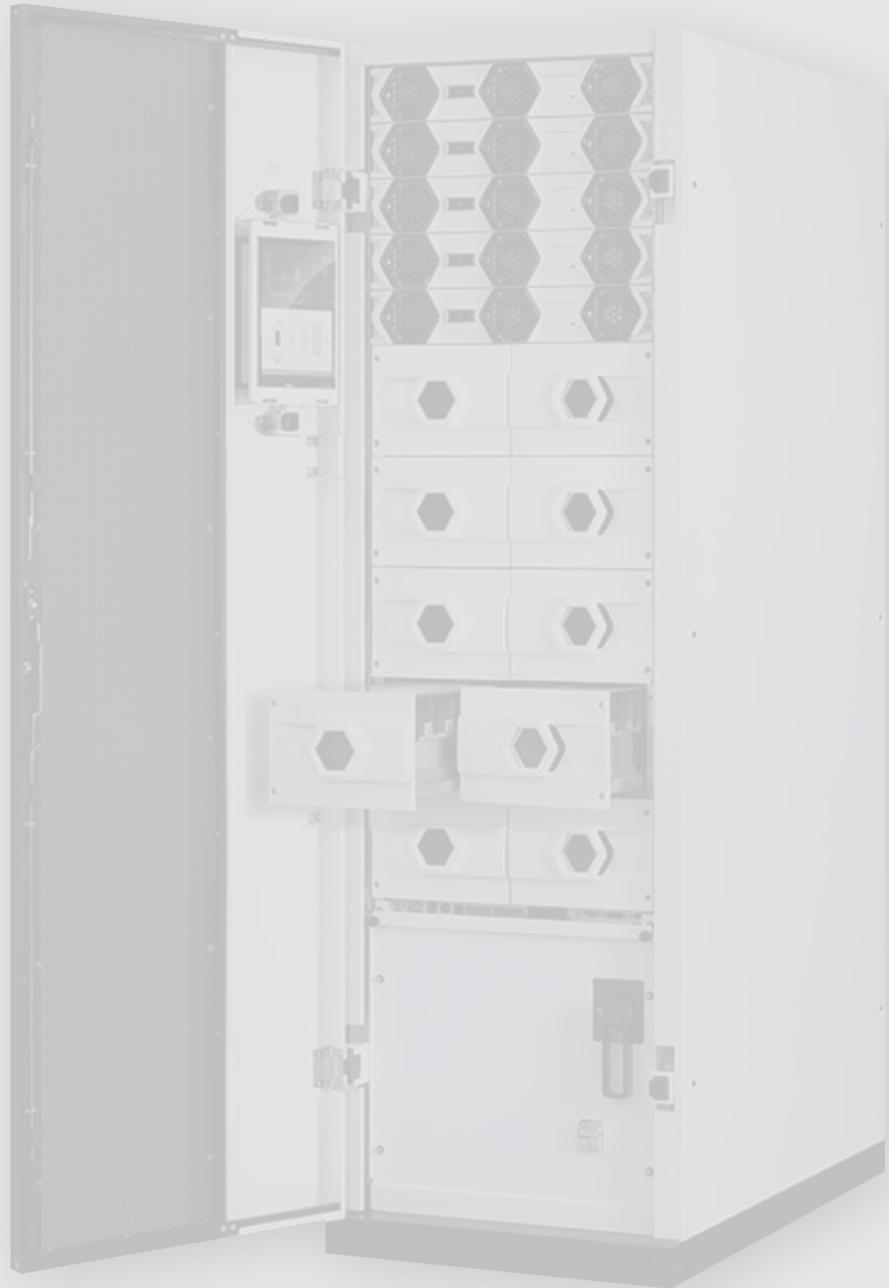


Table of Contents

1	Introduction	5
1.1	Purpose of the manual	5
1.2	Symbols in the manual	5
1.3	Where and how to keep the manual	5
1.4	Update of the manual	6
1.5	Manufacturer's liability and guarantee	6
1.5.1	Guarantee terms	6
1.5.2	Extension of the guarantee and maintenance contracts	7
1.6	Copyright	7
2.	Regulatory and safety requirements	8
2.1	General notes	8
2.2	Definitions of "Skilled Technician" and "Operator"	8
2.2.1	Skilled Technician	8
2.2.2	Operator	8
2.3	Personal Protective Equipment	8
2.4	Hazard signs in the workplace	9
2.5	Signs on the equipment	9
2.6	General warnings	10
2.7	How to proceed in an emergency	11
2.7.1	First-aid procedures	11
2.7.2	Fire procedures	11
3.	Transportation and placement	12
3.1	Visual check	12
3.2	Equipment check	12
3.3	Transportation	13
3.4	Unpacking	14
3.5	Placement	15
4.	Installation	17
4.1	Safety regulations	17
4.2	Electrical connections	17
4.2.1	Protective devices	18
4.2.2	Disassembly of the distribution panel	18
4.2.3	Earthing connection	23
4.2.4	Cable fastening	25
4.2.5	Backfeed protection	34
4.2.6	Input cables installation	37
4.2.7	Bypass cables installation	43
4.2.8	Output cables installation	47
4.2.9	Battery cables installation	51
4.2.10	Parallel system	60
4.3	Power modules installation	67
4.4	Battery drawers installation	69
4.5	SSS interface	75
4.5.1	Emergency Power Off (EPO)	76

Table of Contents

5. Configuration and start-up	77
5.1 Pre-start-up checks	77
5.2 Start-up procedure	77
5.3 Turning off the UPS	83
6. Maintenance	84
6.1 Preventive maintenance	84
6.2 Periodical checks	84
6.3 Ordinary maintenance	85
6.3.1 Hot-swap procedure for the replacement of power modules	85
6.3.2 Installation/replacement of power modules with the UPS in maintenance bypass mode	88
6.3.2.1 Setting the UPS in maintenance bypass mode	88
6.3.2.2 Installation/replacement of power modules	90
6.3.2.3 Exit the UPS from the maintenance bypass mode	92
6.3.3 Removal of the SSS drawer	93
6.4 Battery drawers replacement	94
6.4.1 Installation/replacement of battery drawers with UPS in on-line mode	94
6.4.2 Installation/replacement of battery drawers with UPS in maintenance manual bypass	96
6.5 Replacing the fuses and surge arrester (DIN rail)	97
6.6 Extraordinary maintenance	98
7. Warehousing	99
7.1 UPS	99
7.2 Batteries	99
8. Dismantling	100
8.1 Battery disposal	100
8.2 UPS dismantling	100
8.3 Electronic component dismantling	100
9. Mechanical characteristics	101
9.1 Cabinets	101
9.2 Power module PM25	106
9.3 Battery drawer	107
9.4 Battery block	108
10. Technical data	109
11. Tables	113

1. Introduction



INDICATION

The instructions in this manual are intended for a **SKILLED TECHNICIAN** (paragraph 2.2.1)

1.1 Purpose of the manual

The purpose of this manual is to provide the skilled technician (see paragraph 2.2.1) with instructions for safely installing the Keor MOD UPS, also called "equipment" in the rest of the manual and carry out ordinary maintenance procedures.

Extraordinary maintenance operations are not dealt with because they are the sole preserve of the LEGRAND Technical Support Service.

The reading of this manual is essential but does not substitute the skill of technical personnel who must have received adequate preliminary training.

The intended use and configurations envisaged for the equipment as shown in this manual are the only ones allowed by the Manufacturer.

Any other use or configuration must be previously agreed with the Manufacturer in writing and, in this case, the written agreement will be attached to the installation and user manuals.

This manual also refers to laws, directives and standards that the skilled technician is required to be aware of and consult.

The original text of this publication, drafted in English, is the only reference for the resolution of disputes of interpretation linked to translations into other languages.

1.2 Symbols in the manual

Some operations are shown in graphic symbols that draw the attention of the reader to the danger or the importance they imply:



DANGER

This indication shows a danger entailing a high degree of risk that, if not avoided, will lead to death or serious injury or considerable damage to the equipment and things around it.



WARNING

This indication shows a danger entailing a medium degree of risk that, if not avoided, could lead to death or serious injury or considerable damage to the equipment and the things around it.



CAUTION

This indication shows a danger entailing a low level of risk that, if not avoided, could lead to minor or moderate injury or material damage to the equipment and the things around it.

INDICATION

This symbol indicates important information which should be read carefully.

1.3 Where and how to keep the manual

This manual must be kept in a safe, dry place and must always be available for consultation exclusively by the skilled technician.

It is recommended to make a copy of it and file it away.

If information is exchanged with the Manufacturer or the authorized assistance personnel, it is essential to refer to the equipment's rating plate data and serial number.

INDICATION

The manuals provided with the equipment are an integral part of it and must therefore be kept for its entire lifetime. In case of need (for example in case of damage that even partially compromises its consultation) the skilled technician is required to get a new copy from the Manufacturer, quoting the publication code on the cover.

1. Introduction

1.4 Update of the manual

The manual reflects the state of the art when the equipment was put onto the market. The publication conforms to the directives current on that date. The manual cannot be considered inadequate when new standards come into force or modifications are made to the equipment.

Any addition to the manual the Manufacturer considers appropriate to send to the users, must be kept together with the manual of which they will become an integral part.

The version of the manual updated to its latest release is available on the Internet at <http://www.ups.legrand.com>

1.5 Manufacturer's liability and guarantee

The skilled technician and the operator shall scrupulously comply with the precautions and installation instructions indicated in the manuals. They must:

- always work within the operating limits of the equipment;
- always carry out constant and careful maintenance through a skilled technician who complies with all the procedures indicated in the installation and maintenance manual.

The Manufacturer declines all indirect or direct responsibility arising from:

- assembly and cabling made by personnel not qualified and authorized by LEGRAND and not fully qualified according to national standards to work on equipment presenting electrical hazards;
- assembly and cabling made without using safety equipment and tools required by national safety standards;
- failure to observe the installation and maintenance instructions and use of the equipment which differs from the specifications in the manuals;
- use by personnel who have not read and thoroughly understood the content of the user manual;
- use that does not comply with the specific standards used in the country where the equipment is installed;
- modifications made to the equipment, software, functioning logic unless they have been authorized by the Manufacturer in writing;
- repairs that have not been authorized by the LEGRAND Technical Support Service;
- damage caused intentionally, through negligence, by acts of God, natural phenomena, fire or liquid infiltration;
- damage caused by the use of batteries and protections not specified in the manuals;
- damage caused by improper unloading and transportation after delivery of the equipment;
- accidents caused by a wrong assembly of the safety protections or due to the lack of application of the safety labels specified in the installation manual.

The transfer of the equipment to others also requires to hand over all the manuals. Failure to do it will automatically nullify any right of the buyer, including the terms of the guarantee where applicable.

If the equipment is sold to a third party in a country where a different language is spoken, the original owner shall be responsible for providing a faithful translation of this manual in the language of the country where the equipment will be used.

1.5.1 Guarantee terms

The guarantee terms may vary depending on the country where the UPS is sold. Check the validity and duration with LEGRAND's local sale representative.

If there should be a fault in the product, contact the LEGRAND Technical Support Service which will provide all the instructions on what to do.

Do not send anything back without LEGRAND's prior authorization.

The guarantee becomes void if the UPS has not been brought into service by a properly trained skilled technician qualified and authorized by LEGRAND (see paragraph 2.2.1).

If during the guarantee period the UPS does not conform to the characteristics and performance laid down in this manual, LEGRAND at its discretion will repair or replace the UPS and relative parts.

All the repaired or replaced parts will remain LEGRAND's property.

LEGRAND is not responsible for costs such as:

- losses of profits or earnings;
- losses of equipment, data or software;
- claims by third parties;
- any damage to persons or things due to improper use, unauthorized technical alterations or modifications;
- any damage to persons or things due to installations where the full compliance with the standard regulating the specific usage applications have not been guaranteed.

1.5.2 Extension of the guarantee and maintenance contracts

The standard guarantee can be consolidated in a single extension contract (maintenance contract).

Once the guarantee period has passed, LEGRAND is available for giving a technical assistance service able to meet all requirements, maintenance agreements, 24/7 availability and monitoring.

Please, contact the LEGRAND Technical Support Service for further information.

1.6 Copyright

The information contained in this manual cannot be disclosed to any third party. Any partial or total duplication of the manual by photocopying or other systems, including electronic scanning, which is not authorized in writing by the Manufacturer, violates copyright conditions and may lead to prosecution.

LEGRAND reserves the copyright of this publication and prohibits its reproduction wholly or in part without previous written authorization.

2. Regulatory and safety requirements



DANGER

Before carrying out any operation on the equipment, it is necessary to read the entire manual carefully, especially this chapter.

Look after this manual carefully and consult it repeatedly during installation and maintenance by a skilled technician.

2.1 General notes

The equipment has been made for the applications given in the manual. It may not be used for purposes other than those for which it has been designed, or differently from those specified in this manual.

The various operations must be carried out according to the criteria and the chronology described in this manual.

2.2 Definitions of “Skilled Technician” and “Operator”

2.2.1 Skilled Technician

The professional that will carry out the installation, start up and ordinary maintenance is called “Skilled Technician”.

This definition refers to people qualified by LEGRAND who have the specific technical qualification and are aware of the method of installing, assembling, repairing, bringing online and using the equipment safely.

In addition to the requirements listed in the paragraph below for a general operator, the Skilled Technician is qualified according to national safety standards to work under dangerous electrical voltage and uses the personal protective equipment required by national safety standards for all the operations indicated in this manual (see the examples listed in paragraph 2.3).

INDICATION

The safety manager is responsible for protection and company risks prevention according to what is indicated in European directives 2007/30/EC and 89/391/EEC regarding safety in the workplace.

The safety manager must ensure that all the people working on the equipment have received all the instructions concerning them in the manual, especially those contained in this chapter.

2.2.2 Operator

The professional assigned to the equipment for normal use is called “Operator”.

This definition refers to people who know how to operate the equipment defined in the user manual and have the following requisites:

1. technical education, which enables them to operate according to safety standards in relation to the dangers linked to the presence of electric current;
2. training on the use of personal protective equipment and basic first aid interventions.

The company safety manager, in choosing the person (operator) who uses the equipment, must consider

- the person's work fitness according to the laws in force;
- the physical aspect (not disabled in any way);
- the psychological aspect (mental stability, sense of responsibility);
- the educational background, training and experience;
- the knowledge of the standards, regulations and measures for accident prevention.

He shall also provide training in such a way as to provide thorough knowledge of the equipment and its component parts.

Some typical activities the operator is expected to carry out are:

- the use of the equipment in its normal functioning state and the restore of the functioning after it shuts down;
- the adoption of the necessary provisions for maintaining the quality performance of the UPS;
- the cleaning of the equipment;
- cooperation with personnel responsible for ordinary maintenance activities (Skilled Technicians).

2.3 Personal Protective Equipment



DANGER

The UPS poses a considerable risk of electric shocks and a high short circuit current. During installation, use and maintenance operations, the equipment mentioned in this section must be used.

People responsible for operating this equipment and/or passing close to it must not wear garments with flowing sleeves, nor may laces, belts, bracelets or other metal pieces that might cause a danger.

The following list sum up the minimum Personal Protective Equipment to wear always. Additional requirements may be needed according to national safety standards.

-  Anti-accident and non-sparking shoes with rubber sole and reinforced toe
-  Protective gloves for handling operations
-  Isolated rubber gloves for operations of connection and work under hazardous voltage
-  Protective garments for electrical work
-  Protective face and head shield
-   Isolated tools

INDICATION

The skilled technician must work on electrical insulated carpet and he must not wear any kind of metal objects like watches, bracelets, etc.

2.4 Hazard signs in the workplace

The following signs must be exhibited at all points of access to the room where the equipment is installed:

-  Electric current
This sign indicates the electrical live parts.
-  How to proceed in an emergency
Do not use water to quench fires but just the extinguishers specially designed for putting out fires in electrical equipment.
-  No smoking
This sign indicates that smoking is not allowed.

2.5 Signs on the equipment

Displayed on the UPS are explanatory plates that can vary depending on the country the equipment is intended for and constructional standards applied.

Make sure the instructions are adhered to. Removing these plates and working in a way that differs from what written there, is strictly prohibited.

The plates must always be clearly read and they must be cleaned periodically.

If a plate deteriorates and/or it is no longer legible, even partially, the Manufacturer must be contacted for another one.

CAUTION

The plates must not be removed or covered. Signs in different languages are provided along with the equipment to replace those in English. No other plates may be affixed to the equipment without the Manufacturer's prior written authorisation

2. Regulatory and safety requirements

WARNING

Potential risks can be drastically reduced by wearing the Personal Protective Equipment listed in this chapter, which are indispensable. Always operate with due care around dangerous areas marked by the appropriate warning notices on the equipment.

2.6 General warnings

DANGER

The UPS works with dangerous voltages. Only skilled technicians qualified and authorized by LEGRAND must perform the installation and ordinary maintenance operations. No part of the UPS can be repaired by the operator. Extraordinary maintenance operations must be carried out by LEGRAND Technical Support Service personnel.

DANGER

Before beginning any installation and/or maintenance operation, make sure that all the DC and AC power sources are disconnected.

The UPS and the external battery cabinet, if present, must be installed with an earth connection to avoid high leakage currents. First connect the earthing cable.

Check during each installation and/or maintenance operation the continuity of the earthing system.

DANGER

The UPS is powered by its own DC energy source (batteries). The output terminals may have a dangerous voltage even if the UPS is not connected to the AC power network.

Disconnect all battery drawers and external battery cabinets before performing any installation and/or maintenance operation.

WARNING

A battery can present a risk of electrical shock and burns by high short-circuit current. Failed batteries can reach temperatures that exceed the burn thresholds for touchable surfaces. The following precautions should be observed when working on batteries:

- a) remove watches, rings or other metal objects.
- b) use tools with insulated handles.
- c) wear rubber gloves and boots.
- d) do not lay tools or metal parts on top of batteries.
- e) disconnect the charging source prior to connecting or disconnecting battery terminals.
- f) determine if battery is inadvertently grounded. If inadvertently grounded, remove source from ground.
Contact with any part of a grounded battery can result in electrical shock. The likelihood of such shock can be reduced if such grounds are removed during installation and maintenance (applicable to equipment and remote battery supplies not having a grounded supply circuit).
- g) never leave live cable terminals without an insulated protection.
- h) When replacing batteries, replace with the same type and number of batteries or battery packs. There is the risk of explosion if batteries are replaced by an incorrect type.

Do not dispose of batteries in a fire. The batteries may explode.

Do not open or mutilate batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic. The batteries installed inside the cabinet must be disposed of correctly. For the disposal requirements refer to local laws and relevant standards.

INDICATION

The UPS functions with TT, IT, TN-C and TN-S systems. The output neutral status is the same as the input neutral status. When the output load needs a different neutral status, it is necessary to place downstream of the UPS a suitably scaled isolation transformer that must be protected in compliance with the standards in force.

CAUTION

Do not open the battery fuse holders while the UPS is powering the loads in battery mode.

 **WARNING**

To reduce the risk of fire or electric shock, the UPS must work in closed, clean environments with controlled temperature and humidity. It must be kept away from inflammable liquids and corrosive substances. The room temperature must not be above +40°C (+104°F) and the relative humidity must be a maximum of 95% not condensing.

 **WARNING**

Keor MOD is a category C3 UPS according to the standard EN62040-2.

The UPS is a product for commercial and industrial application in the second environment – installation restrictions or additional measures may be needed to prevent disturbances.

INDICATION

When the UPS is used for special applications such as life support systems or any other application where a product failure is likely to cause substantial harm to people, it is mandatory to contact LEGRAND to confirm the possibility of the equipment to meet the requested level of safety, performance, reliability and compliance with applicable laws, regulations and specifications.

 **CAUTION**

- While maintenance operations are being carried out, "Maintenance work in progress" signs must be affixed in the department in such a way that they can be easily seen from any access area.
- The connection of the equipment (and of any accessory devices) signs must always be perfectly grounded to discharge short-circuit currents and electrostatic voltages. The input voltage must correspond with the value shown on the rating plate. Current adapters must not be used under any circumstances. Pay attention to polarity when connecting.
- Any intervention on the equipment must be done only after it has been disconnected from the power supply network by means of a switch disconnecter and must be locked with an appropriate padlock.
- The UPS must not be turned on if liquid is leaking from the batteries.
- Depositing flammable material near the equipment is strictly forbidden. The equipment should always be locked, and only specifically trained personnel are allowed access to it.
- Do not disable any safety, notification or warning device and do not ignore any alarm, warning message or notice, no matter whether they are generated automatically or represented by plates fixed to the equipment.
- Do not run the equipment with fixed protections not installed (panels etc.).
- In case of breaking, buckling or malfunctioning of the equipment or parts of it, repair or replace immediately.
- When replacing fuses, only use ones of the same type.
- The replacement of the batteries is an operation intended to be carried out by a skilled technician.
- Keep a register in which to enter the date, time, type, performer's name and any other useful information about each and any routine and extraordinary maintenance operation.
- Do not use oils or chemical products for cleaning because they could scratch, corrode or damage certain parts of the equipment.
- The equipment and workplace must be kept completely clean.
- Upon completion of the maintenance operations, before connecting the power supply, carefully check that no tools and/or material of any kind have been left next to the equipment.

INDICATION

The skilled technician must not leave at the disposal of the operator:

- the keys for opening the UPS door;
- the installation and maintenance manual.

2.7 How to proceed in an emergency

The following information are general. For the specific interventions consult the regulations in force in the country where the equipment is installed.

2.7.1 First-aid procedures

When administering first aid, adhere to the company rules and the usual procedures.

2.7.2 Fire procedures

Do not use water to quench fires but just the extinguishers specially designed for putting out fires on electrical equipment.

3. Transportation and placement

3.1 Visual check

On delivery of the UPS, carefully inspect the packaging and the equipment for any damage that might have occurred during transport. Check there is no damage to the indicator on the outer label reading "Shock Watch".

If there is possible or ascertained damage, immediately inform:

- the transporter;
- the LEGRAND Technical Support Service.

Check that the equipment corresponds with the items indicated in the delivery documentation.

If the UPS must be stored, follow the instructions of Chapter 7.

3.2 Equipment check

The equipment and the relative supplied accessories must be in perfect conditions.

Check that:

- the shipping data (address of the recipient, no. of packages, order no, etc.) correspond to what is contained in the delivery documentation;
- the technical rating plate data on the label applied to the UPS correspond with the material described in the delivery documentation;
- the documentation accompanying the equipment includes the installation and user manuals.

In case of discrepancy, immediately inform the LEGRAND Technical Support Service before commissioning the equipment.

The content of the supply is subject to thorough checking before the shipment. Nonetheless it is always advisable to check that it is complete and in order on receiving the material.

The following list is general:

- 1 UPS (empty cabinet) with keys to close the doors;
- 1 accessory box;
- user manual;
- installation and maintenance manual.

In case of defects and/or missing items, immediately inform the LEGRAND Technical Support Service before commissioning the equipment.

INDICATION

The installation manual must be used and consulted only by Skilled Technicians.

INDICATION

Power modules and battery drawers to be installed must be bought separately.

3.3 Transportation


WARNING

The UPS must be placed and stand in a vertical position throughout the transportation. It shall also be packed properly. Move the UPS very carefully, lifting it as little as possible and avoiding dangerous swings or falls.

Follow always the directions indicated in the symbols present on the packaging.

The equipment must always be handled by trained and instructed personnel. Comply with the safety regulations in force in your country relative to the usage of lifting equipment and/or accessories.

For any lifting, use a forklift or a transpallet with an adequate carrying capacity, placing the forks in the specific spaces of the base and making sure they come out on the other side by at least twenty centimetres.

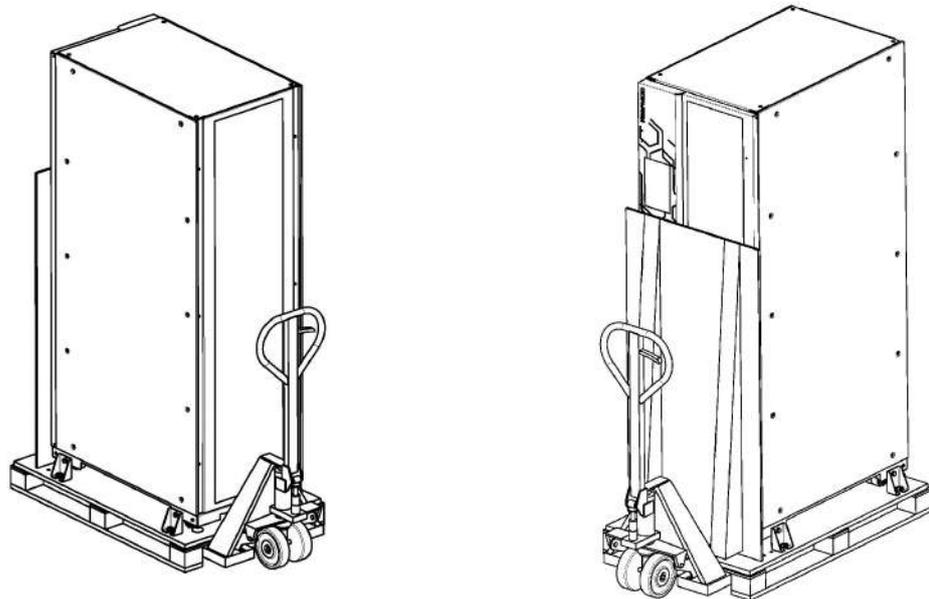

Keor MOD UPS has four wheels at the bottom of the cabinet. Before installations and while it is still empty, it can be moved by hand by at least two people.

CAUTION





Do not move the UPS after the installation or following the insertion of the power modules.

3. Unpacking and moving

3.4 Unpacking

To remove the packaging material, two people are required and they must comply with the following procedure:



- bring the UPS to the installation site using a forklift and/or a transpallet with suitable characteristics (see fig. 1);
- remove the plastic film and cardboards protecting the UPS;
- bring down the wooden chute attached to the pallet (see fig. 2);
- loose the screws of the brackets that fix the equipment on the pallet (see fig. 3);
- gently slide by hand the equipment along the chute using the wheels (see fig. 4).

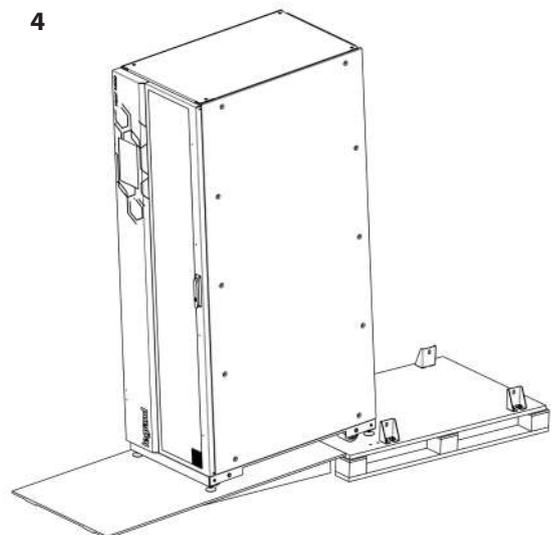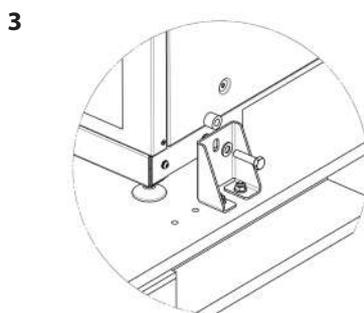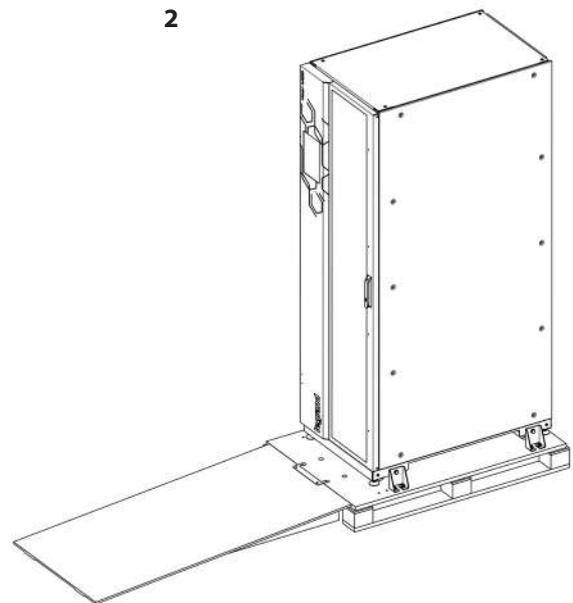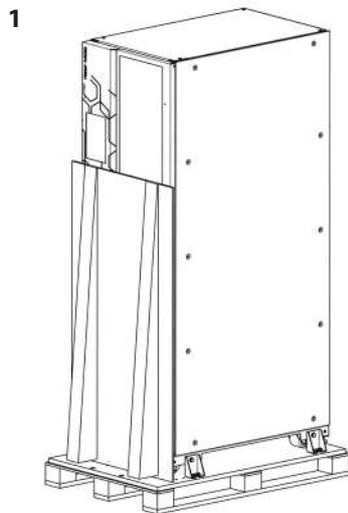

3.5 Placement

When the UPS is in the final position for the installation, unscrew counterclockwise the feet on the front and rear of the cabinet to position it.

Make sure that all the wheels and feet adhere to the floor.

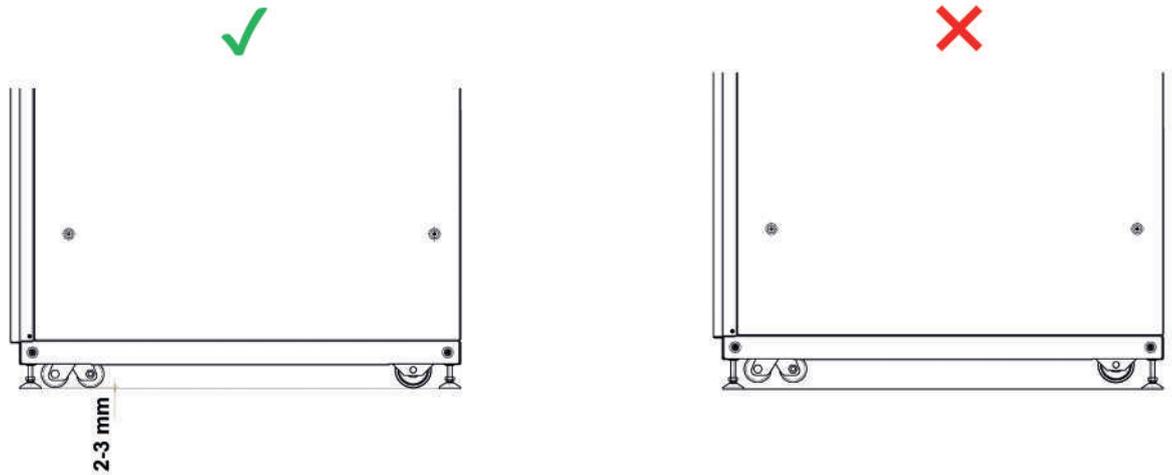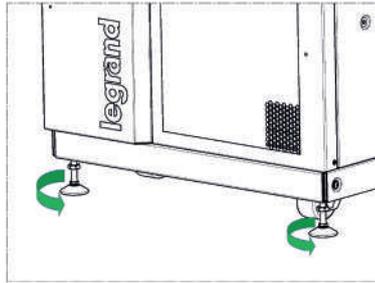


(all the dimensions are in mm)

3. Unpacking and moving

The UPS must be positioned respecting the following conditions:

- do not cover the cooling vents of the power modules and keep a clearance of 20 cm beyond the cabinets real panels;
- keep a clearance of 160 cm on the front to allow the opening of the door;
- temperature and humidity must be within permitted limits;
- fire regulations must be respected;
- the wiring must be simply made;
- front and rear accessibility must be available for assistance or periodic servicing;
- the cooling flow of air must be guaranteed;
- the air conditioning system must be adequately sized;
- dust, corrosive and explosive atmospheres must be absent;
- the installation site must be free of vibration;
- the support surface must be sized for the weight necessary to support the equipment:
- regulate the equipment feet to have perfect perpendicularity and level of the UPS compare with the floor.

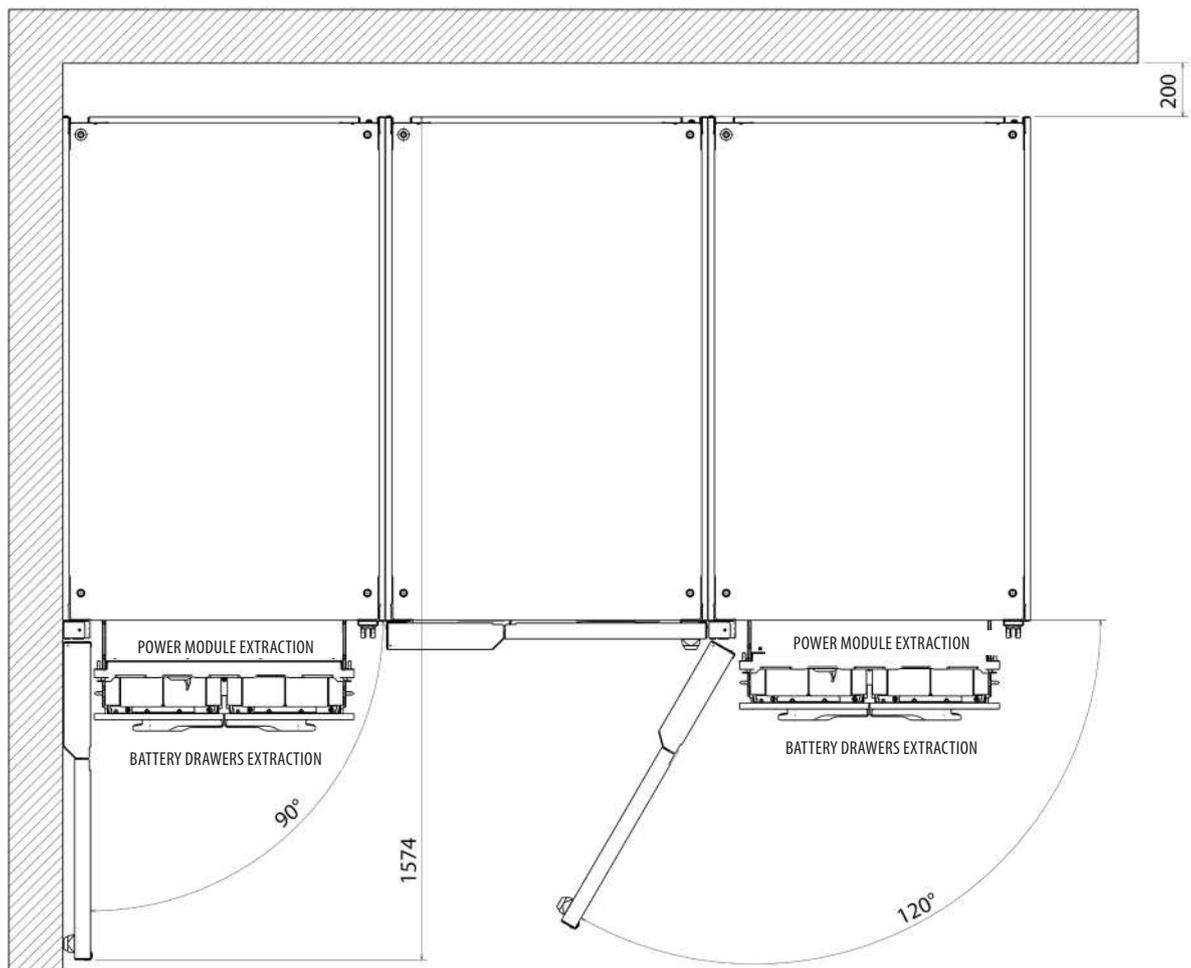

To safeguard the batteries as well as possible it is necessary to bear in mind that their average lifetime is strongly influenced by the operating room temperature. Position the UPS in an environment with a temperature range between +20°C (+68°F) and +25°C (+77°F) to guarantee the optimum life of the batteries.

Before proceeding with the installation operations, make sure that there is enough lighting to clearly see every detail. Provide artificial lighting if the natural lighting does not satisfy this requirement.

In case of maintenance operations in places that are not sufficiently well lit, portable lighting systems must be used, avoiding shadows that prevent or reduce visibility on the point where you intend to work or on the surrounding areas.

4. Installation



DANGER

All UPS installation operations must be carried out exclusively by a SKILLED TECHNICIAN qualified and authorized by LEGRAND (paragraph 2.2.1).

4.1 Safety regulations



DANGER

Before carrying out any installation operation you must read and apply the following:

- The UPS has a high leakage current. The earthing connection must be connected before cabling the UPS input. The switchgear must have a safe connection with the earthing and an adequate protection as required by the installation standards.
- The UPS must only be installed in a fixed way with a thermal-magnetic circuit breaker placed upstream of it. Connection to the mains via traditional type plug is not allowed.
- A circuit to protect from voltage backfeed made as in the diagrams shown in paragraph 4.2.5 must be provided outside the UPS.
- The switchgear or the disconnecter switch must be installed near the equipment and must be easily accessible.
- A warning label must be placed on all the mains disconnecter switches installed away from the area of the UPS to remind the assistance personnel of the fact that the circuit is connected to a UPS. The label must contain the following or equivalent text:

Before working on this circuit

- Isolate Uninterruptible Power System (UPS)
- Then check for the presence of Hazardous Voltage between all terminals including the protective earth



Risk of Voltage Backfeed

- Do not carry out the installation in presence of water or humidity.
- Open only the UPS panels necessary for the electrical connections. After that, close and fix them.
- Check there is no mains voltage on the equipment.
- Check that the loads are off and disconnected from the UPS.
- Check that the UPS is off and no voltage is present.
- Check that the fuse breakers on the external battery cabinets (if present) are open.
- Check that all battery drawers (if present) are not fully inserted in the UPS cabinet.
- Check that the mains input voltage and frequency correspond with the values indicated in the technical data on the UPS rating plate.
- Check that the earthing has been carried out in compliance with IEC (International Electrotechnical Commission) standards or local regulations.
- Check that the electrical system has been fitted with the necessary differential and thermal-magnetic protections upstream of the UPS.
- The energy quality of the electrical network should comply with the individual voltage harmonics compatibility levels defined by EN 61000-2-2. For more severe conditions, a power quality audit is required during the UPS commissioning by the LEGRAND Technical Support Service in order to check the compatibility.

4.2 Electrical connections

The electrical hook-up of the UPS to the switchgear or to the external battery cabinets is part of the installation that is not normally performed by the UPS manufacturer. For this reason, the indications that follow are to be considered approximate and it is recommended that the electrical connections are based on local installation standards. After removing the UPS from the packaging and positioning it in its definitive place, the Skilled Technician can begin to make the electrical connections.



WARNING

The choice of cables type and their cross sections depending on the rated current and their installations must be made as indicated by the local installation standards and it is a responsibility of the Skilled Technician.

The input current and the output power of the UPS are indicated in chapter 10 and the battery current in table 5 of chapter 11.

INDICATION

Chapter 11 includes tables with the recommended cables, fuses, automatic and differential breakers.

4. Installation

4.2.1 Protective devices

To ensure proper protection from overloads, output short-circuits or electrical shocks, it is necessary to install adequate automatic residual-current and thermal-magnetic breakers upstream of the UPS on the input line. In case there is a separate bypass line, the residual current earth leakage protection system must be common for the AC input and bypass lines and must be installed upstream.

The protective devices must be selected according to the indications in the tables shown in chapter 11.



CAUTION


The equipment can cause a d.c. current in the PE conductor. Where a residual current-operated protective device (RCD) is used for protection against electrical shock, only an RCD of Type B is allowed on the supply side of this product.

4.2.2 Disassembly of the distribution panel



To carry out all the electrical connection operations, it is necessary to unscrew the screws that fix the distribution panel to the cabinet. The screws must be saved to close the distribution panel at the end of the installation (hex socket M6x20 screws along with M6 toothed washers).

Unscrew also the screws that fix the plexiglass protection panel and save them to close the panel and the end of the installation (Phillips pan head M4x10 screws).


The following pictures show how to disassemble the panels:

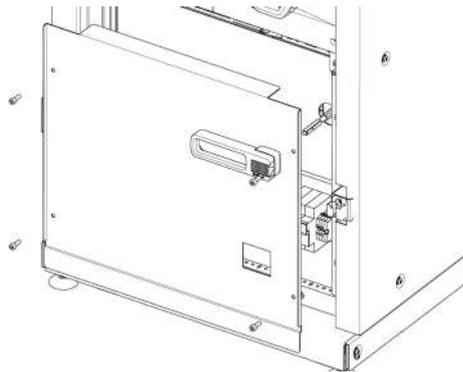

KEOR MOD 125

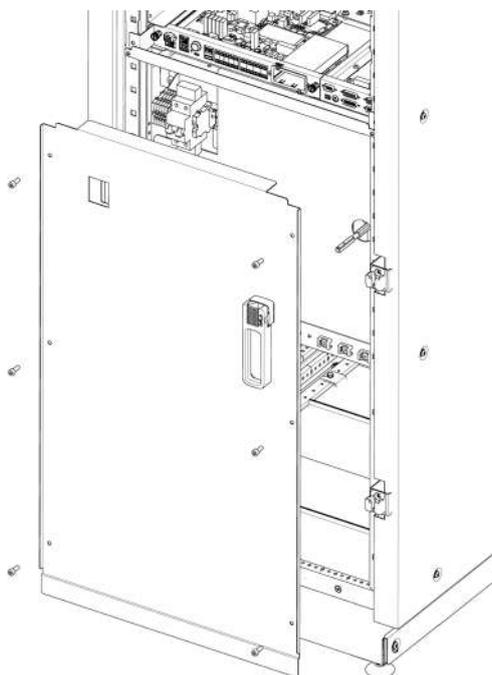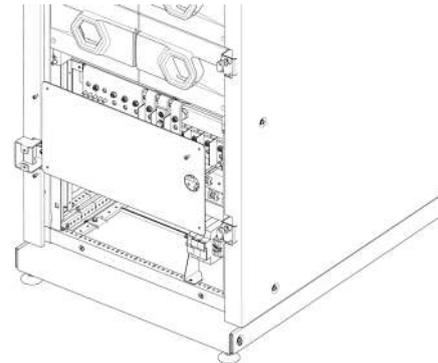


KEOR MOD 250

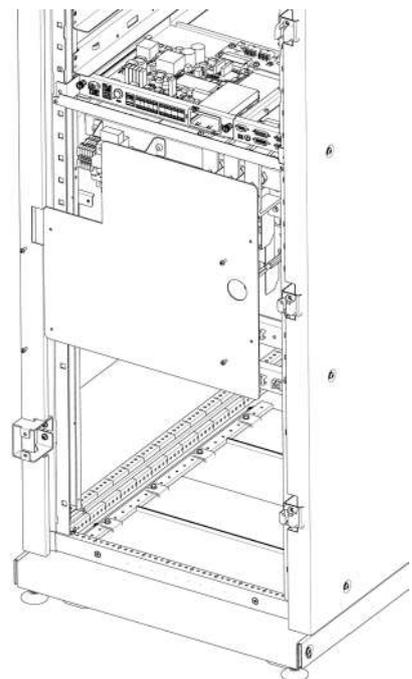


To insert the cables in the cabinet, it is necessary to remove the panels at the bottom of the cabinet according to the following sequence:

1

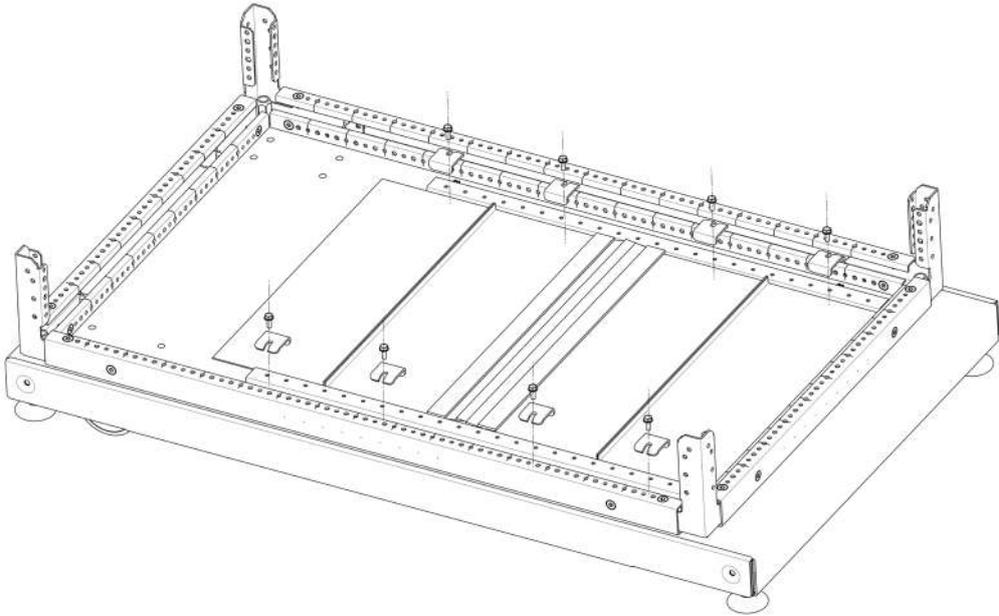


2

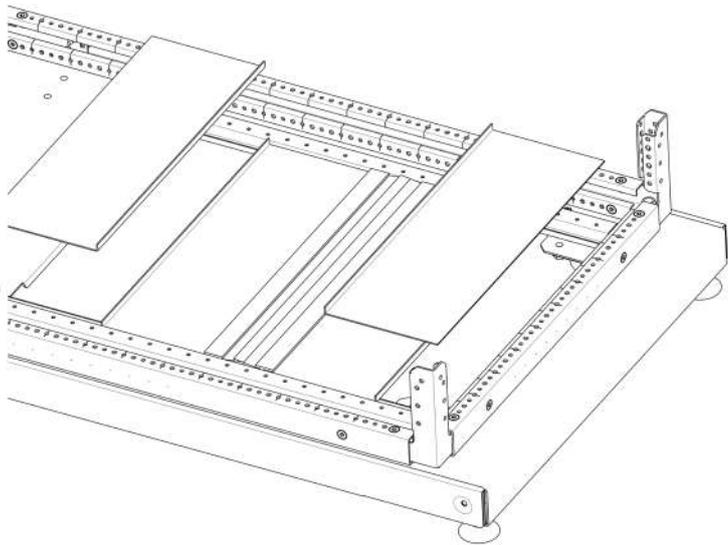


4. Installation


3

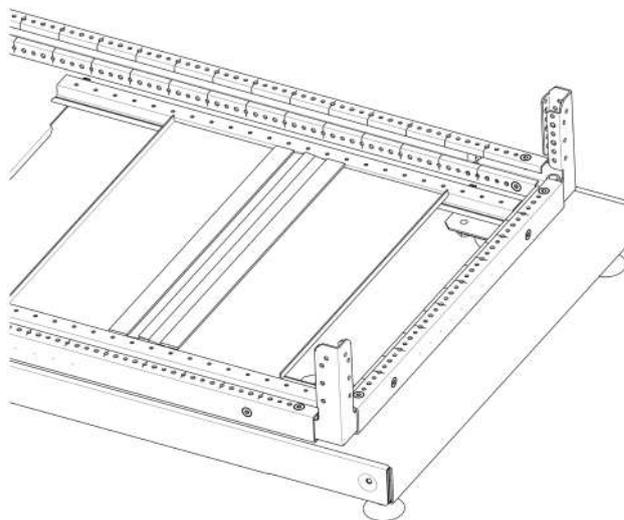

4

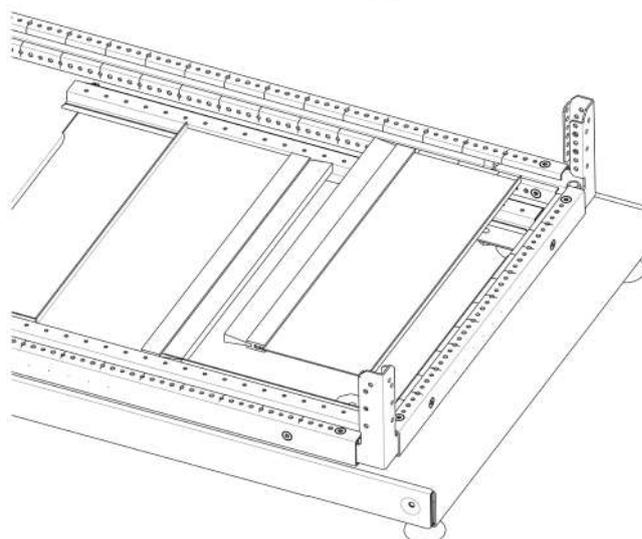


5

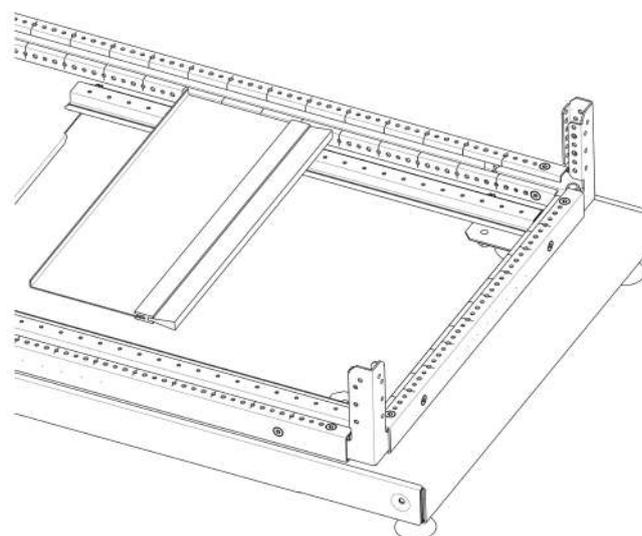


Insert the cable and add the panels according to the following sequence:


6

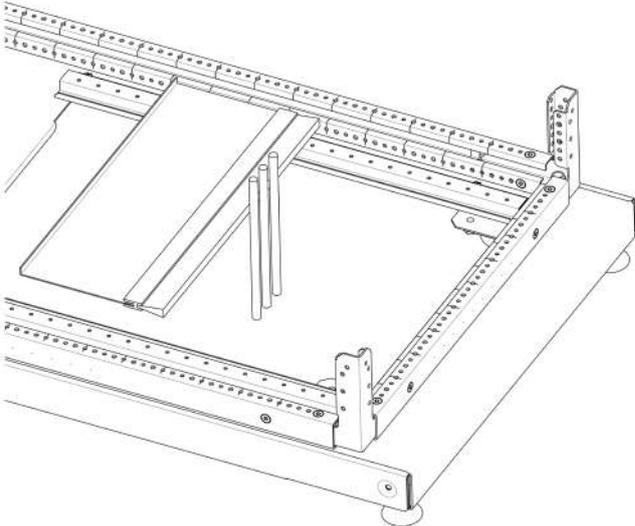

7

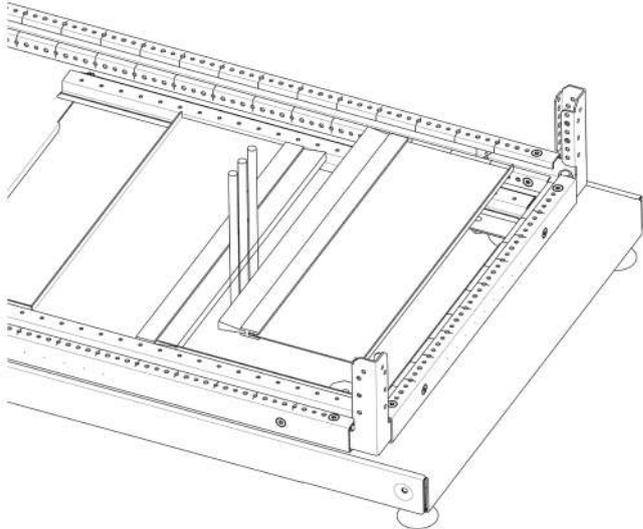


8

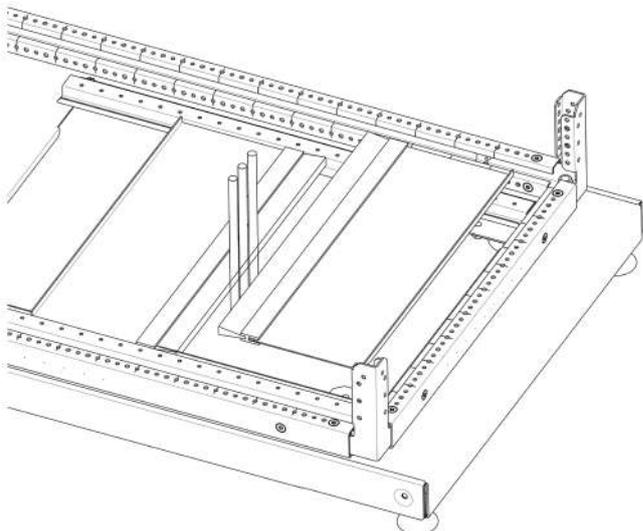


4. Installation

9

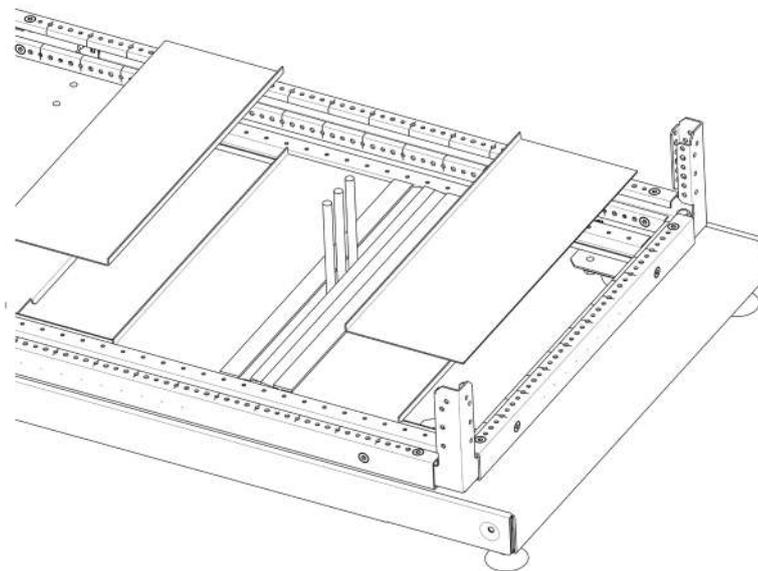

10

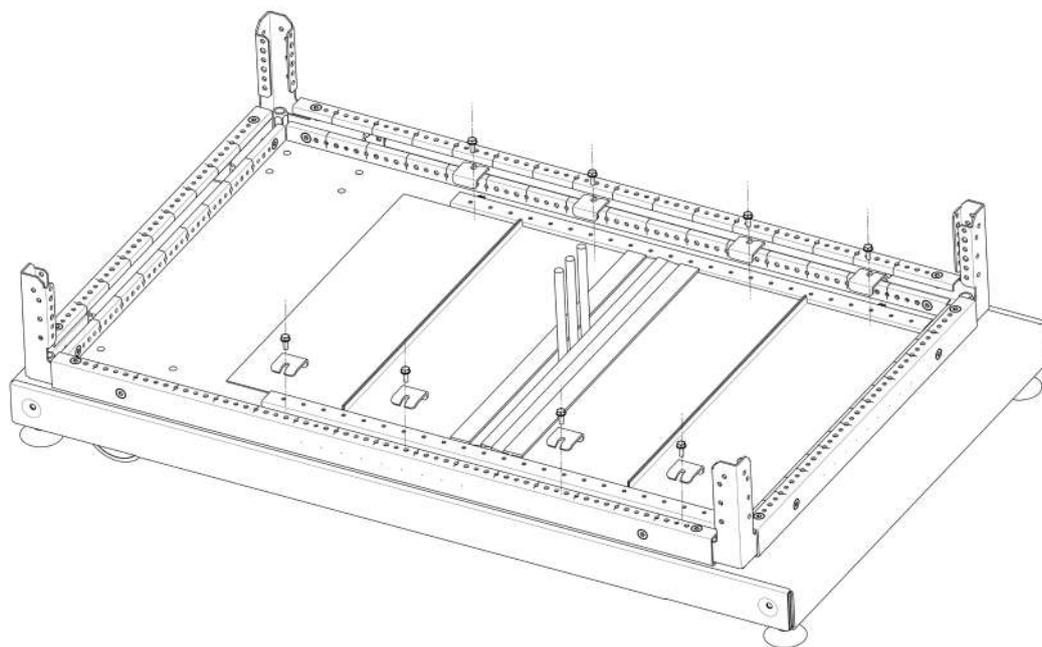

4.2.3 Earthing connection


Before carrying out any other installation operation, connect the earthing wiring coming from the low voltage switchgear to one of the earthing bars located on the left and right side of the busbars connection system.

The minimum cross-sectional area of the earthing conductor must be chosen according to the following criteria:

- if the cross-sectional area S of the phase conductors is $S \leq 16 \text{ mm}^2$, the minimum cross-sectional area of the earthing conductor must be the same as the phase conductors;
- if the cross-sectional area S of the phase conductors is $16 \text{ mm}^2 < S \leq 35 \text{ mm}^2$, the minimum cross-sectional area of the earthing conductor must be 16 mm^2 ;
- if the cross-sectional area S of the phase conductors is $S > 35 \text{ mm}^2$, the minimum cross-sectional area of the earthing conductor must be $S/2 \text{ mm}^2$.




Each earthing cable must be crimped with M8 eyelets and fixed to the earthing metal bar using hex M8x20 screws along with M8 flat washers and M8 grower washer.

The grower washer must be put on the top of the flat washer.

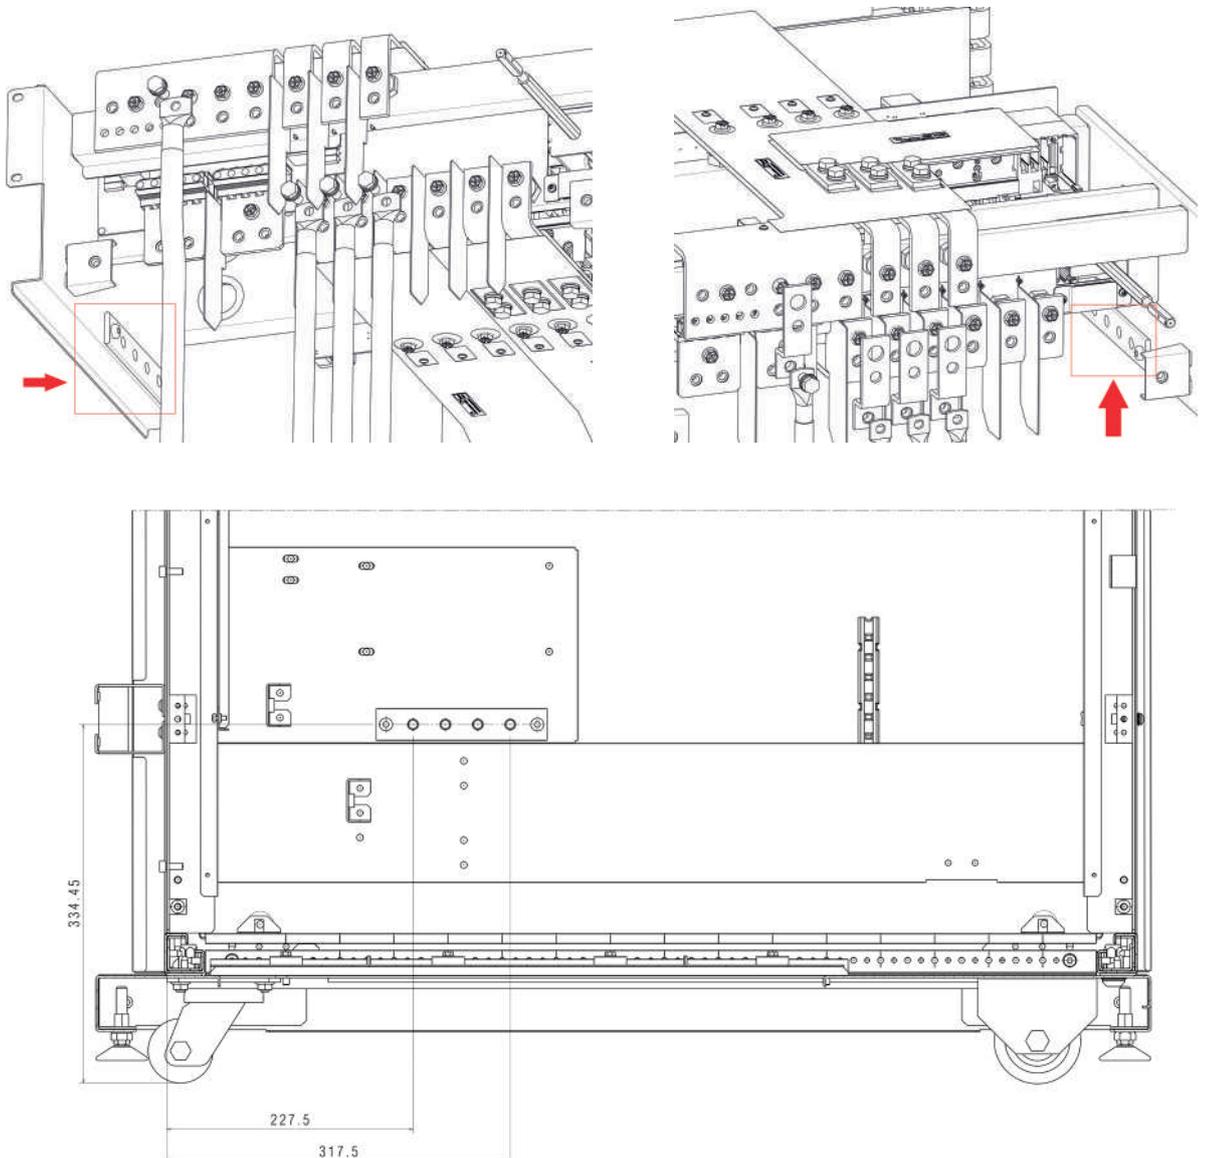

KEOR MOD 125 – earthing bars

4. Installation

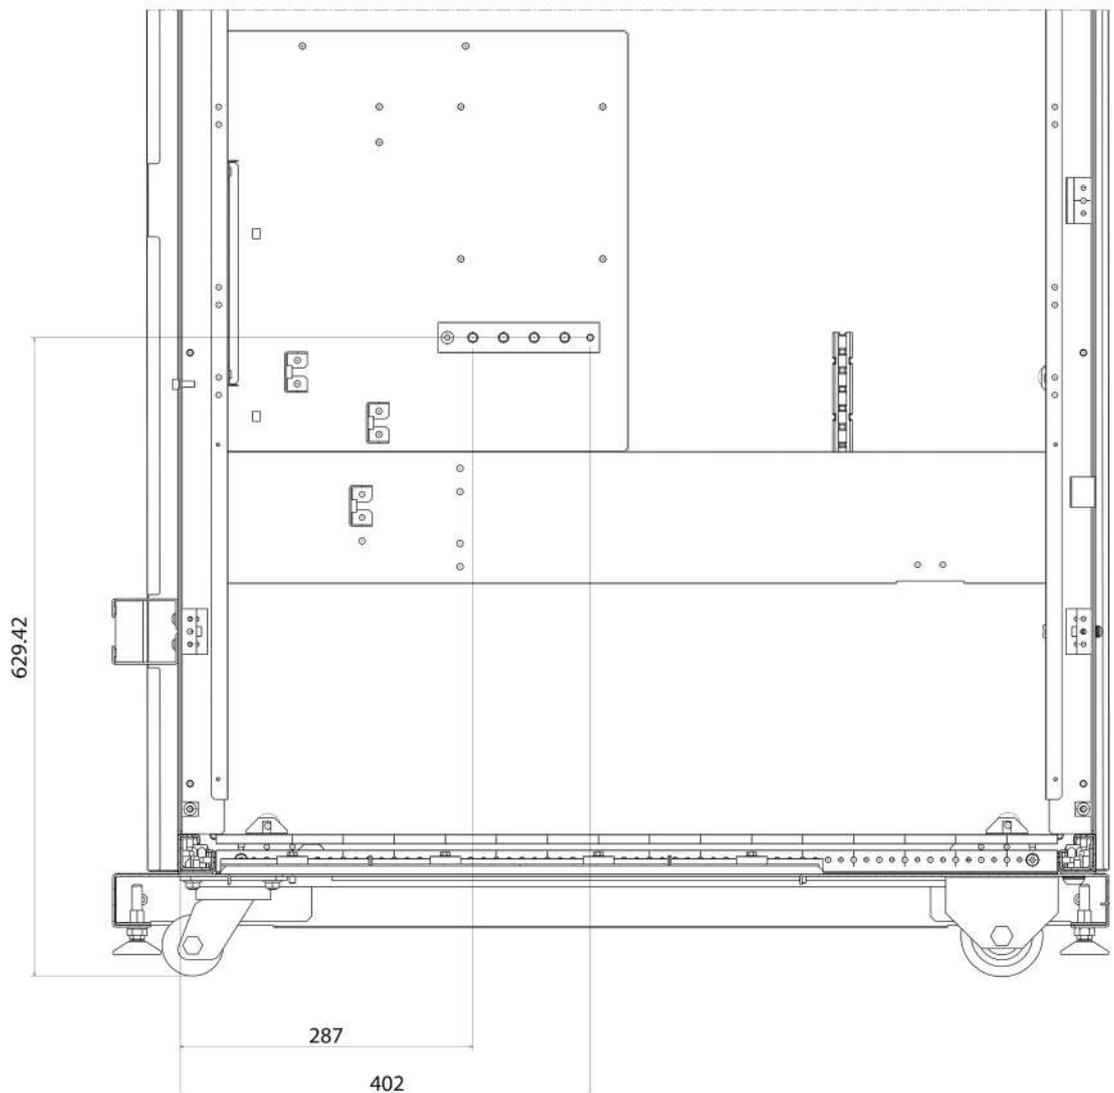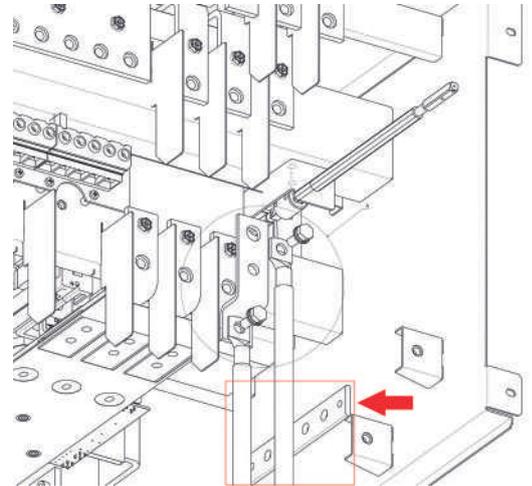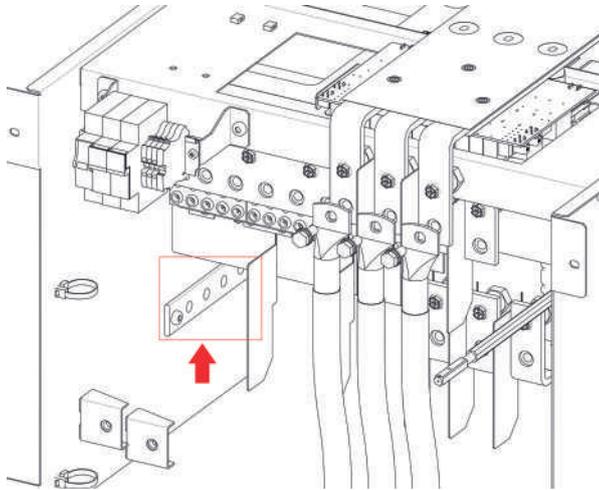


KEOR MOD 250 – earthing bars

4.2.4 Cable fastening

In the accessory box there are two metal bars for Keor MOD 125 and three metal bars for Keor MOD 250. They are used along with the plastic supports for cable ties to fasten the installation cables.

Each bar must be fixed to the cabinet using two hex M8x14 screws.

The plastic supports for the cable ties must be fixed on the bar using the M6 torx pan head screws.

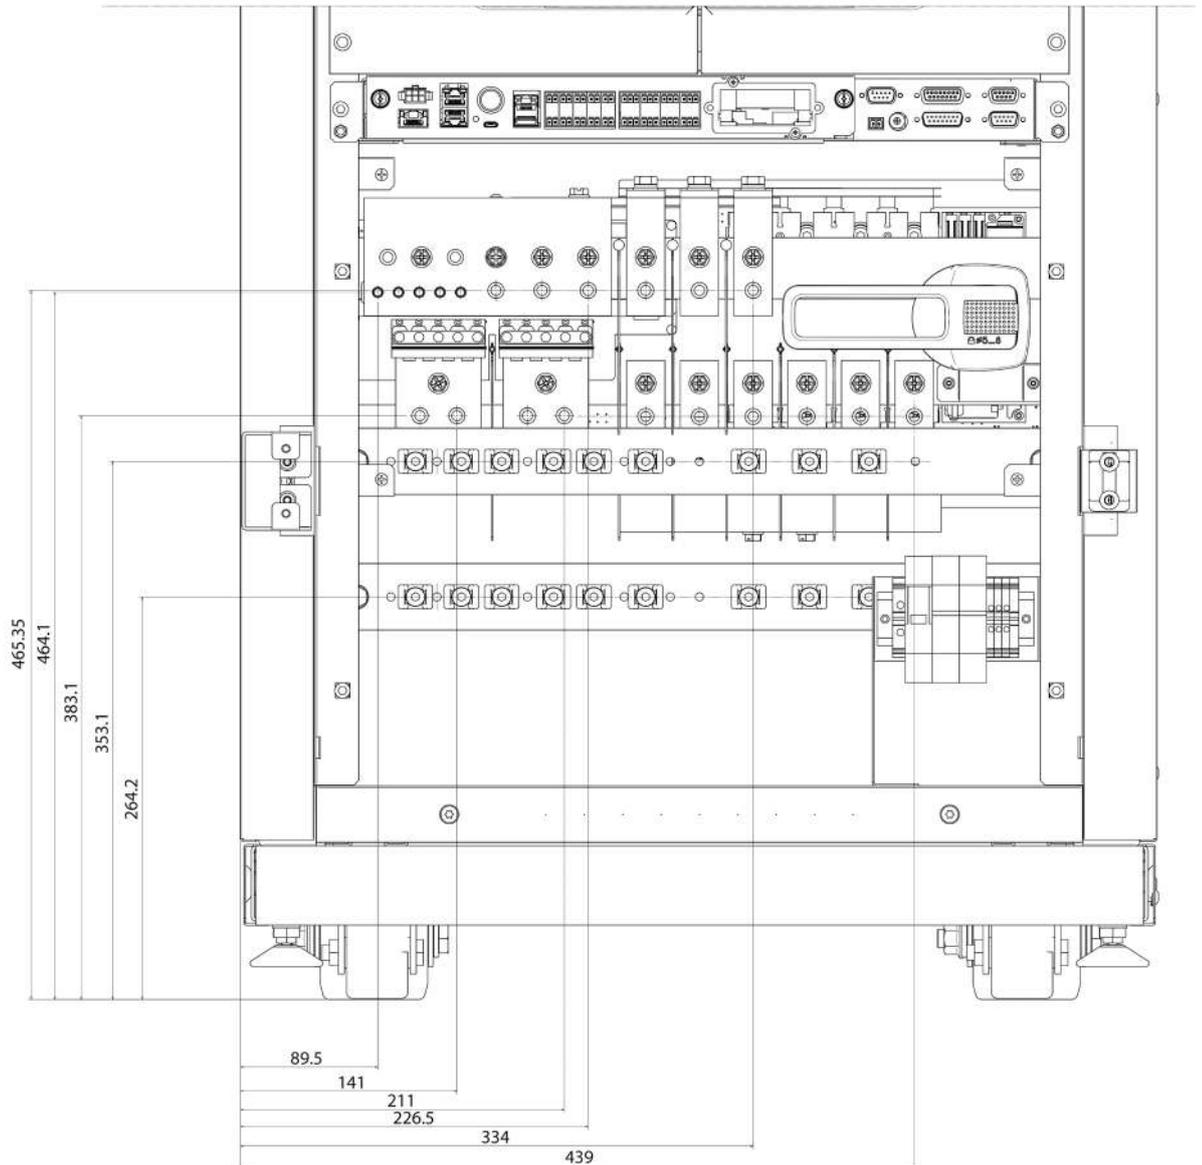


(all the dimensions are in mm)

KEOR MOD 125 – view of the two metal bars for cable fastening


4. Installation

The fastening of the battery, input and output cables on Keor MOD 125 must be done according to the following steps:


- 1) Fix the first metal bar to the cabinet, behind the surge arrester and the fuse holders, using two hex M8x14 screws.

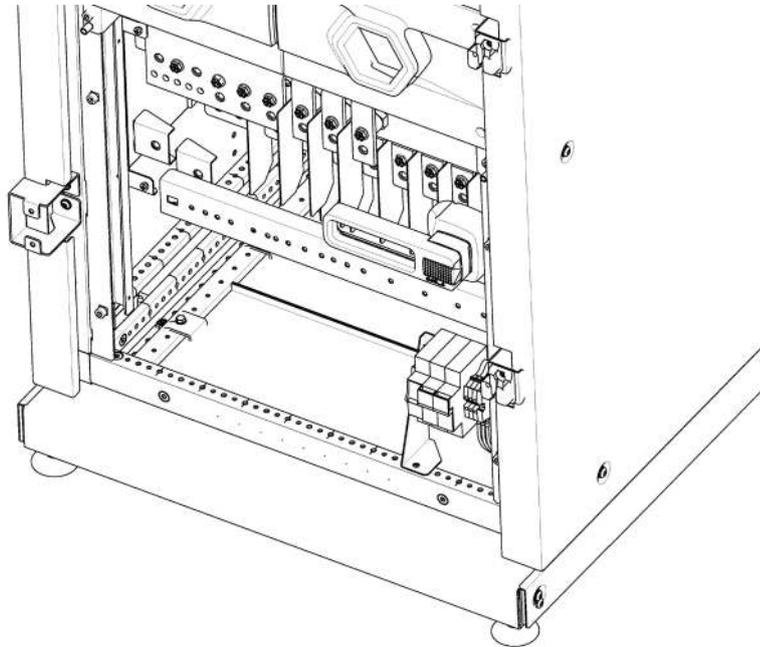

- 2) Fix the plastic supports for cable ties using M6 torx pan head screws.

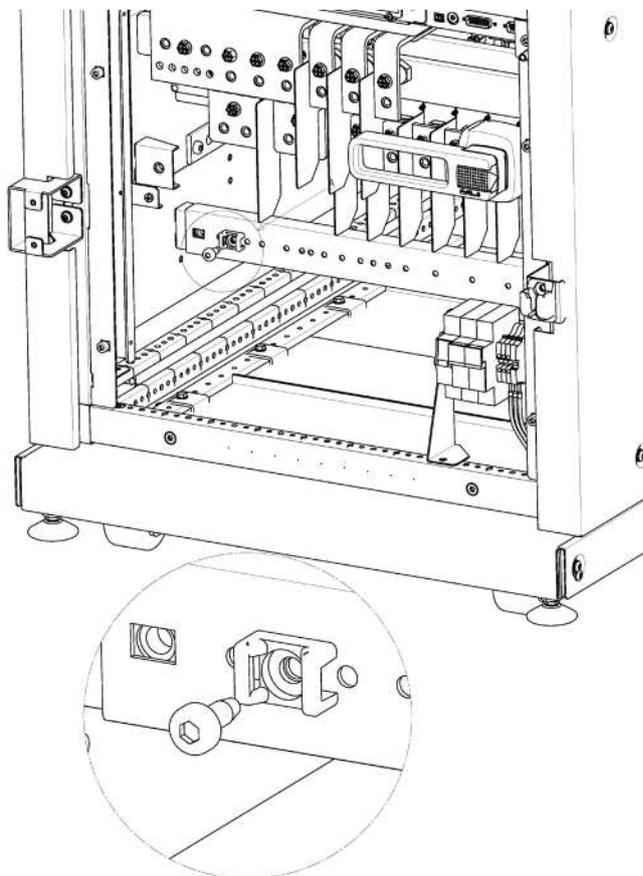


3) Fix the cables with cable ties.

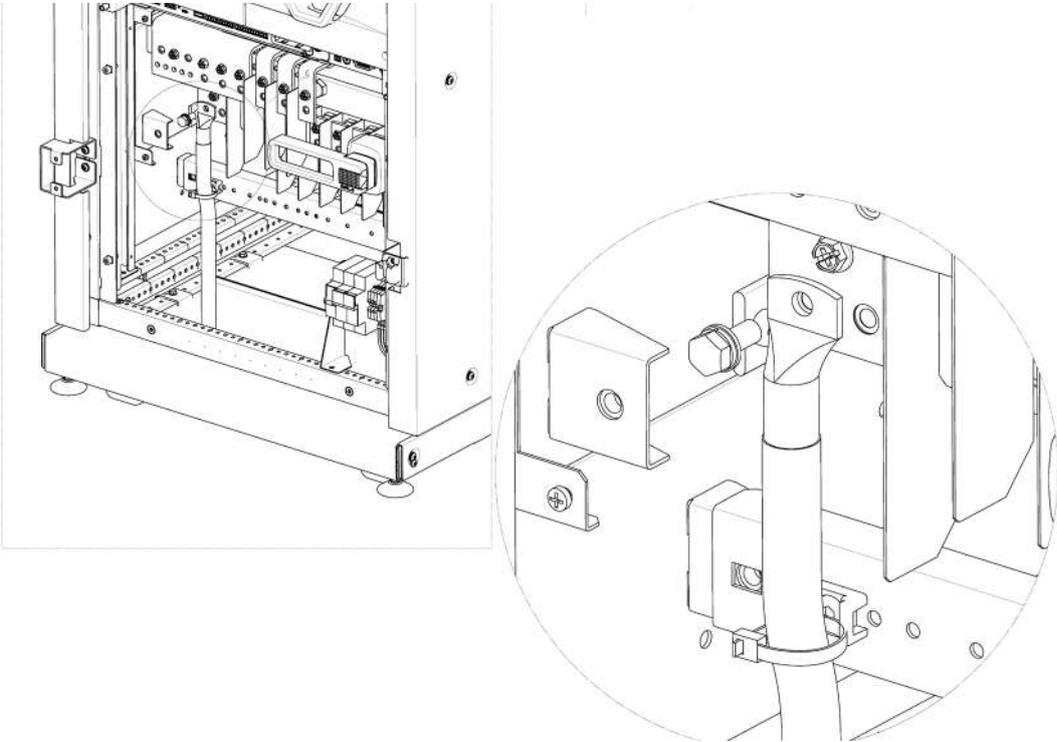


The fastening of the neutral and output cables on Keor MOD 125 must be done according to the following steps:

1) Fix the second metal bar to the cabinet, close to the maintenance manual bypass switch, using two hex M8x14 screws.

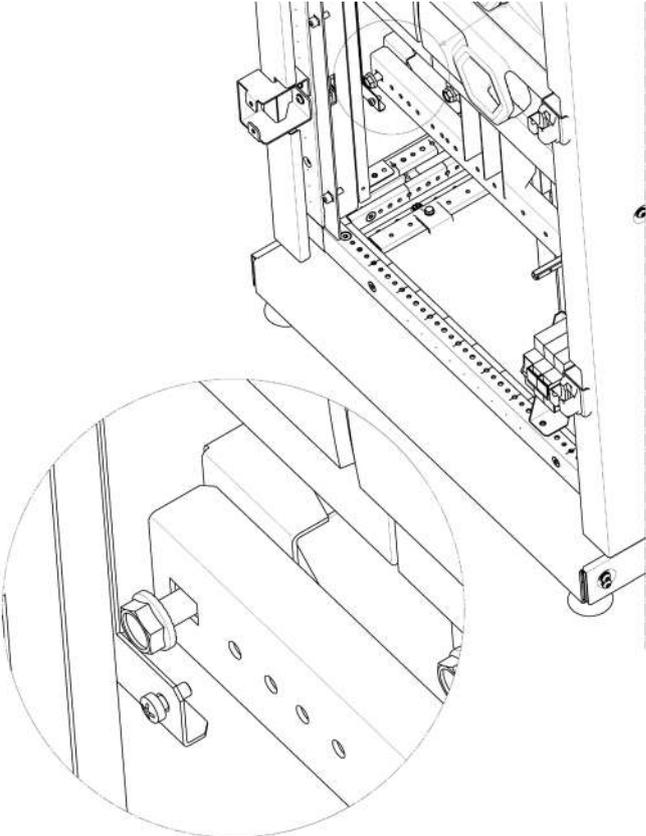



4. Installation

- 2) Fix the plastic support for cable ties using M6 torx pan head screws.

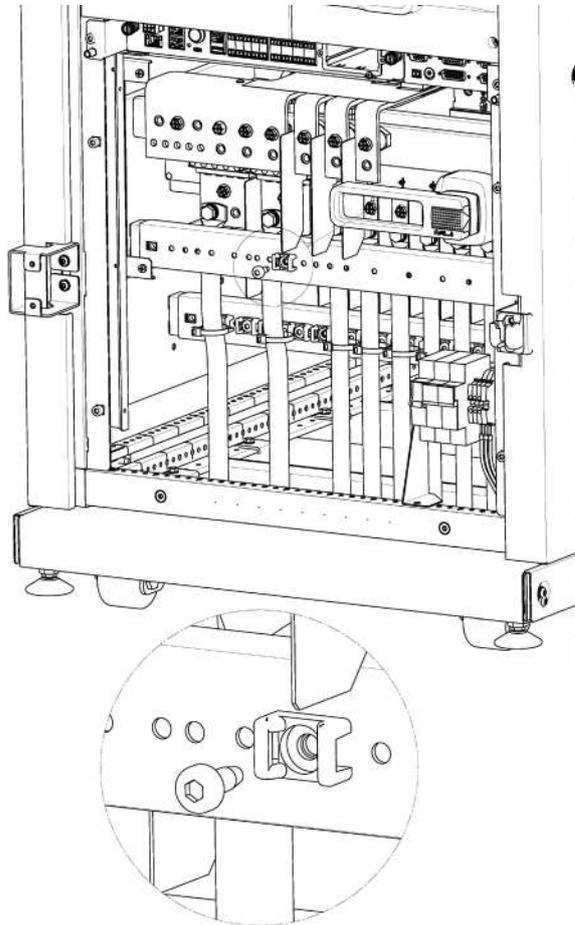

- 3) Fix the cables with cable ties.

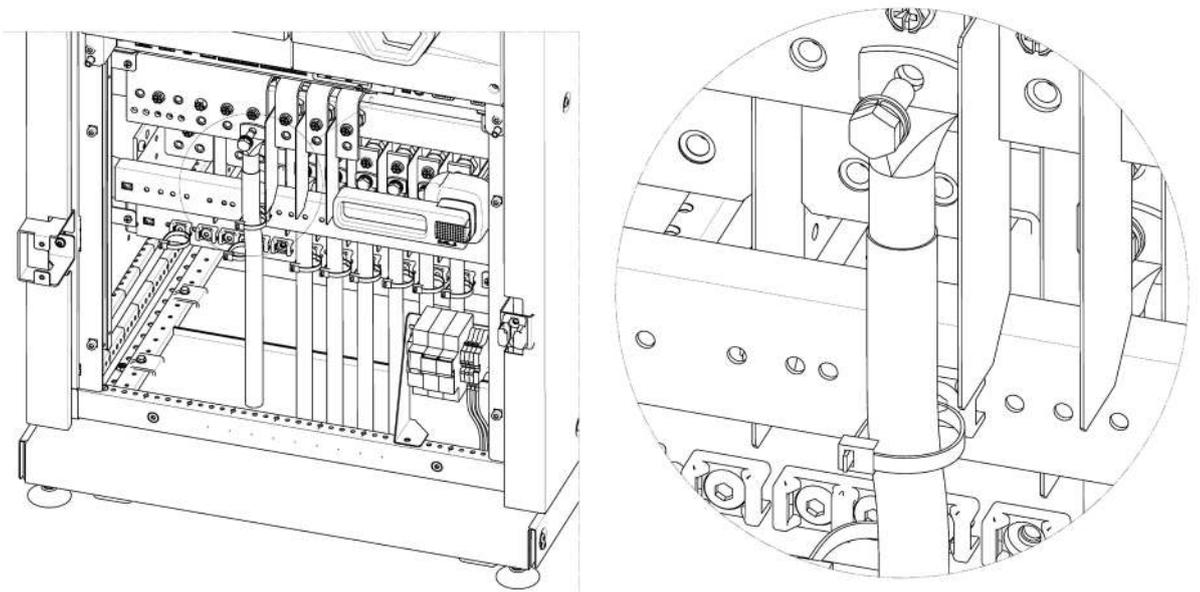

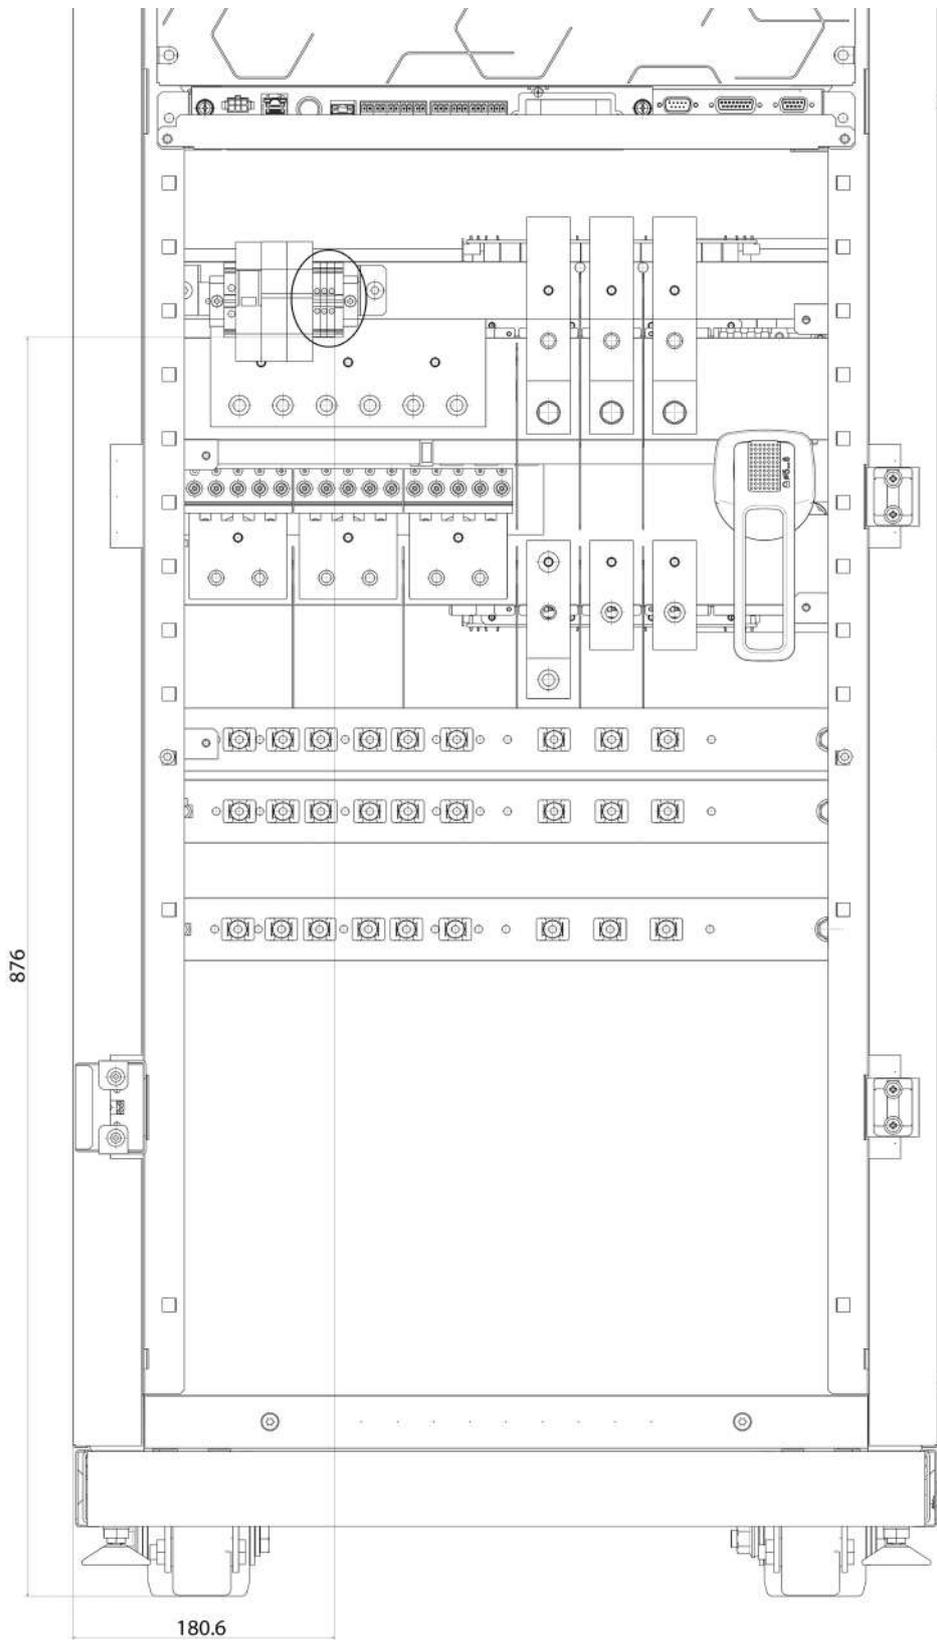


(all the dimensions are in mm)

KEOR MOD 250 – view of the three metal bars for cable fastening


4. Installation

The fastening of the battery and output cables on Keor MOD 250 must be done according to the following steps:

- 1) Fix the first metal bar at the bottom of the cabinet using two hex M8x14 screws. Then fix the plastic support for the cable ties using M6 torx pan head screws.

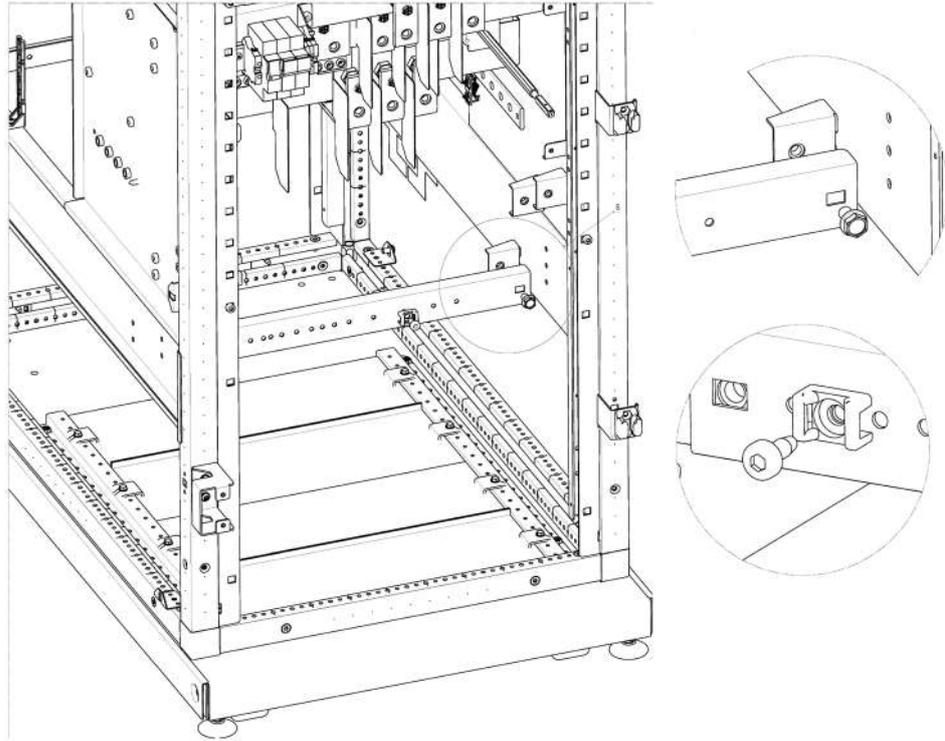


- 2) Fix the cable with cable ties.

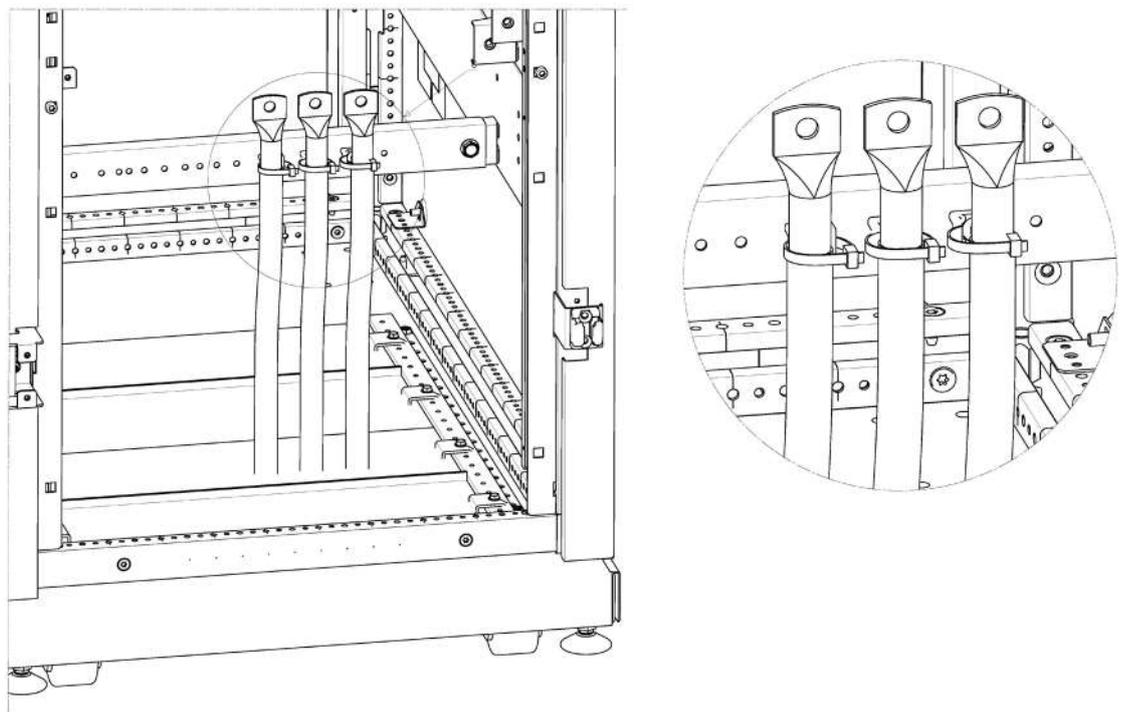


The fastening of the neutral and bypass cables on Keor MOD 250 must be done according to the following steps:

- 1) Fix the second metal bar above the first bar using two hex M8x14 screws. Then fix the plastic support for the cable ties using M6 torx pan head screws.

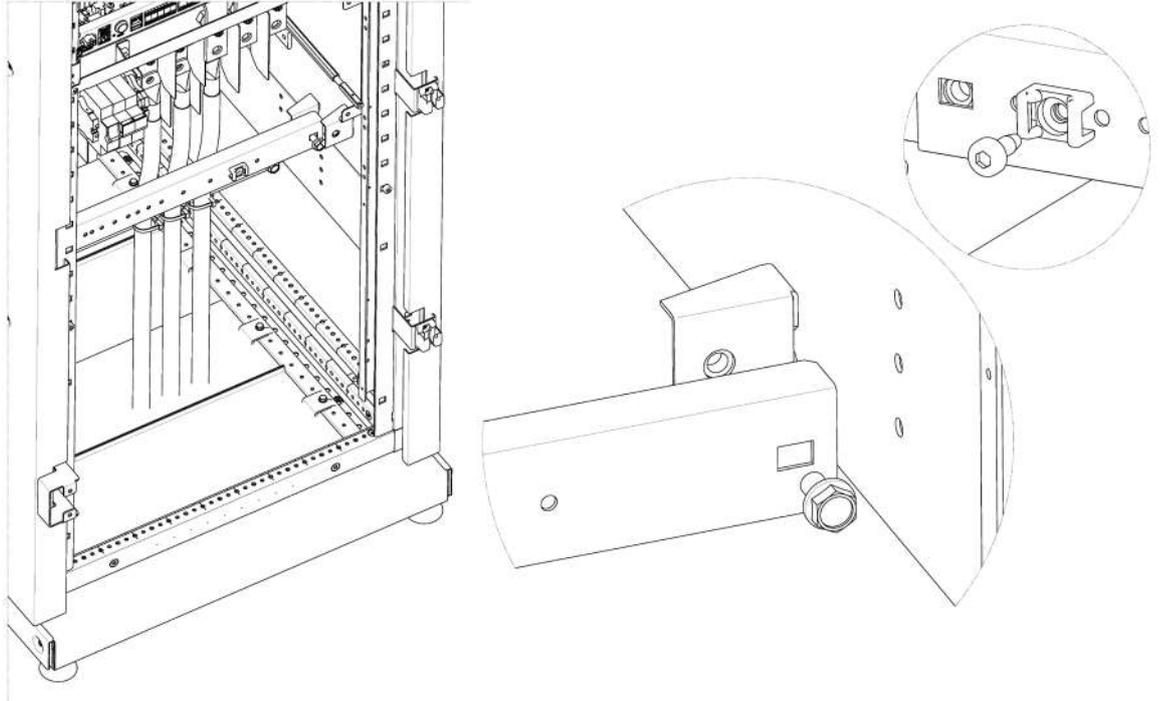


- 2) Fix the cable with cable ties.

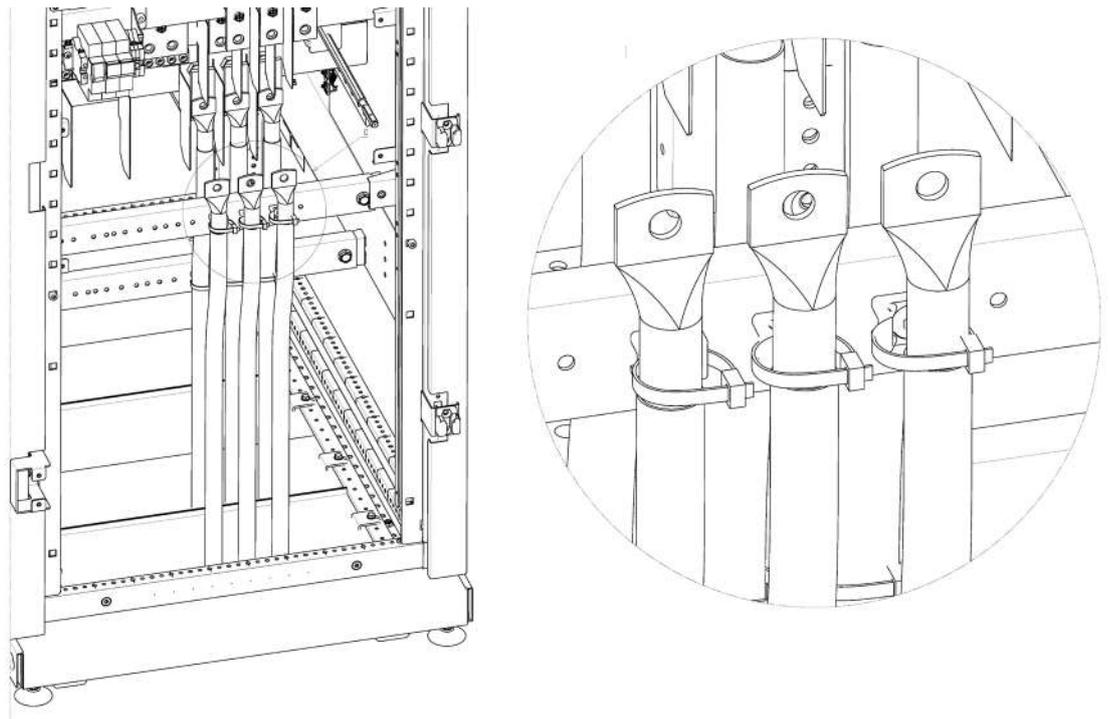


4. Installation

The fastening of the input cables on Keor MOD 250 must be done according to the following steps:

- 1) Fix the third metal bar above the second bar using two hex M8x14 screws. Then fix the plastic support for the cable ties using M6 torx pan head screws.

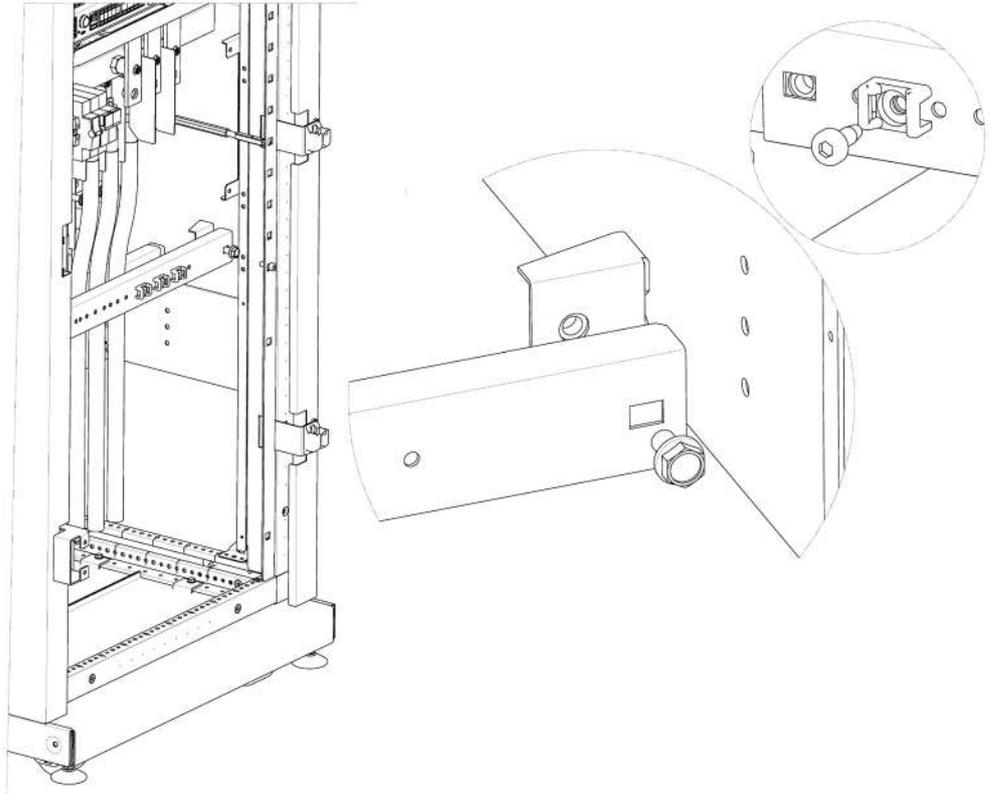


- 2) Fix the cable with cable ties.

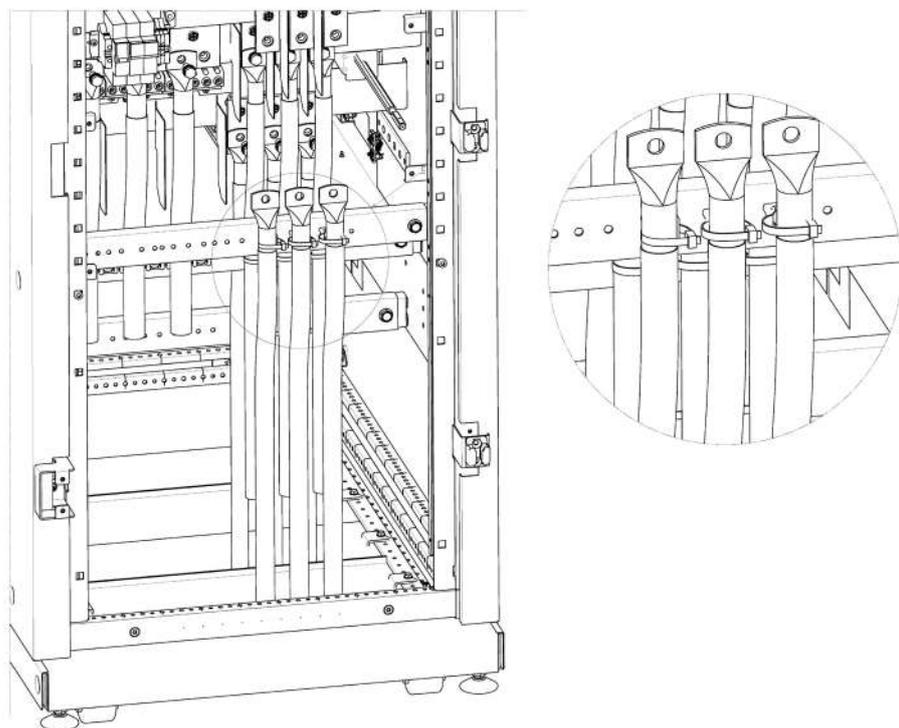


The tightening torque values for the cables are the following:

- M8 screws: 24 Nm
- M6 nuts: 15 Nm
- M10 nuts: 35 Nm

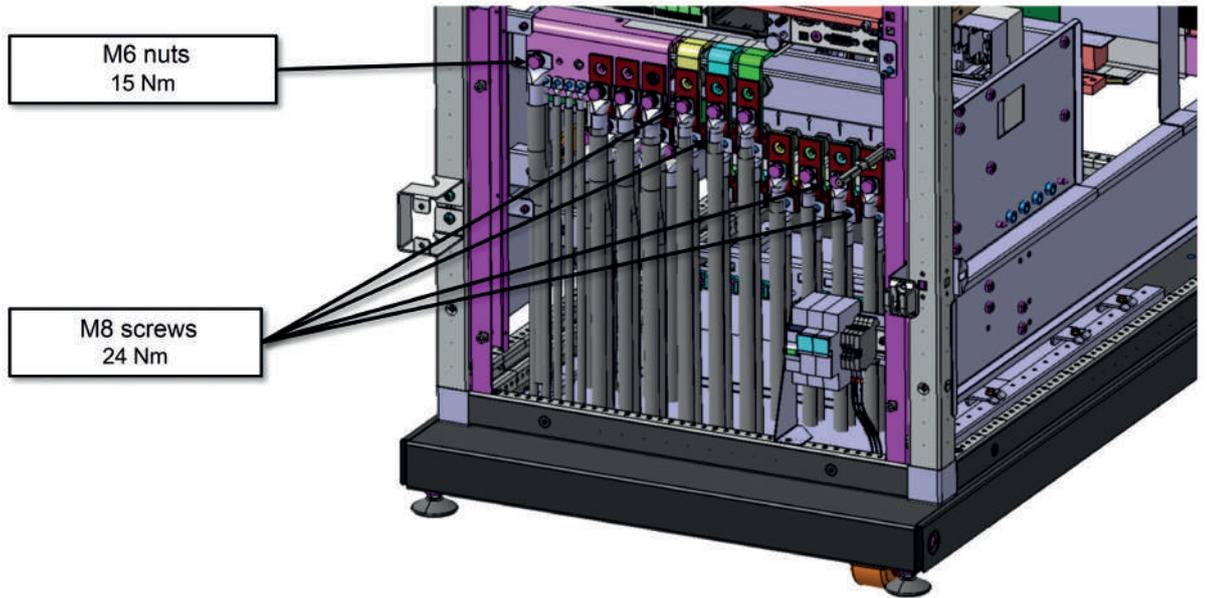

KEOR MOD 125

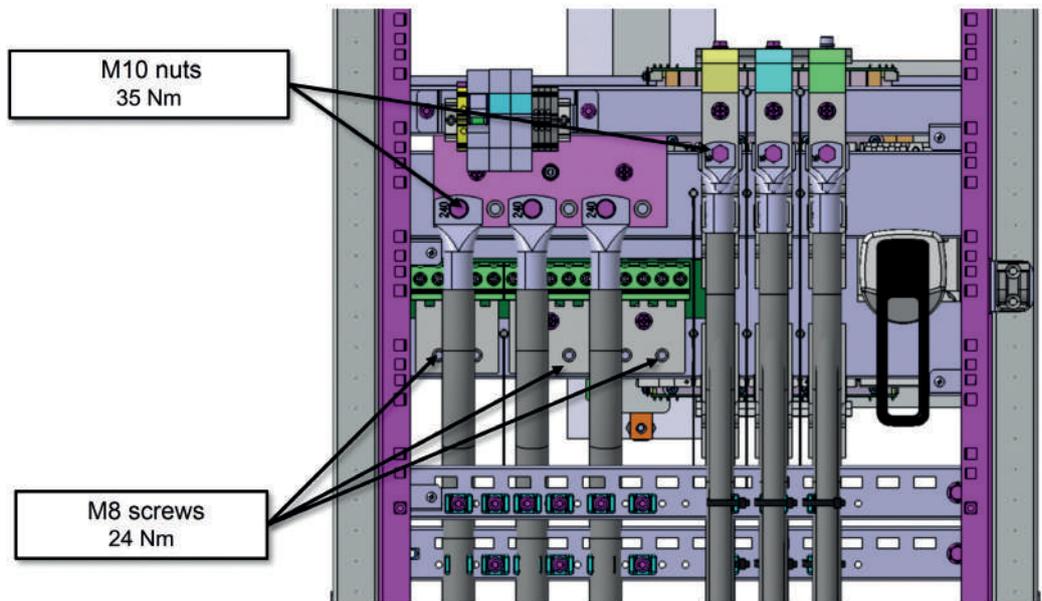


KEOR MOD 250

4. Installation


4.2.5 Backfeed protection

An external protection against voltage backfeed must be provided according to the following diagrams:


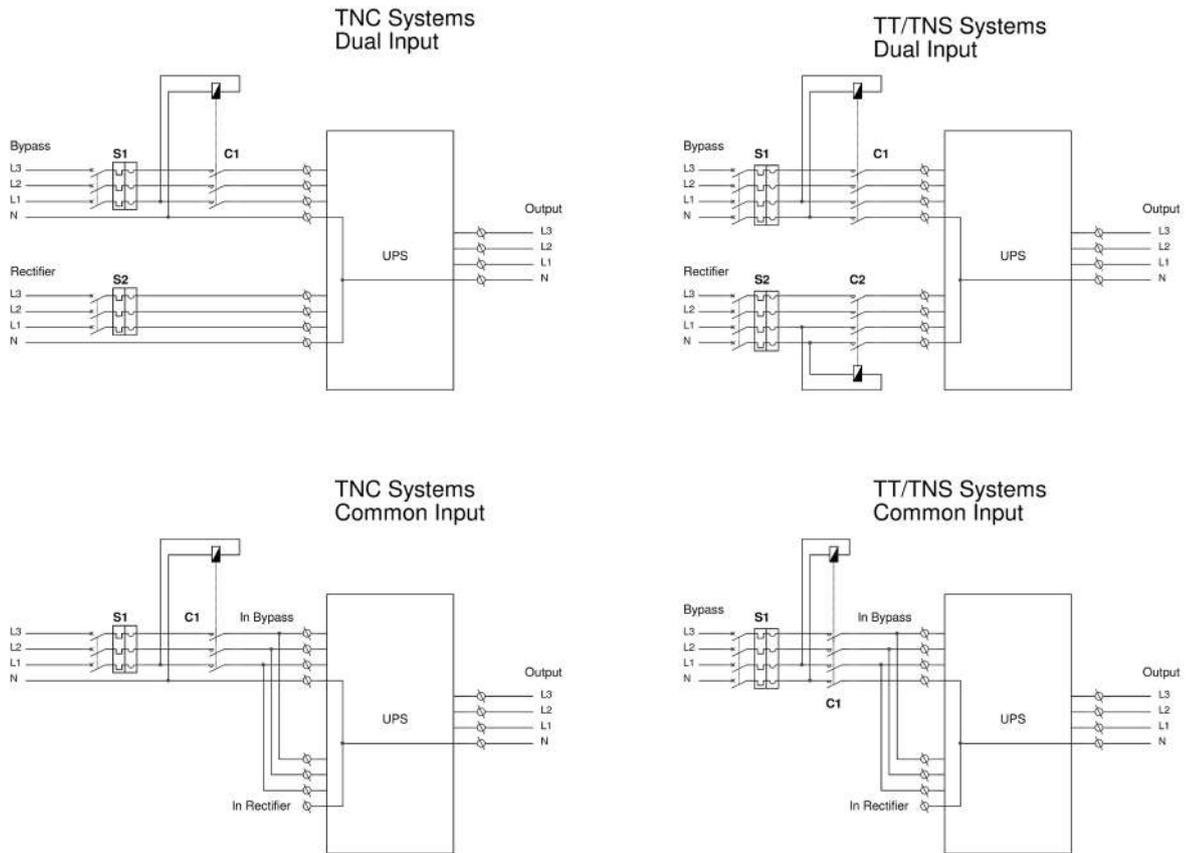


INDICATION


The following information related to the auxiliary contact for the backfeed protection are not yet implemented.

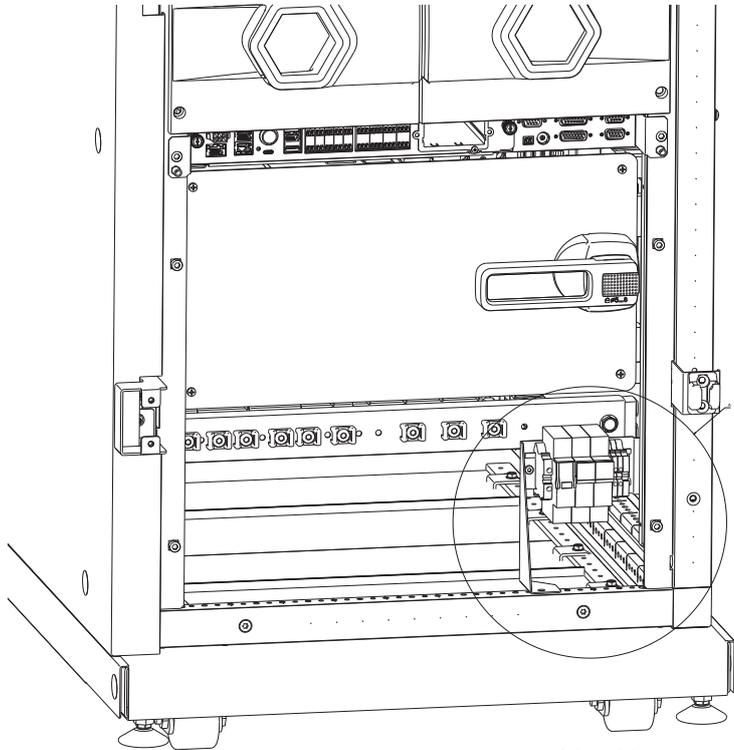

KEOR MOD 125

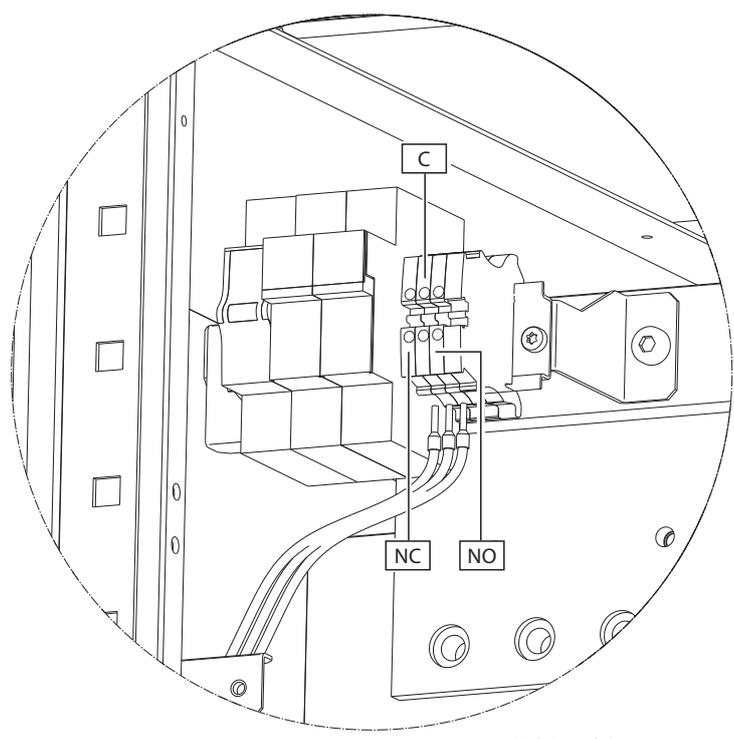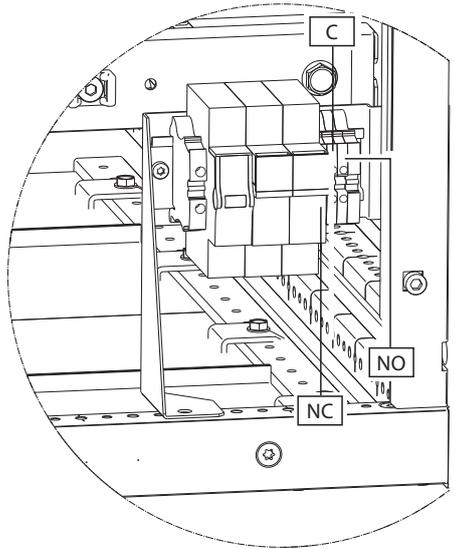

KEOR MOD 250

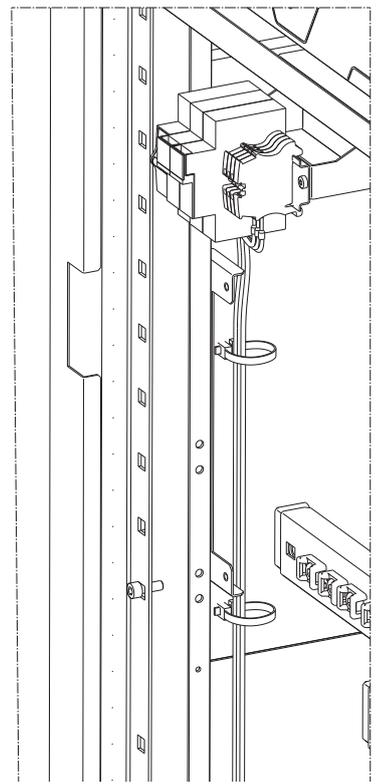


The UPS has an auxiliary contact for the actuation of the external backfeed protection (protection against power transfer towards the input). This auxiliary contact has been created with a C/NC/NO relay and is available in the DIN rail inside the cabinet.

4. Installation

If the UPS detects a voltage backfeed, the relay is energized and changes status, enabling the external disconnection of the input lines as indicated in the diagrams shown below.

The relay contacts characteristics are :

- Maximum applicable voltage: 250Vac.
- Maximum applicable current: 6A

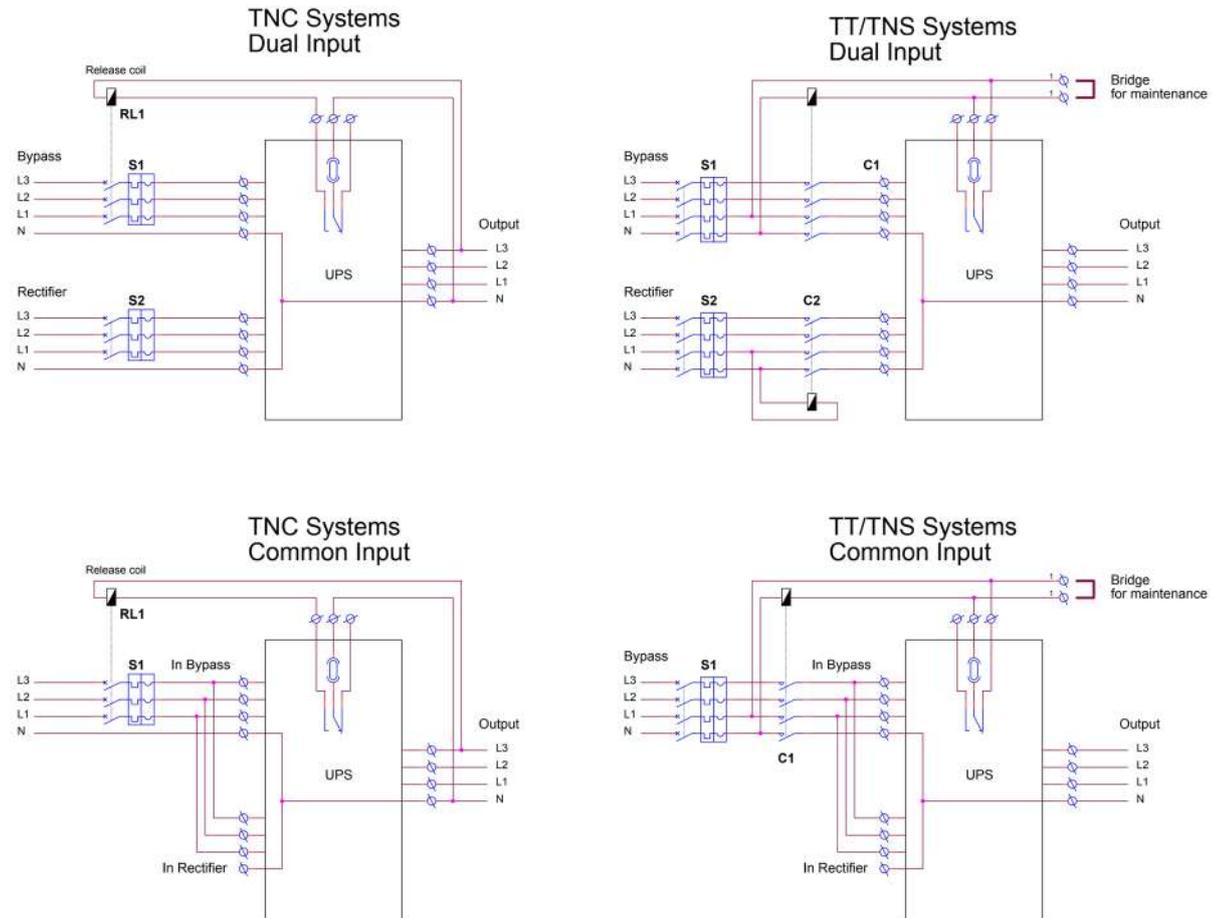

INDICATION

If during operation, the UPS signals that the backfeed protection has been actuated, contact the LEGRAND Technical Support Service.

4.2.6 Input cables installation

The default configuration has the input line in common with the bypass line through a metal jumper.

Before the installation of the input cables, check the following:

- the mains line must be able to provide an input voltage of 400 V + 15% - 20%;
- the available mains power must be at least the same of the UPS nominal power;
- the cables to connect to the UPS must be isolated upstream and no voltage must be present;
- the earthing cable from the low voltage switchgear must be properly connected (see paragraph 4.2.3).



WARNING


The neutral input cable must always be connected.

KEOR MOD 125



The default configuration has the input line in common with the bypass line through a metal jumper.

If no change is required, follow these steps:

- unscrew the three hex M8x25 screws that fix the jumper to the bypass terminal of the busbar;
- crimp the input and neutral cables with M8 eyelets;
- connect the input cables L1, L2, L3 to the metal jumper of the terminals **BYP L1**, **BYP L2**, **BYP L3** of the bypass busbar using the three screws removed previously along with M8 flat washers and M8 grower washers. The grower washer must always be put on top of the flat washer;
- do not change the phase sequence (L1, L2, L3);
- connect the input neutral cable to the neutral busbar with a hex M8x20 screw along with a M8 flat washer and a M8 grower washer. The grower washer must always be put on top of the flat washer.

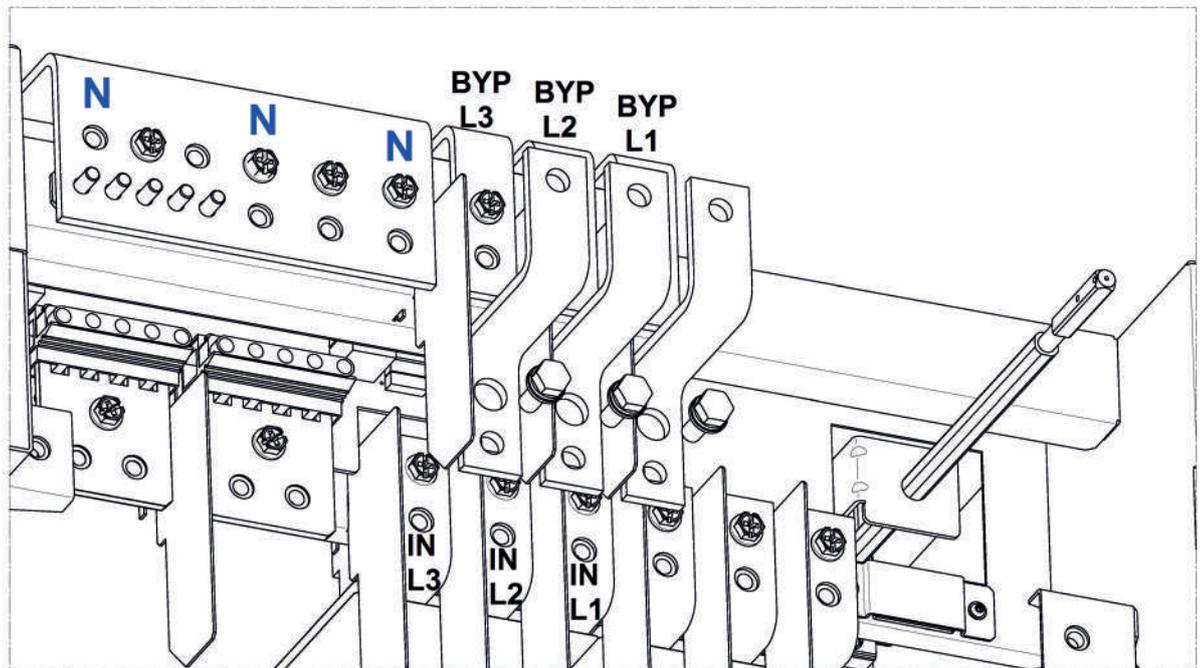


4. Installation

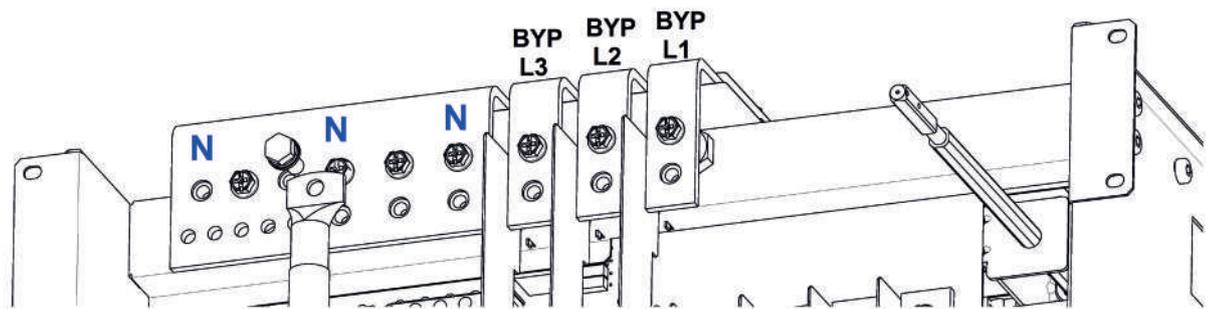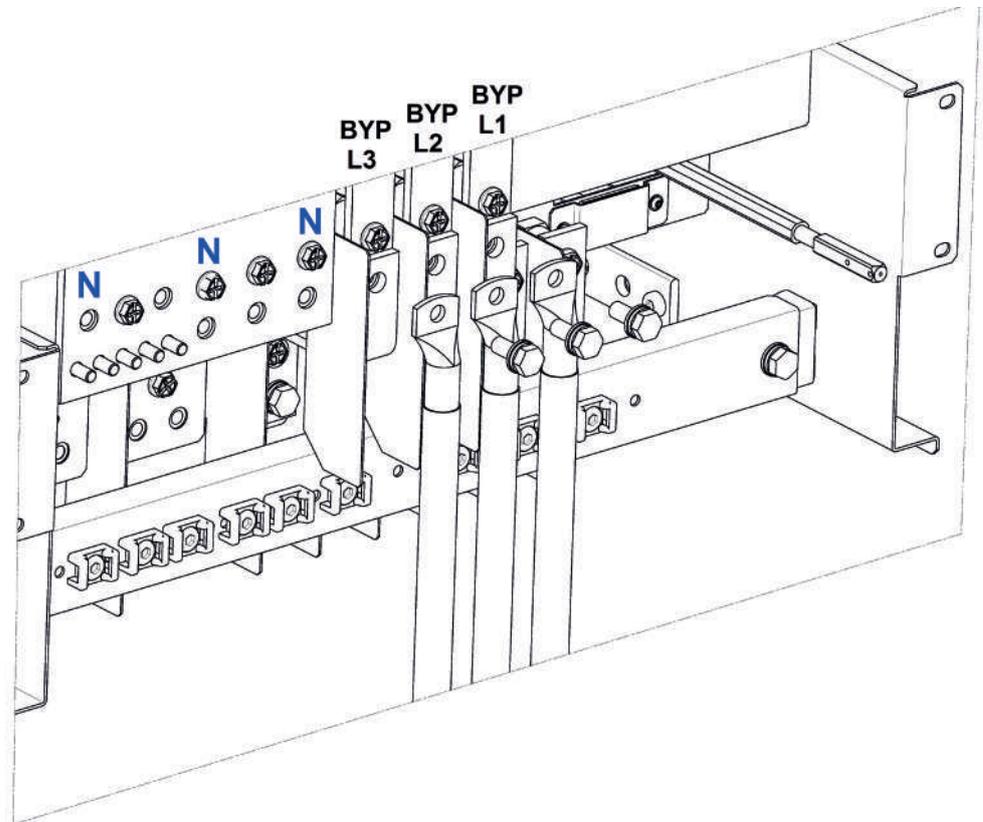

KEOR MOD 125 – input cables installation with input line in common with bypass line

In case the input line is separated from the bypass line, follow these steps:

- remove the metal jumper that connects the input line with the bypass line;
- crimp the input and neutral cables with M8 eyelets;
- connect the input cables L1, L2, L3 to the terminals IN L1, IN L2, IN L3 of the input busbar using three hex M8x20 screws along with M8 flat washers and M8 grower washers. The grower washer must always be put on top of the flat washer;
- do not change the phase sequence (L1, L2, L3);
- connect the input neutral cable to the neutral busbar with a hex M8x20 screw along with a M8 flat washer and a M8 grower washer. The grower washer must always be put on top of the flat washer.

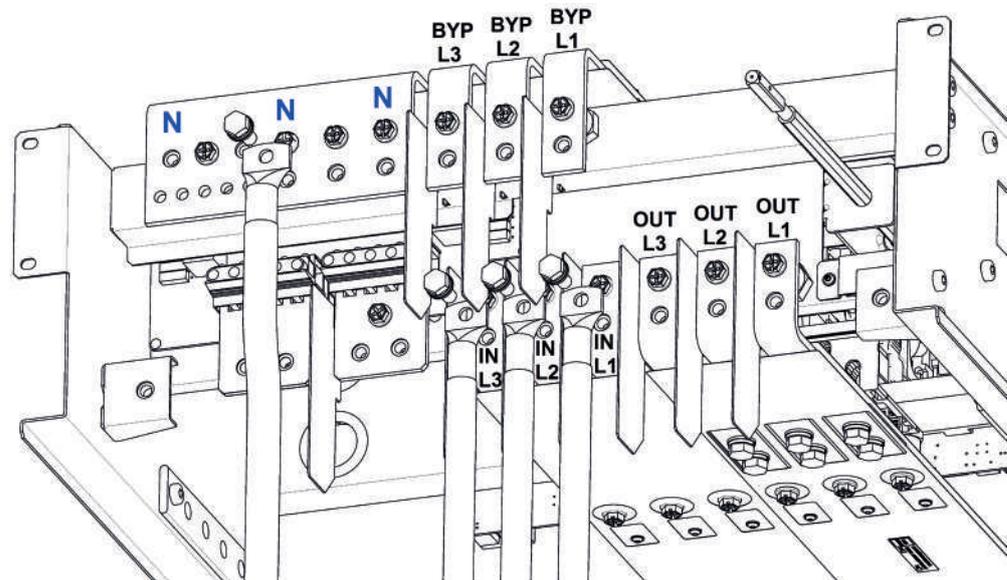


KEOR MOD 125 – input cables installation with input line separated from the bypass line

When the input line is separated from the bypass line, it is also possible to install an accessory for double cable. In this way it is possible for each terminal to use two cables with a smaller cross section than the one of a single cable.

For this installation, follow these steps:

- remove the metal jumper that connects the input line with the bypass line;
- crimp the input and neutral cables with M8 eyelets;
- connect the first three input cables L1, L2, L3 to the hole at the bottom of the accessory for double cable using three hex M8x20 screws along with M8 flat washers and M8 grower washers. The grower washer must always be put on top of the flat washer;
- connect the other three input cables L1, L2, L3 to the hole at the top of the accessory for double cable using three hex M8x25 screws along with M8 flat washers and M8 grower washers. Through these screws, fix the accessories to the terminals IN L1, IN L2, IN L3 of the input busbar. The grower washer must always be put on top of the flat washer;
- do not change the phase sequence (L1, L2, L3);
- connect the first neutral cable to the hole at the bottom of the accessory for double cable using a hex M8x20 screw along with a M8 flat washer and a M8 grower washer. The grower washer must always be put on top of the flat washer;
- connect the second neutral cable to the hole at the top of the accessory for double cable using a hex M8x25 screw along with M8 flat washer and M8 grower washer. Through this screw, fix the accessory to the terminal of the neutral busbar. The grower washer must always be put on top of the flat washer.

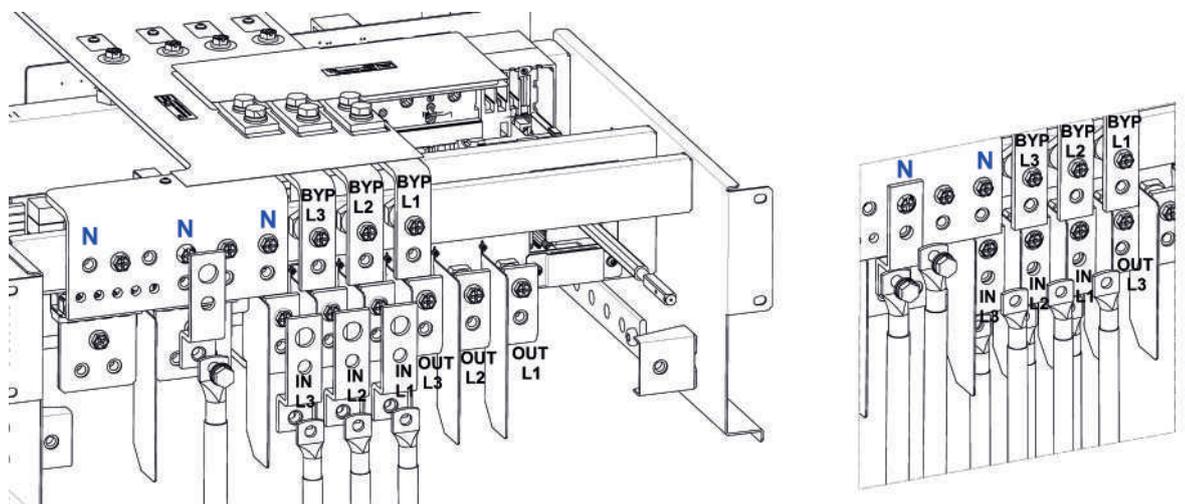



KEOR MOD 125 – input cables installation with accessories for double cable and input line separated from the bypass line

4. Installation

KEOR MOD 250

The default configuration has the input line in common with the bypass line through a metal jumper. If no change is required, follow these steps:



- unscrew the three hex M10x35 screws that fix the jumper to the input terminal of the busbar;
- crimp the input and neutral cables with M10 eyelets;
- connect the input cables L1, L2, L3 to the metal jumper of the terminals IN L1, IN L2, IN L3 of the input busbar using the three screws removed previously along with M10 flat washers and M10 grower washers. The grower washer must always be put on top of the flat washer;
- do not change the phase sequence (L1, L2, L3);
- connect the input neutral cable to the neutral busbar with a hex M10x30 screw along with a M10 flat washer and a M10 grower washer. The grower washer must always be put on top of the flat washer.

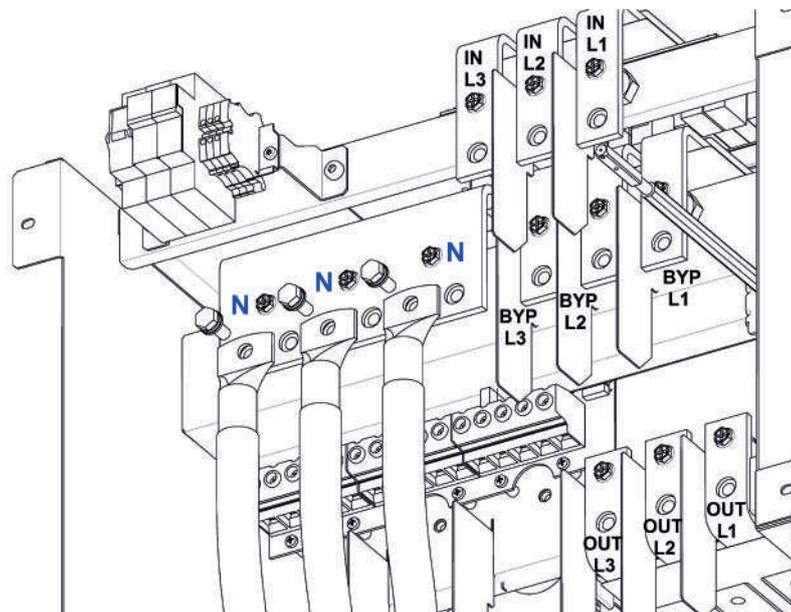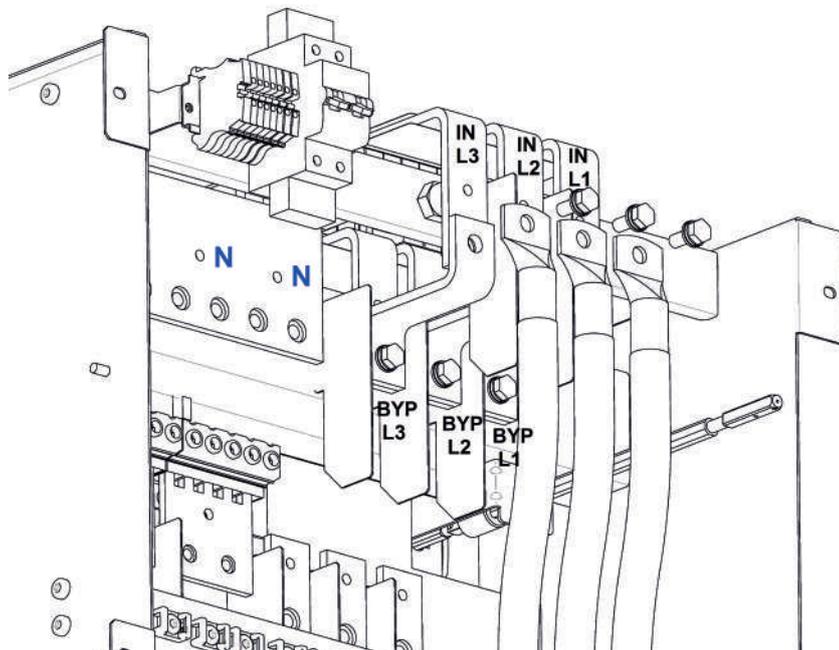

KEOR MOD 250 – input cables installation with input line in common with bypass line

In case the input line is separated from the bypass line, follow these steps:

- remove the metal jumper that connects the input line with the bypass line;
- crimp the input and neutral cables with M10 eyelets;
- connect the input cables L1, L2, L3 to the terminals IN L1, IN L2, IN L3 of the input busbar using three hex M10x30 screws along with M10 flat washers and M10 grower washers. The grower washer must always be put on top of the flat washer;
- do not change the phase sequence (L1, L2, L3);
- connect the input neutral cable to the neutral busbar with a hex M10x30 screw along with a M10 flat washer and a M10 grower washer. The grower washer must always be put on top of the flat washer.

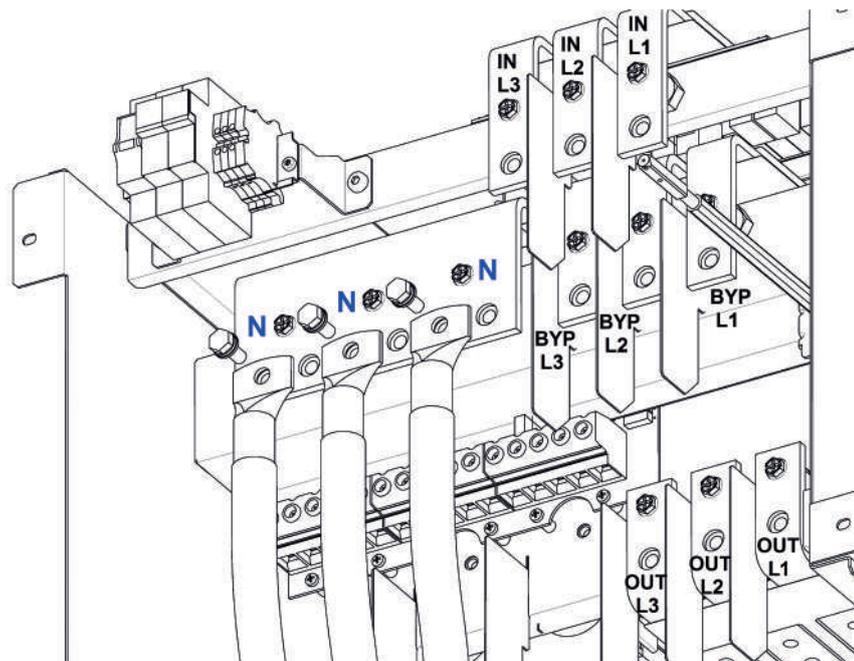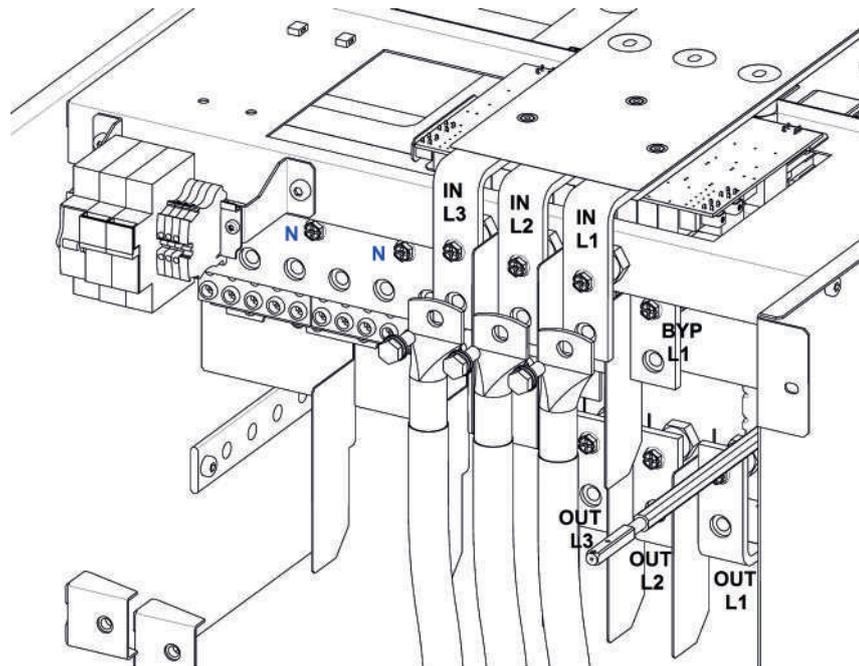


KEOR MOD 250 – input cables installation with input line separated from the bypass line

4. Installation

When the input line is separated from the bypass line, it is also possible to install an accessory for double cable. In this way it is possible for each terminal to use two cables with a smaller cross section than the one of a single cable.

For this installation, follow these steps:

- remove the metal jumper that connects the input line with the bypass line;
- crimp the input and neutral cables with M10 eyelets;
- connect the first three input cables L1, L2, L3 to the hole at the bottom of the accessory for double cable using three hex M10x30 screws along with M10 flat washers and M10 grower washers. The grower washer must always be put on top of the flat washer;
- connect the other three input cables L1, L2, L3 to the hole at the top of the accessory for double cable using three hex M10x35 screws along with M10 flat washers and M10 grower washers. Through these screws, fix the accessories to the terminals IN L1, IN L2, IN L3 of the input busbar. The grower washer must always be put on top of the flat washer;
- do not change the phase sequence (L1, L2, L3);
- connect the first input neutral cable to the hole at the bottom of the accessory for double cable using a hex M10x30 screw along with a M10 flat washer and a M10 grower washer. The grower washer must always be put on top of the flat washer;
- connect the second input neutral cable to the hole at the top of the accessory for double cable using a hex M10x35 screw along with M10 flat washer and M10 grower washer. Through this screw, fix the accessory to the terminal of the neutral busbar. The grower washer must always be put on top of the flat washer.

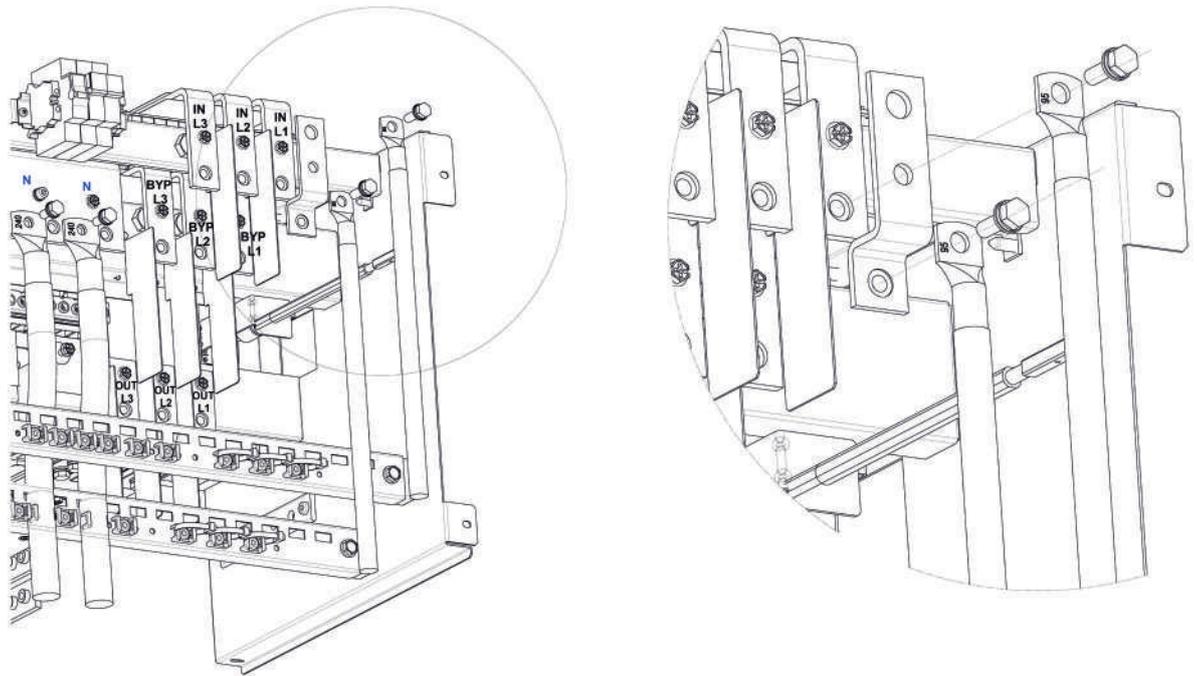

KEOR MOD 250 – input cables installation with accessories for double cable and input line separated from the bypass line

4.2.7 Bypass cables installation

The default configuration has the input line in common with the bypass line through a metal jumper. If no change is required, follow the steps indicated in the previous paragraph.

To perform a dual input installation with a separate bypass line, the following requirements must be met:

- the two lines must be supplied by the same MV/LV transformer source (same electrical potential). If this is not the case, an insulation transformer should be added in the bypass line upstream the UPS;
- separate protective devices are required for each line.

The UPS does not modify the neutral configuration of the system. The mains, bypass and output neutral are connected internally to each other.

Before the installation of the bypass cables, check the following:

- the bypass line must be able to provide a voltage of $400\text{ V} + 15\% - 20\%$;
- the available bypass power must be at least the same of the UPS nominal power;
- the cables to connect to the UPS must be isolated upstream and no voltage must be present;
- the earthing cable from the low voltage switchgear must be properly connected (see paragraph 4.2.3).




WARNING

The neutral bypass cable must always be connected.

KEOR MOD 125

In case the bypass line is separated from the input line, follow these steps:

- remove the metal jumper that connects the input line with the bypass line;
- crimp the bypass and neutral cables with M8 eyelets;
- connect the bypass cables L1, L2, L3 to the terminals **BYP L1**, **BYP L2**, **BYP L3** of the bypass busbar using three hex M8x20 screws along with M8 flat washers and M8 grower washers. The grower washer must always be put on top of the flat washer;
- do not change the phase sequence (L1, L2, L3);
- connect the bypass neutral cable to the neutral busbar with a hex M8x20 screw along with a M8 flat washer and a M8 grower washer. The grower washer must always be put on top of the flat washer.

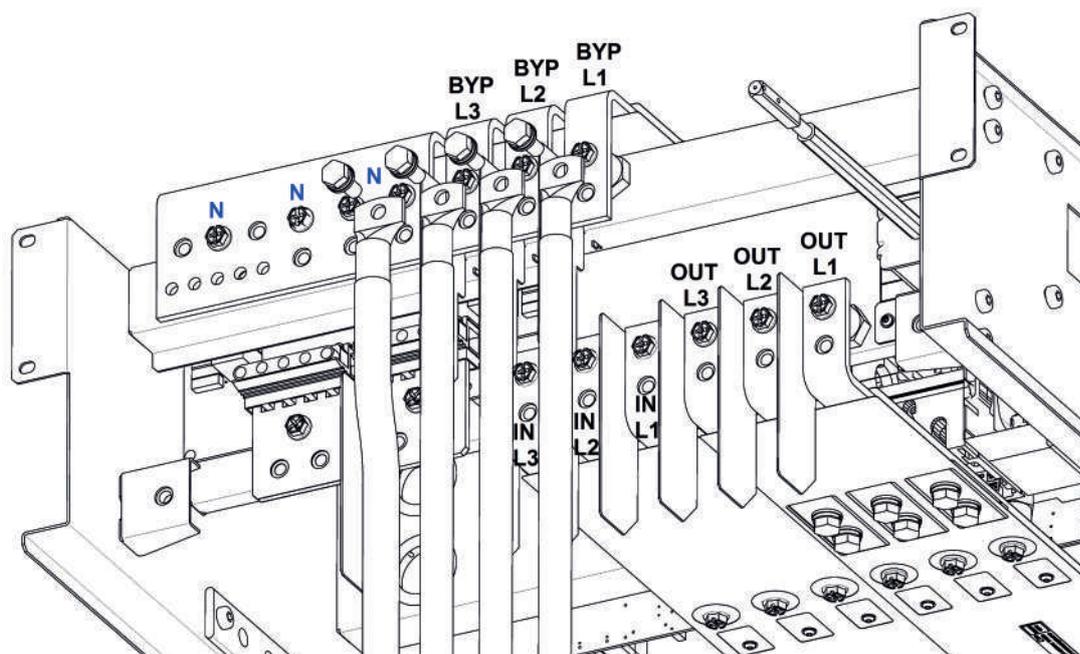


KEOR MOD 125 – bypass cables installation with input line separated from the bypass line

4. Installation

When the bypass line is separated from the input line, it is also possible to install an accessory for double cable. In this way it is possible for each terminal to use two cables with a smaller cross section than the one of a single cable.

For this installation, follow these steps:

- remove the metal jumper that connects the input line with the bypass line;
- crimp the bypass and neutral cables with M8 eyelets;
- connect the first three bypass cables L1, L2, L3 to the hole at the bottom of the accessory for double cable using three hex M8x20 screws along with M8 flat washers and M8 grower washers. The grower washer must always be put on top of the flat washer;
- connect the other three bypass cables L1, L2, L3 to the hole at the top of the accessory for double cable using three hex M8x25 screws along with M8 flat washers and M8 grower washers. Through these screws, fix the accessories to the terminals **BYP L1**, **BYP L2**, **BYP L3** of the input busbar. The grower washer must always be put on top of the flat washer;
- do not change the phase sequence (L1, L2, L3);
- connect the first bypass neutral cable to the hole at the bottom of the accessory for double cable using a hex M8x20 screw along with a M8 flat washer and a M8 grower washer. The grower washer must always be put on top of the flat washer;
- connect the second bypass neutral cable to the hole at the top of the accessory for double cable using a hex M8x25 screw along with M8 flat washer and M8 grower washer. Through this screw, fix the accessory to the terminal of the neutral busbar. The grower washer must always be put on top of the flat washer.


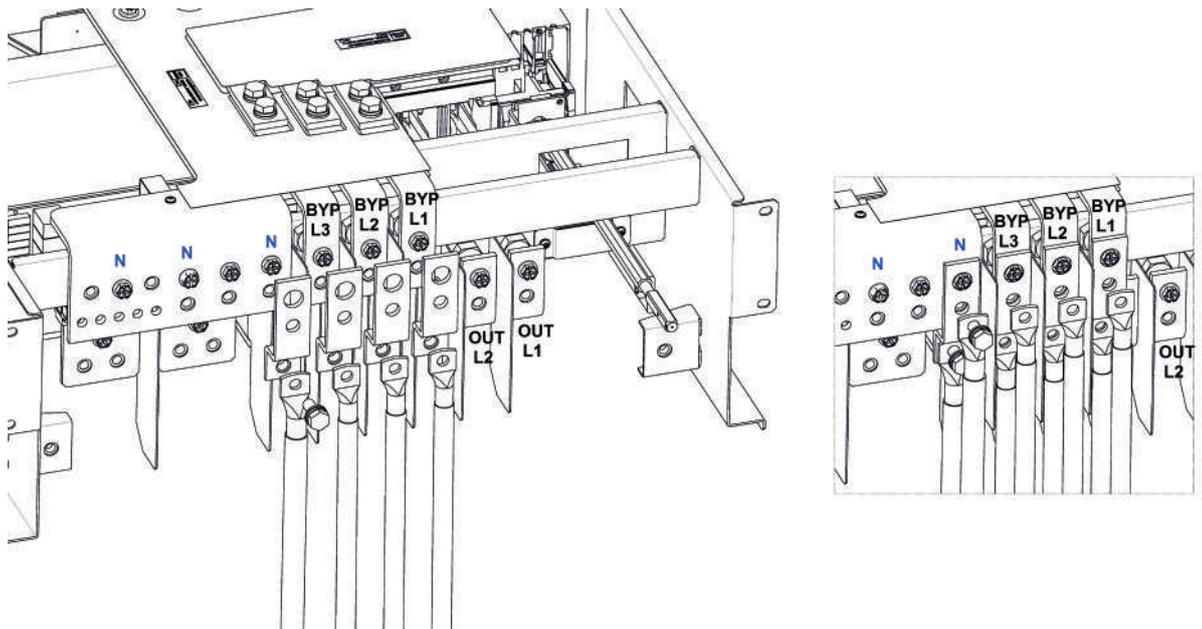


KEOR MOD 125 – bypass cables installation with accessories for double cable and input line separated from the bypass line

KEOR MOD 250

In case the bypass line is separated from the input line, follow these steps:

- remove the metal jumper that connects the input line with the bypass line;
- crimp the bypass and neutral cables with M10 eyelets;
- connect the bypass cables L1, L2, L3 to the terminals **BYP L1**, **BYP L2**, **BYP L3** of the bypass busbar using three hex M10x30 screws along with M10 flat washers and M10 grower washers. The grower washer must always be put on top of the flat washer;
- do not change the phase sequence (L1, L2, L3);
- connect the bypass neutral cable to the neutral busbar with a hex M10x30 screw along with a M10 flat washer and a M10 grower washer. The grower washer must always be put on top of the flat washer.

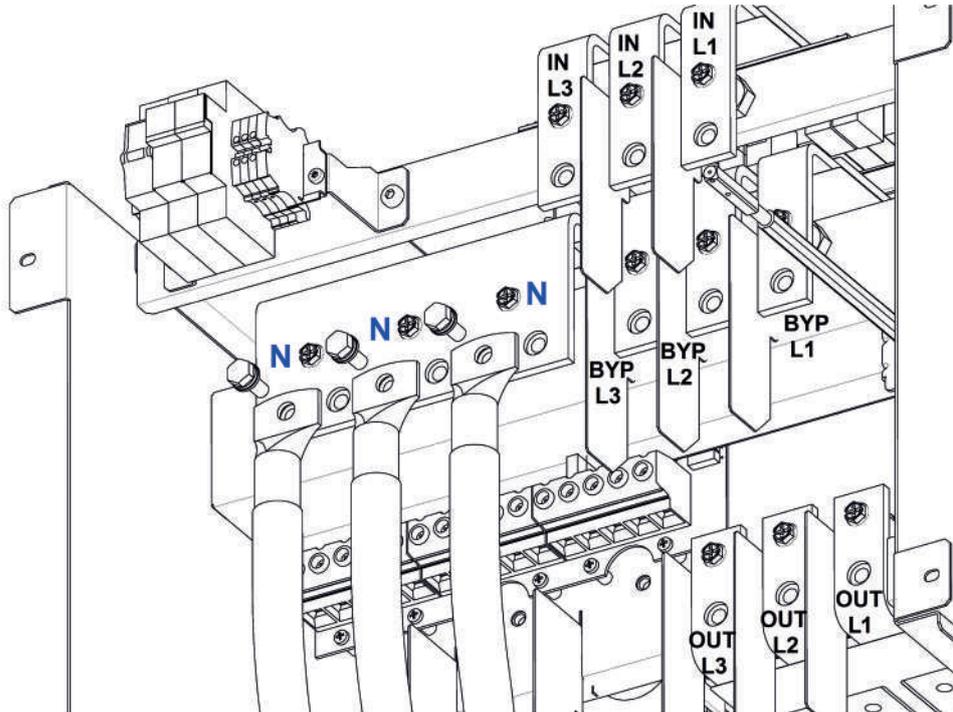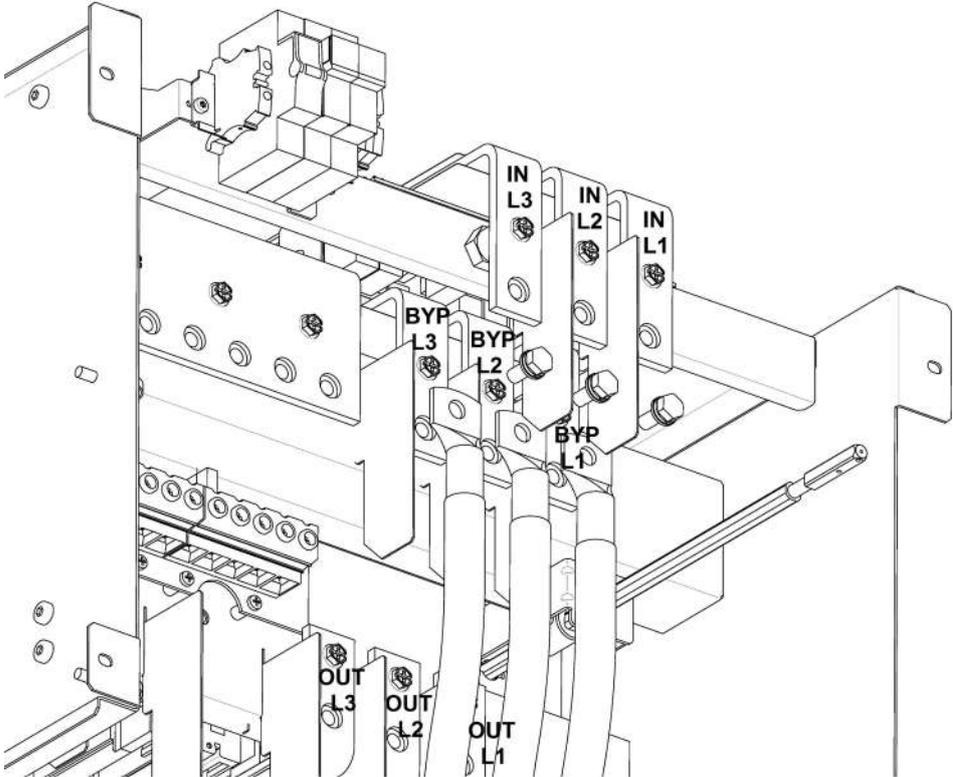


KEOR MOD 250 - bypass cables installation with input line separated from the bypass line


4. Installation

When the bypass line is separated from the input line, it is also possible to install an accessory for double cable. In this way it is possible for each terminal to use two cables with a smaller cross section than the one of a single cable.

For this installation, follow these steps:

- remove the metal jumper that connects the input line with the bypass line;
- crimp the bypass and neutral cables with M10 eyelets;
- connect the first three bypass cables L1, L2, L3 to the hole at the bottom of the accessory for double cable using three hex M10x30 screws along with M10 flat washers and M10 grower washers. The grower washer must always be put on top of the flat washer;
- connect the other three bypass cables L1, L2, L3 to the hole at the top of the accessory for double cable using three hex M10x35 screws along with M10 flat washers and M10 grower washers. Through these screws, fix the accessories to the terminals **BYP L1**, **BYP L2**, **BYP L3** of the bypass busbar. The grower washer must always be put on top of the flat washer;
- do not change the phase sequence (L1, L2, L3);
- connect the first bypass neutral cable to the hole at the bottom of the accessory for double cable using a hex M10x30 screw along with a M10 flat washer and a M10 grower washer. The grower washer must always be put on top of the flat washer;
- connect the second bypass neutral cable to the hole at the top of the accessory for double cable using a hex M10x35 screw along with M10 flat washer and M10 grower washer. Through this screw, fix the accessory to the terminal of the neutral busbar. The grower washer must always be put on top of the flat washer.

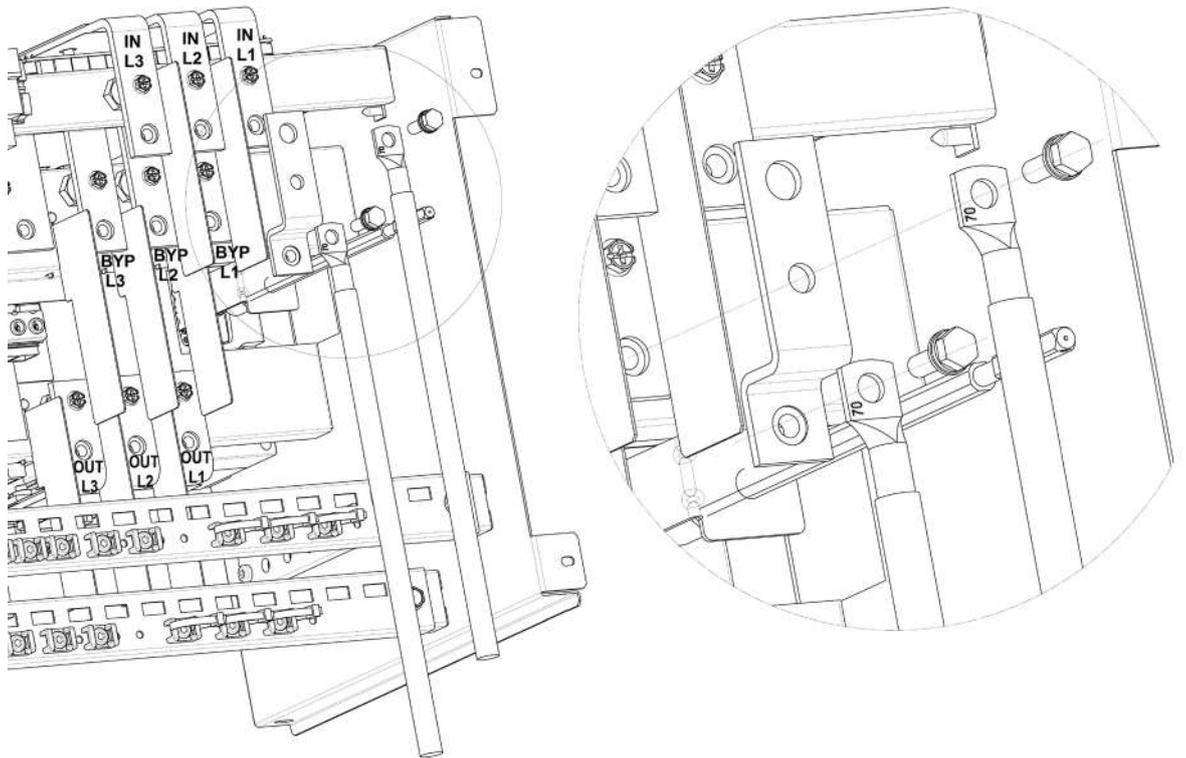

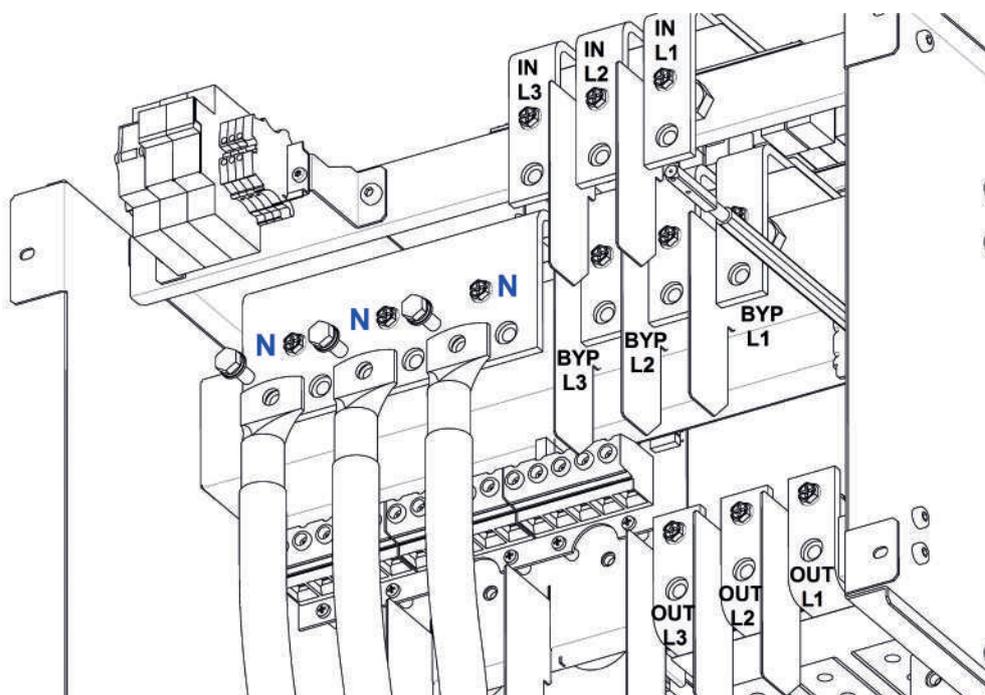

KEOR MOD 250 – bypass cables installation with accessories for double cable and input line separated from the bypass line

4.2.8 Output cables installation

Before the installation of the output cables, check the following:

- the nominal power of the UPS must be at least the same of the nominal power of the load;
- the cables to connect to the UPS must be isolated upstream and no voltage must be present;
- the earthing cable from the low voltage switchgear must be properly connected (see paragraph 4.2.3).

INDICATION

Provide a separate switchgear for the load.

The following information must be indicated on the system switchgear by means of stickers or similar:

- maximum nominal power of the load;
- maximum nominal power of the load at the load outlets;
- if a common switchgear is used (mains and UPS power outlets), make sure that there is an indication of the power source on every power outlet ("Mains" or "UPS").



WARNING


The neutral output cable must always be connected.

KEOR MOD 125

Follow these steps:

- crimp the output and neutral cables with M8 eyelets;
- connect the output cables L1, L2, L3 to the terminals OUT L1, OUT L2, OUT L3 of the output busbar using three hex M8x20 screws along with M8 flat washers and M8 grower washers. The grower washer must always be put on top of the flat washer;
- do not change the phase sequence (L1, L2, L3);
- connect the output neutral cable to the neutral busbar with a hex M8x20 screw along with a M8 flat washer and a M8 grower washer. The grower washer must always be put on top of the flat washer.

4. Installation

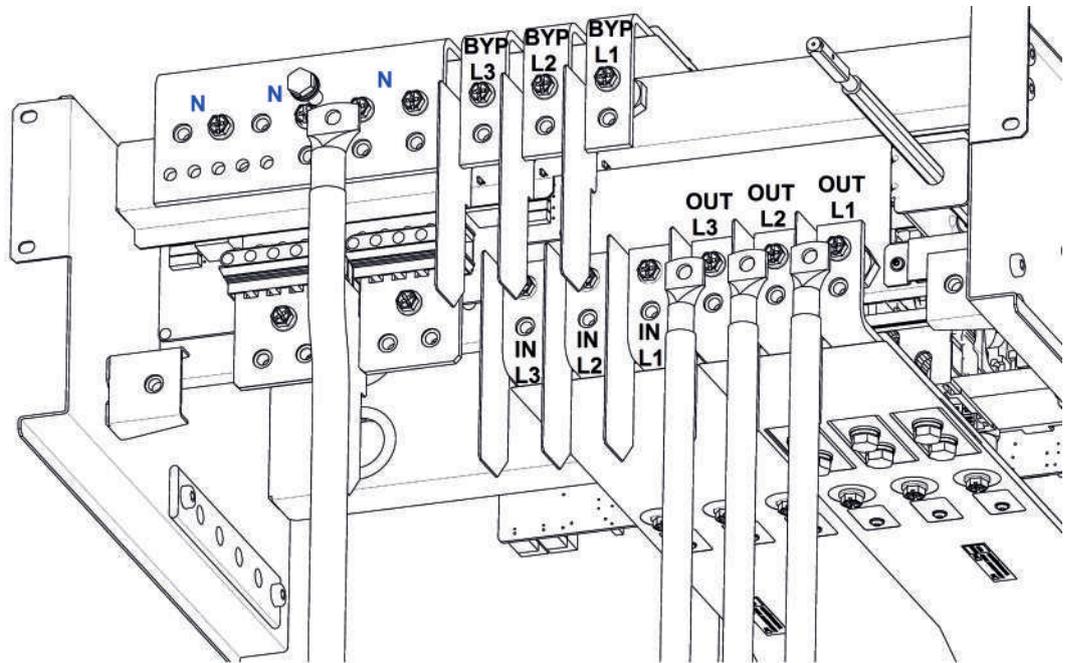


KEOR MOD 125 – output cables installation

It is also possible to install an accessory for double cable. In this way it is possible for each terminal to use two cables with a smaller cross section than the one of a single cable.

For this installation, follow these steps:

- crimp the output and neutral cables with M8 eyelets;
- connect the first three output cables L1, L2, L3 to the hole at the bottom of the accessory for double cable using three hex M8x20 screws along with M8 flat washers and M8 grower washers. The grower washer must always be put on top of the flat washer;
- connect the other three output cables L1, L2, L3 to the hole at the top of the accessory for double cable using three hex M8x25 screws along with M8 flat washers and M8 grower washers. Through these screws, fix the accessories to the terminals OUT L1, OUT L2, OUT L3 of the input busbar. The grower washer must always be put on top of the flat washer;
- do not change the phase sequence (L1, L2, L3);
- connect the first output neutral cable to the hole at the bottom of the accessory for double cable using a hex M8x20 screw along with a M8 flat washer and a M8 grower washer. The grower washer must always be put on top of the flat washer;
- connect the second output neutral cable to the hole at the top of the accessory for double cable using a hex M8x25 screw along with M8 flat washer and M8 grower washer. Through this screw, fix the accessory to the terminal of the neutral busbar. The grower washer must always be put on top of the flat washer.


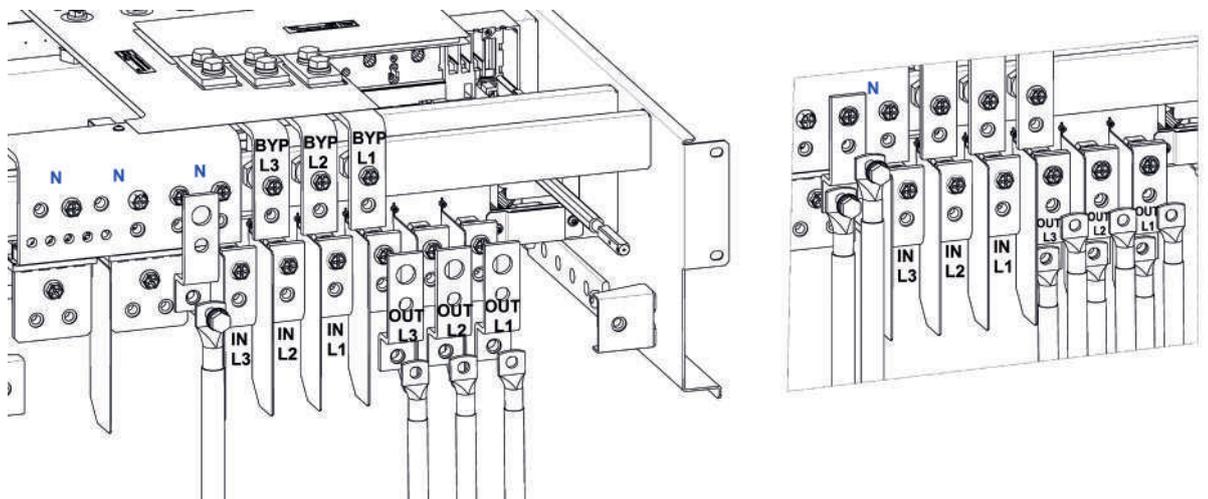


KEOR MOD 125 – output cables installation with accessories for double cable

KEOR MOD 250

Follow these steps:

- crimp the output and neutral cables with M10 eyelets;
- connect the output cables L1, L2, L3 to the terminals OUT L1, OUT L2, OUT L3 of the output busbar using three hex M10x30 screws along with M10 flat washers and M10 grower washers. The grower washer must always be put on top of the flat washer;
- do not change the phase sequence (L1, L2, L3);
- connect the output neutral cable to the neutral busbar with a hex M10x30 screw along with a M10 flat washer and a M10 grower washer. The grower washer must always be put on top of the flat washer.

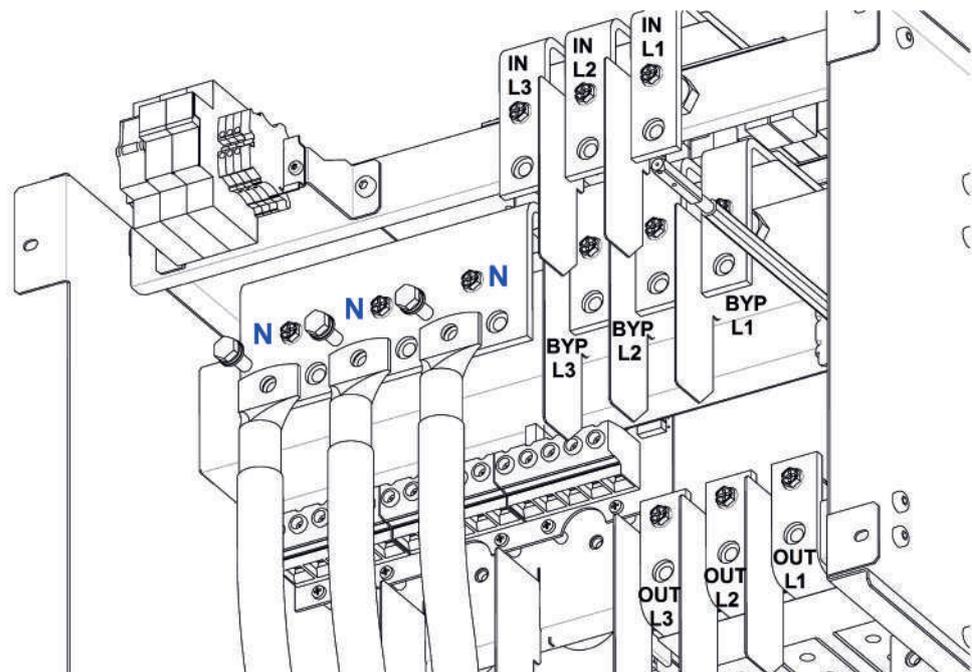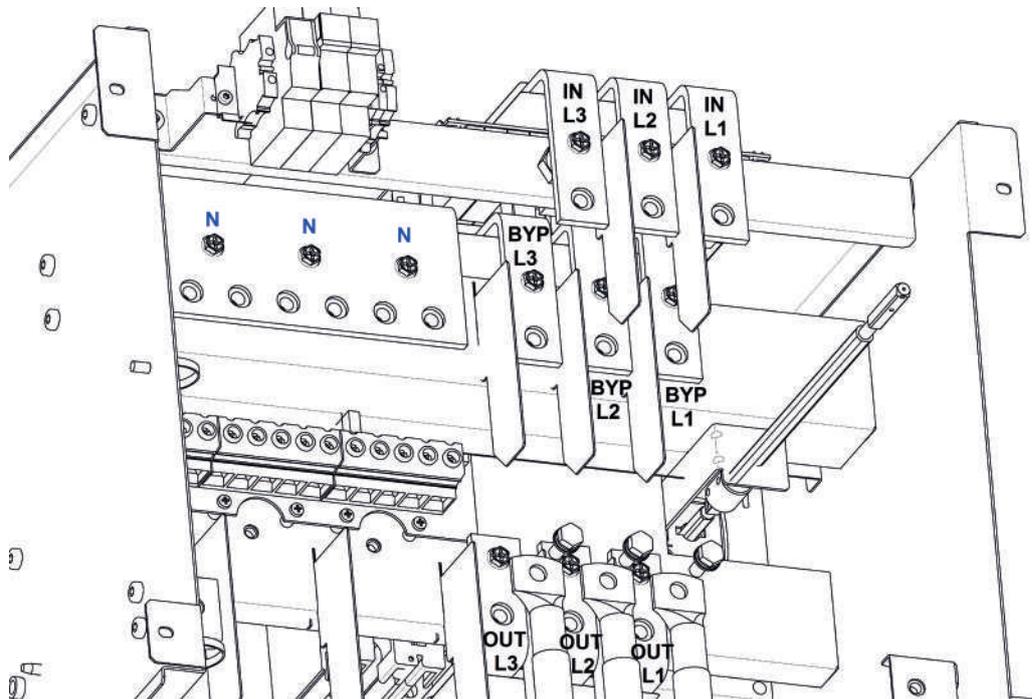


KEOR MOD 250 – output cables installation


4. Installation

It is also possible to install an accessory for double cable. In this way it is possible for each terminal to use two cables with a smaller cross section than the one of a single cable.

For this installation, follow these steps:

- crimp the output and neutral cables with M10 eyelets;
- connect the first three output cables L1, L2, L3 to the hole at the bottom of the accessory for double cable using three hex M10x30 screws along with M10 flat washers and M10 grower washers. The grower washer must always be put on top of the flat washer;
- connect the other three output cables L1, L2, L3 to the hole at the top of the accessory for double cable using three hex M10x35 screws along with M10 flat washers and M10 grower washers. Through these screws, fix the accessories to the terminals OUT L1, OUT L2, OUT L3 of the output busbar. The grower washer must always be put on top of the flat washer;
- do not change the phase sequence (L1, L2, L3);
- connect the first output neutral cable to the hole at the bottom of the accessory for double cable using a hex M10x30 screw along with a M10 flat washer and a M10 grower washer. The grower washer must always be put on top of the flat washer;
- connect the second output neutral cable to the hole at the top of the accessory for double cable using a hex M10x35 screw along with M10 flat washer and M10 grower washer. Through this screw, fix the accessory to the terminal of the neutral busbar. The grower washer must always be put on top of the flat washer.

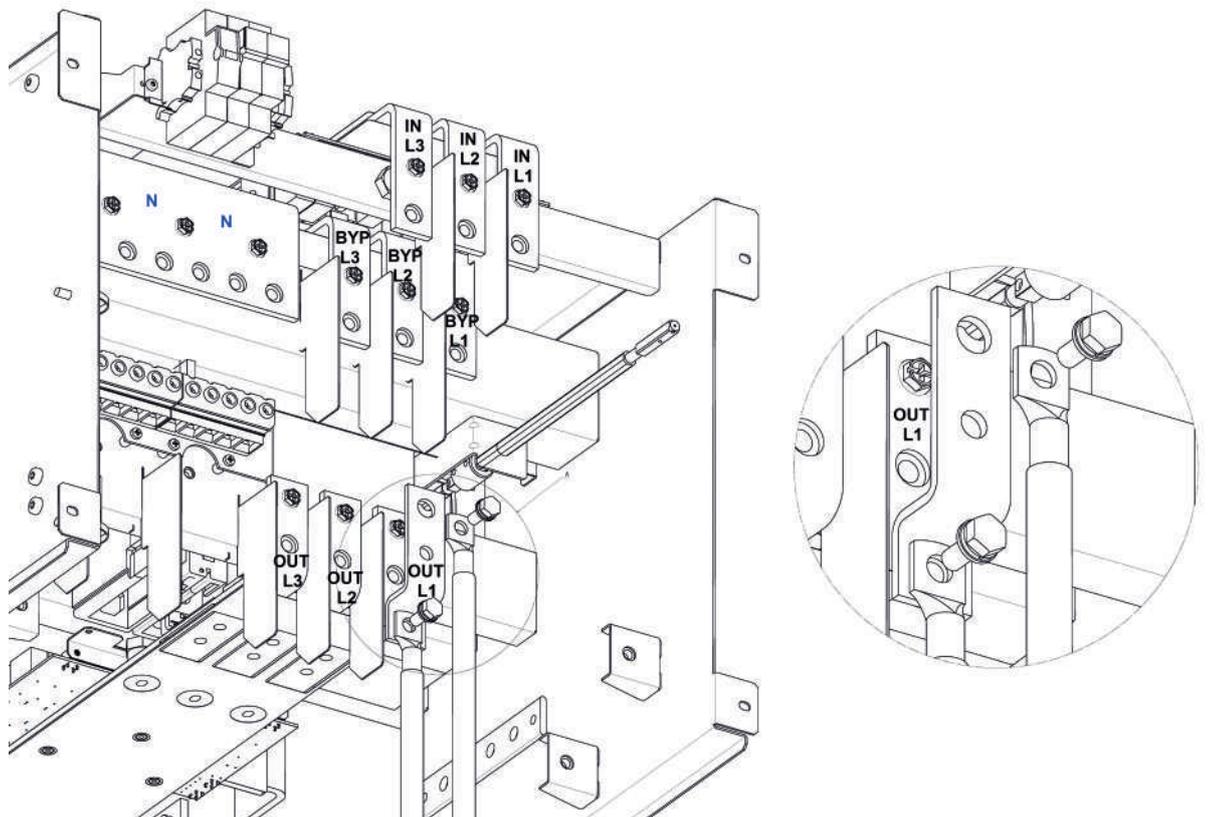

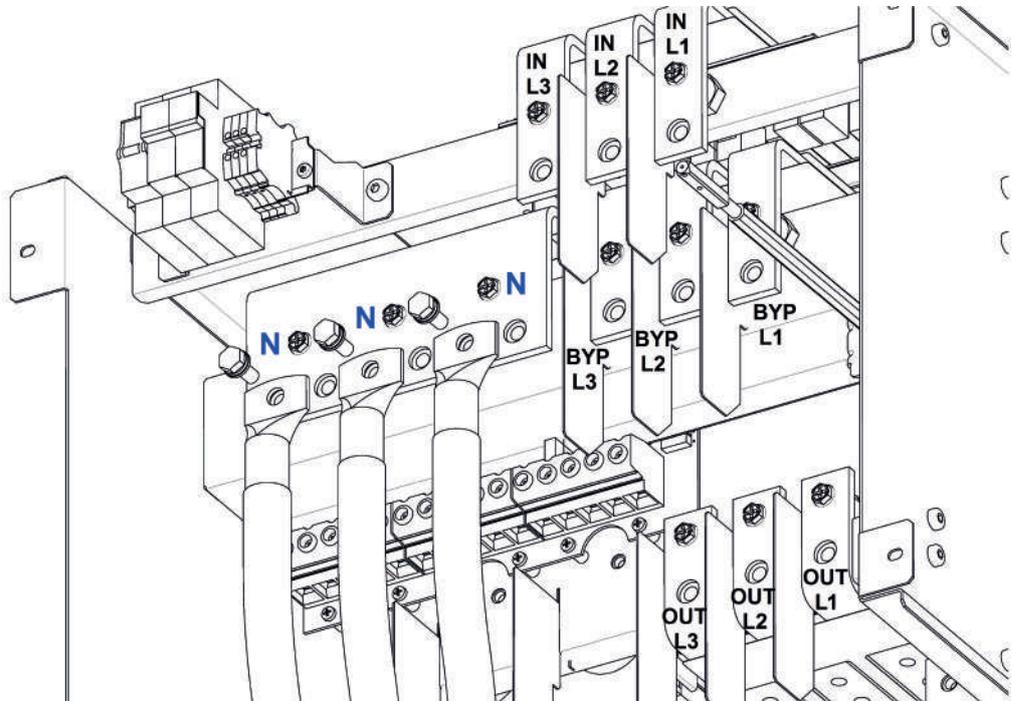

KEOR MOD 250 – output cables installation with accessories for double cable

4.2.9 Battery cables installation

The default configuration has the strings of batteries in common.

Before the installation of the input cables, check the following:

- the fuse breakers of all the external battery cabinets must be open;
- the cables to connect to the UPS must be isolated upstream and no voltage must be present;
- the earthing cable from the low voltage switchgear must be properly connected (see paragraph 4.2.3).




WARNING

The neutral battery cable must always be connected.

4. Installation

KEOR MOD 125


The default configuration has the strings of batteries in common.

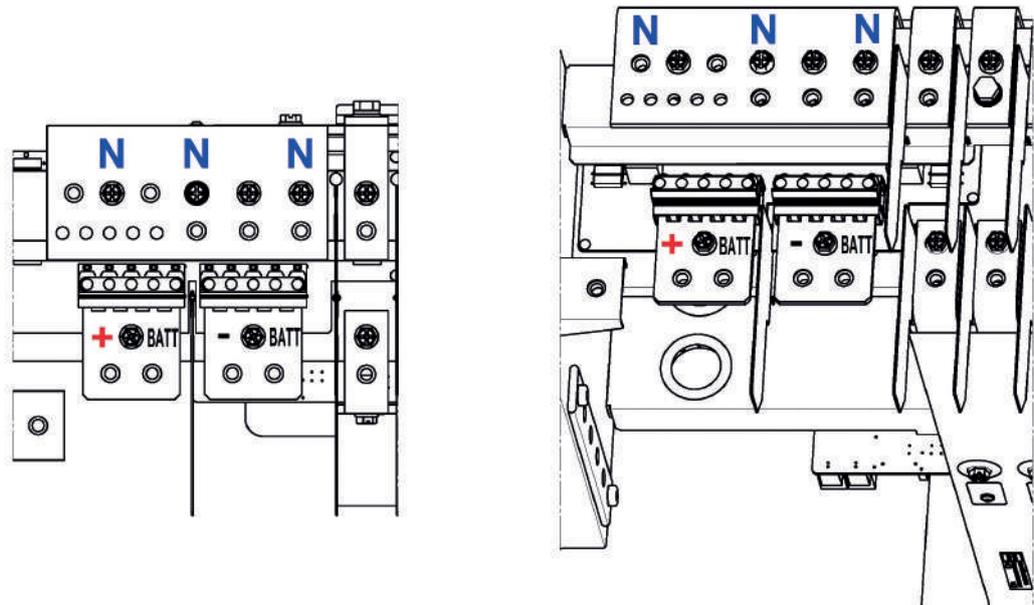

KEOR MOD 125 – battery terminals


If no change is required, follow these steps:

- crimp the positive, negative and neutral battery cables with M8 eyelets;
- connect the positive cable of the battery cabinet to the + BATT terminal using a hex M8x20 screw along with M8 flat washer and M8 grower washer. The grower washer must always be put on top of the flat washer;
- connect the negative cable of the battery cabinet to the - BATT terminal using a hex M8x20 screw along with M8 flat washer and M8 grower washer. The grower washer must always be put on top of the flat washer;
- connect the neutral cable of the battery cabinet to the neutral busbar using a hex M8x20 screw along with M8 flat washer and M8 grower washer. The grower washer must always be put on top of the flat washer.

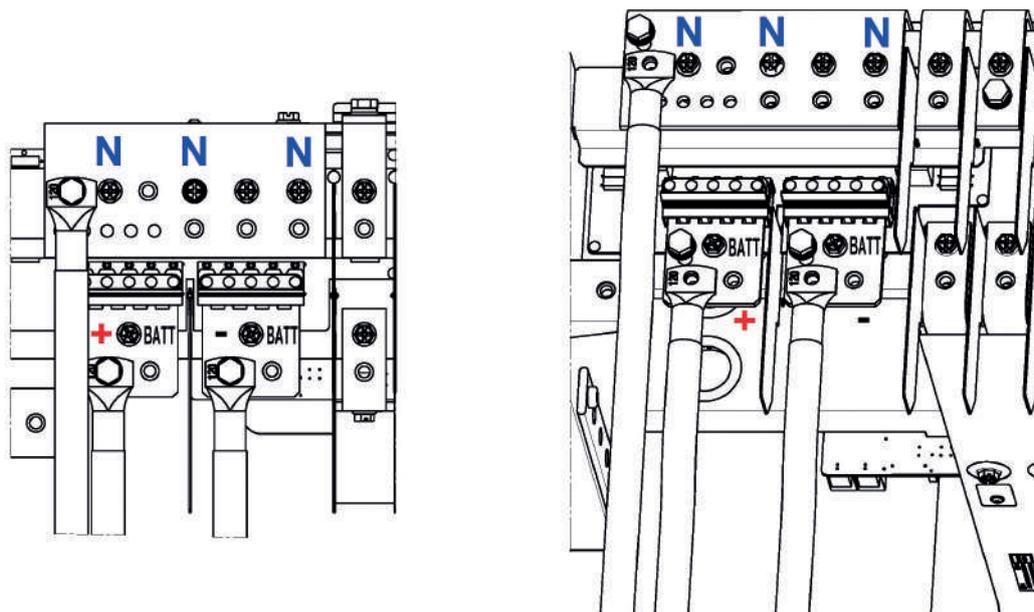


KEOR MOD 125 – battery cables installation with strings of batteries in common

In case there is the need to use a double cable for each terminal in order to use a smaller cross section for each cable, follow the previous procedure but install two cables for each terminal.

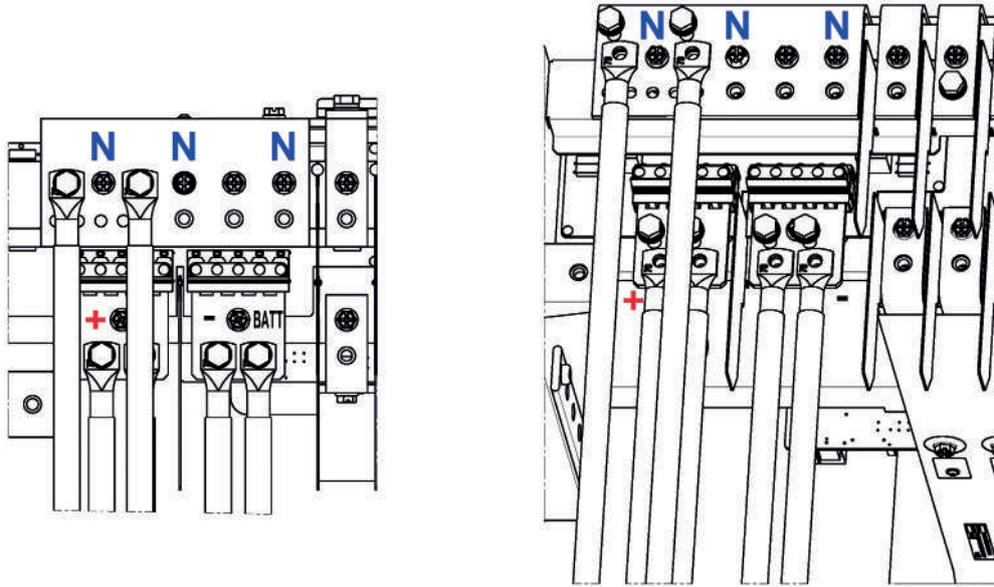

KEOR MOD 125 – battery cables installation with strings of batteries in common (double cable)


It is also possible to install independent string of batteries. In this case, each power module is associated to a unique string. The following picture shows the association between the power modules and the relative battery strings:

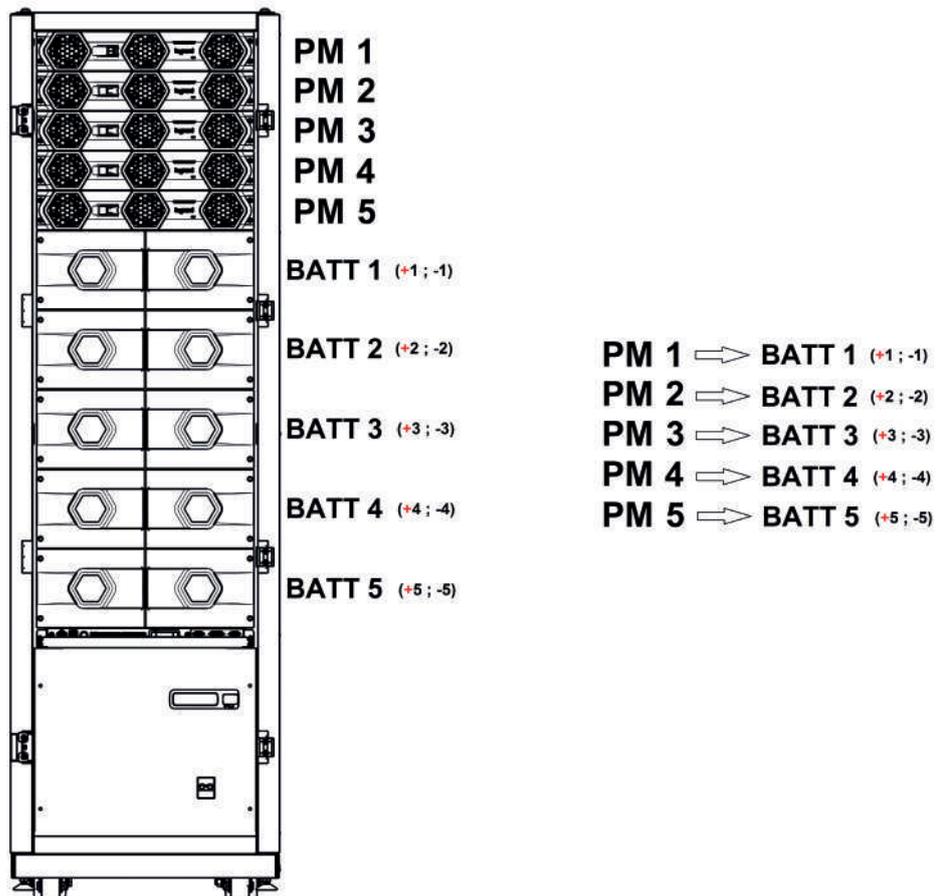


4. Installation

In case of installation of independent strings of batteries, follow these steps:

- remove the metal jumpers inserted in the positive and negative battery terminals.

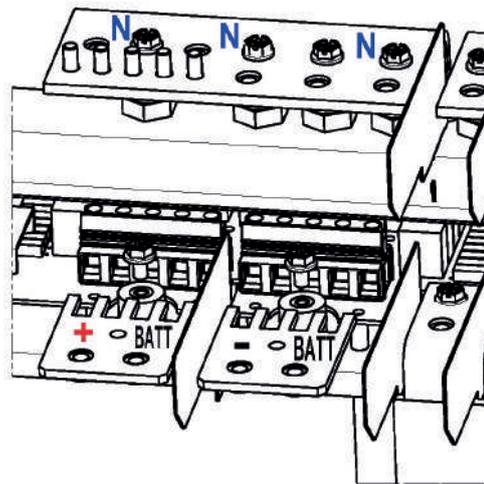

- remove the supports for the metal jumpers.

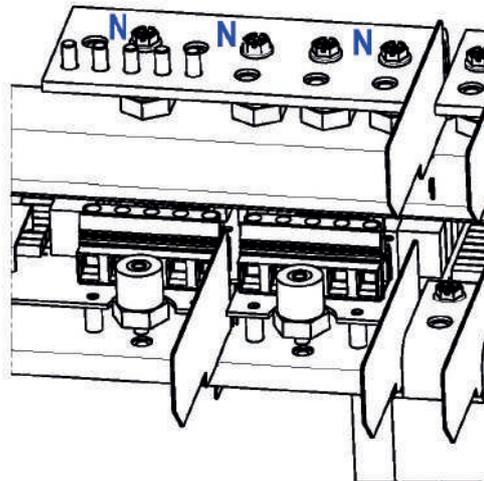

- insert the positive battery cables of the battery cabinets in the positive battery terminal and the negative battery cables of the battery cabinets in the negative battery terminal.

The maximum cross section accepted by the terminals is 16 mm².

Connect the battery cables on the terminals according to the string:


BATT1: +1 ; -1

BATT2: +2 ; -2


BATT3: +3 ; -3

BATT4: +4 ; -4

BATT5: +5 ; -5


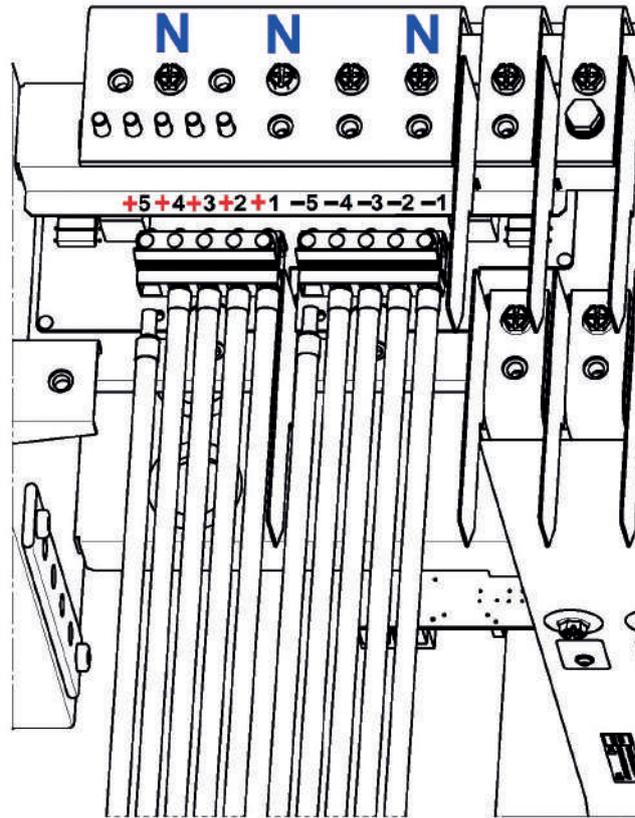


- take from the accessory box the metal support for the neutral battery cables and install it in the relative position on the neutral busbar.

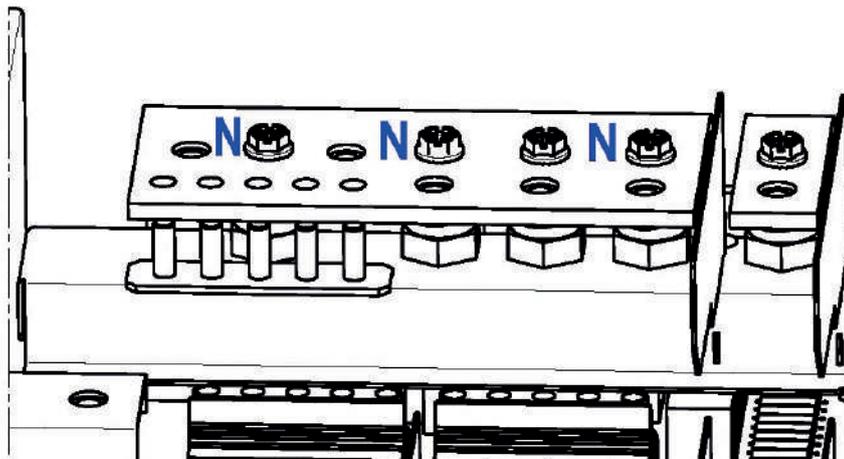


4. Installation

- crimp the neutral battery cables with M5 eyelets;
- connect the neutral cables of the battery cabinets to the metal support of the neutral busbar using hex M5 nuts along with M5 flat washer and M5 grower washers present in the accessory box. The grower washer must always be put on top of the flat washer.

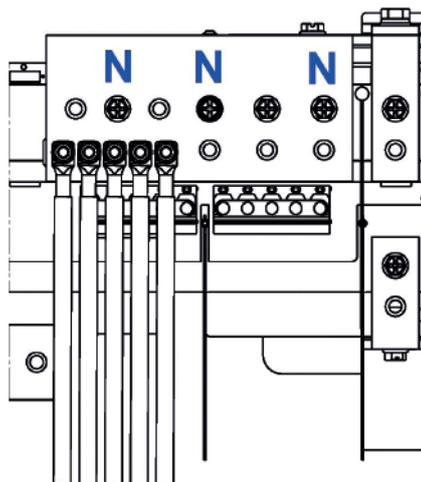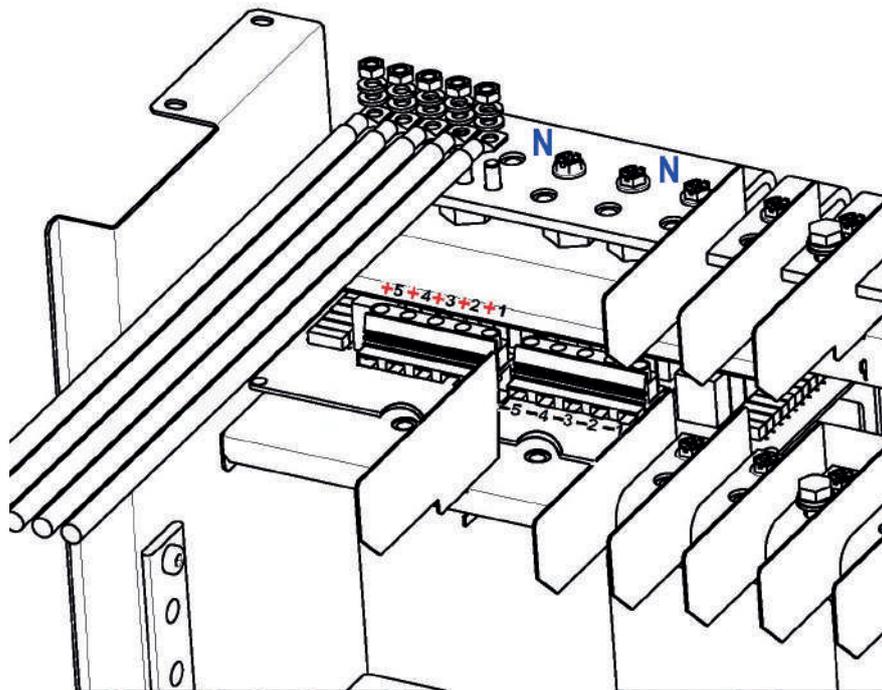

KEOR MOD 250


The default configuration has the strings of batteries in common.

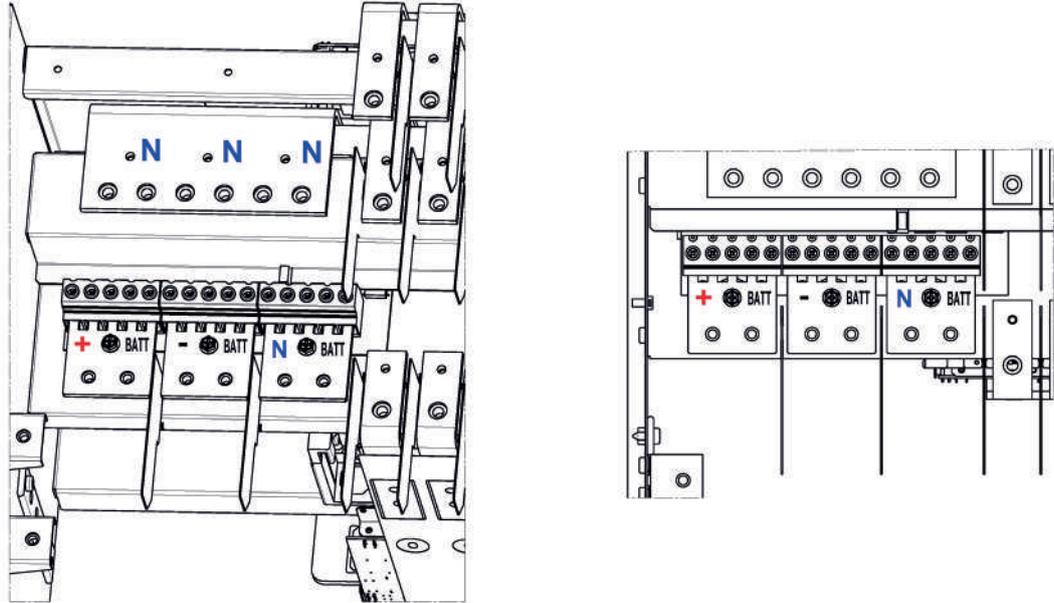

KEOR MOD 250 – battery terminals

If no change is required, follow these steps:


- crimp the positive, negative and neutral battery cables with M8 eyelets;
- connect the positive cable of the battery cabinet to the + BATT terminal using a hex M8x20 screw along with M8 flat washer and M8 grower washer. The grower washer must always be put on top of the flat washer;
- connect the negative cable of the battery cabinet to the - BATT terminal using a hex M8x20 screw along with M8 flat washer and M8 grower washer. The grower washer must always be put on top of the flat washer;
- connect the neutral cable of the battery cabinet to the N BATT terminal using a hex M8x20 screw along with M8 flat washer and M8 grower washer. The grower washer must always be put on top of the flat washer.

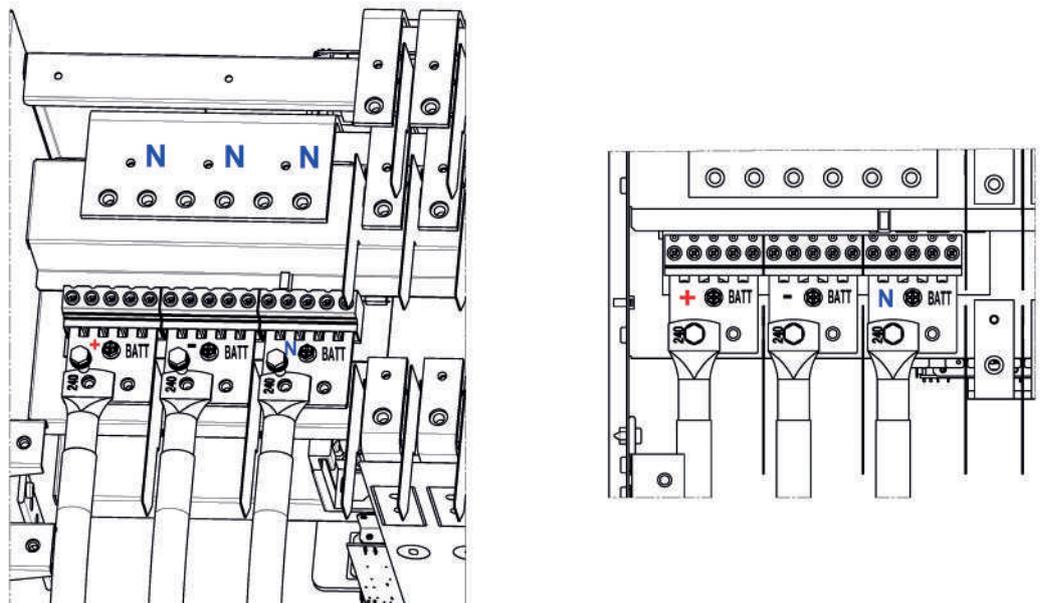

KEOR MOD 250 – battery cables installation with strings of batteries in common


4. Installation

In case there is the need to use a double cable for each terminal in order to use a smaller cross section for each cable, follow the previous procedure but install two cables for each terminal.

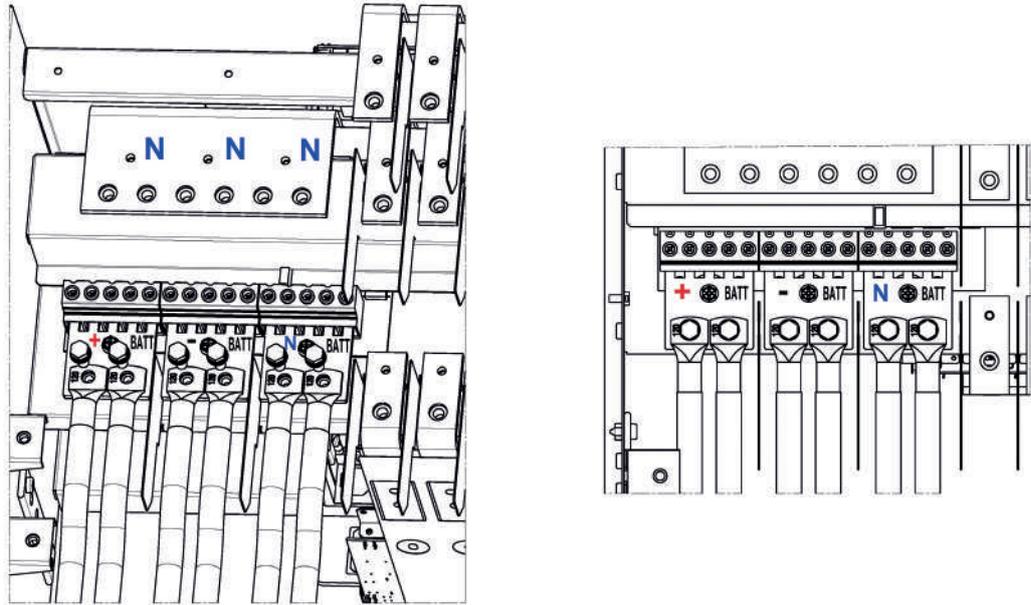


KEOR MOD 250 – battery cables installation with strings of batteries in common (double cable)

It is also possible to install independent string of batteries. In this case, each power module is associated to a unique string. The following picture shows the association between the power modules and the relative battery strings:

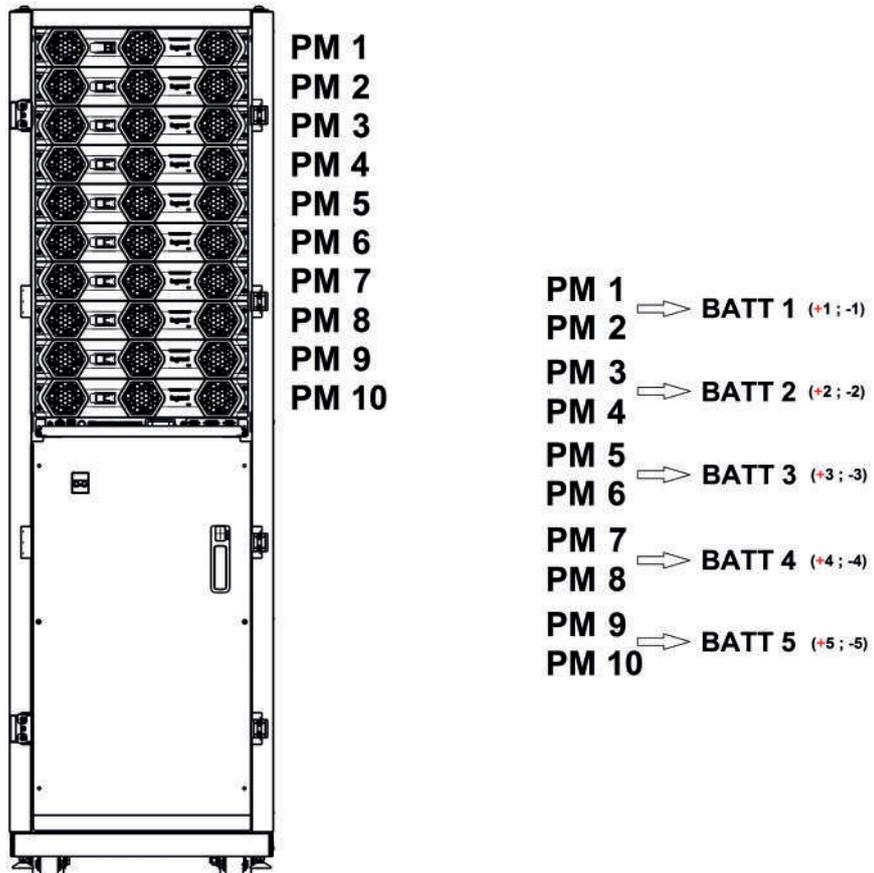

In case of installation of independent strings of batterie, follow these steps:

- remove the metal jumpers inserted in the battery terminals.

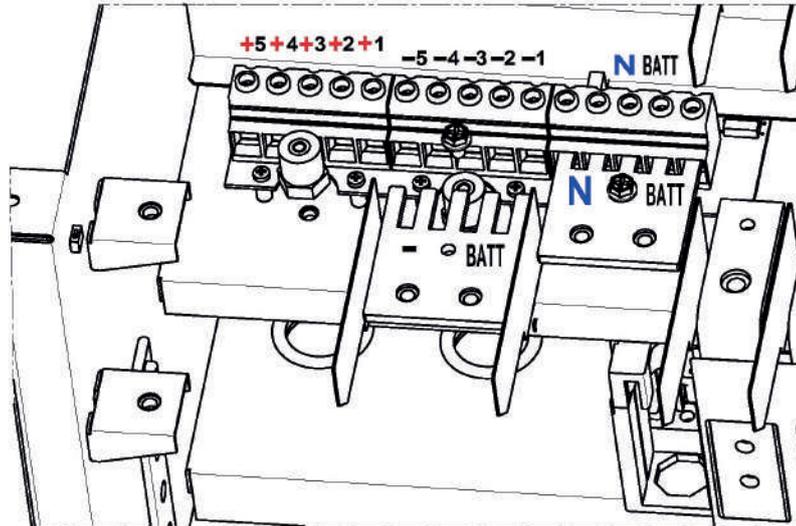

- insert the positive battery cables of the battery cabinets in the positive battery terminal, the negative battery cables of the battery cabinets in the negative battery terminal and the neutral battery cables of the battery cabinets in the neutral battery terminal.

The maximum cross section accepted by the terminals is 35 mm².

Connect the battery cables on the terminals according to the string:


BATT1: +1 ; -1

BATT2: +2 ; -2

BATT3: +3 ; -3

BATT4: +4 ; -4

BATT5: +5 ; -5

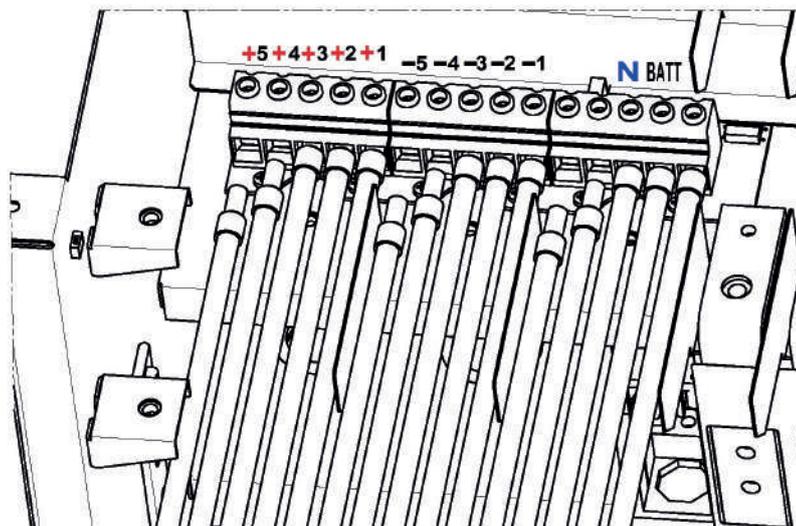


4. Installation

4.2.10 Parallel system

It is possible to connect up to four UPS in parallel to support redundancy.

The maximum load rate that can be supported by a parallel configuration is the same as for a single configuration. However, if one UPS becomes inoperable, the other units supplies the load without any load drop.

For the configuration of the parallel system, the first thing to do is to set the ID address of each UPS in the parallel system by means of the rotary switch of the SSS interface:

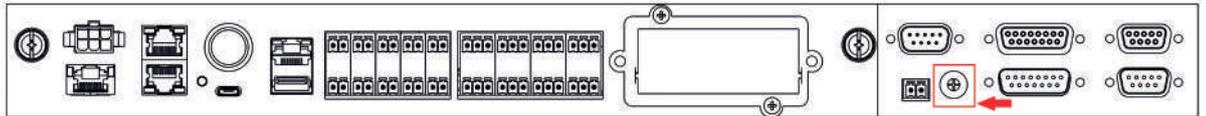

For Keor MOD 125, the ID address must be from 0 to 3. For Keor MOD 250, the ID address must be from 4 to 7.

If there is a parallel of two to four Keor MOD 125, this is the ID to set on each UPS:

UPS 1 : ID=0

UPS 2 : ID=1

UPS 3 : ID=2

UPS 4 : ID=3

The limit for the parallel for Keor MOD 250 is a total of 24 PM. It is possible to have a parallel of two full UPS units or of four UPS units having six PM each. If there is a parallel of two to four Keor MOD 250 cabinets, this is the ID to set on each UPS:



UPS 1 : ID=4

UPS 2 : ID=5



UPS 3 : ID=6

UPS 4 : ID=7




The BYPASS-SYNC and CAN-BUS ports of the SSS interfaces of the UPS must be connected among themselves as indicated in the following pictures:

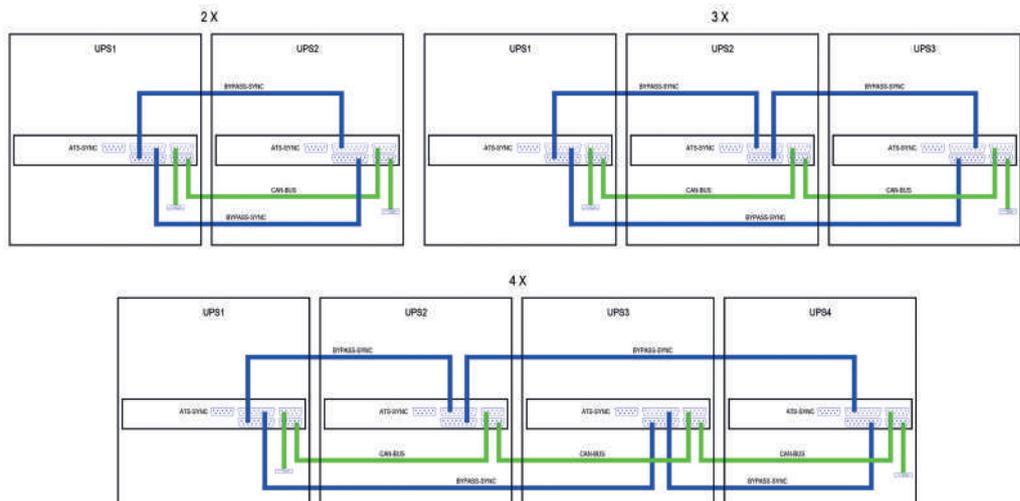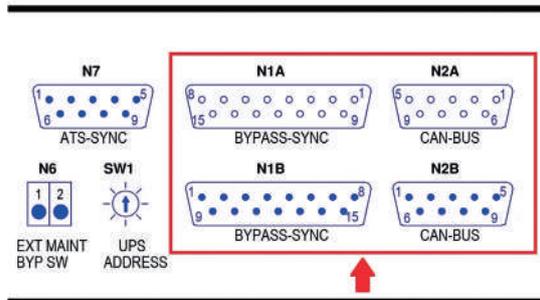


The cables for the connections of the ports of the SSS interfaces must have the following characteristics:

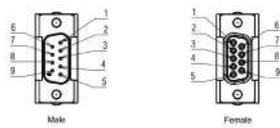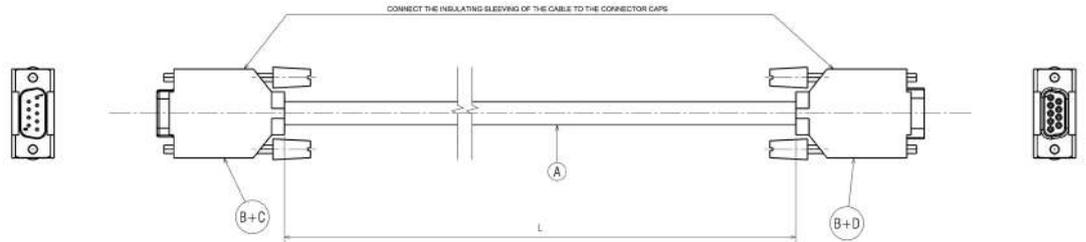

- A: Beiden 4 Pair Screened Multipair Industrial Cable, 28 AWG, 300V, twisted pair, Mfr. Part No.: 8134 060100
- B: Amphenol FCI 8655MH Series Die Cast Zinc D-sub Connector Hood, 9 Way, Strain Relief, Mfr. Part No.: 8655MH0901BLF
- C: Amphenol FCI Panel Mount, 9 Pin D-sub Connector Socket, Shell Size E, Mfr. Part No.: DE09S064TLF
- D: Amphenol FCI Panel Mount, 9 Pin D-sub Connector Plug, Shell Size E, Mfr. Part No.: DE09P064TXLF

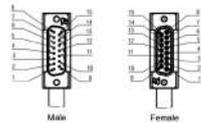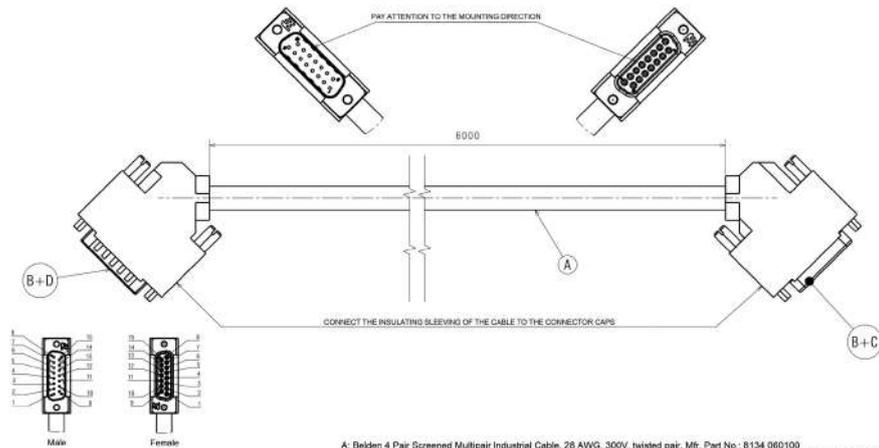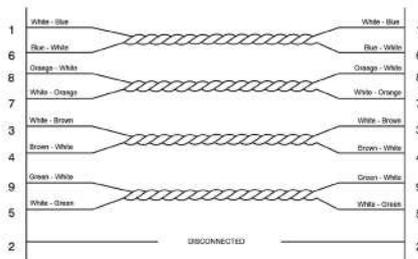


- A: Beiden 4 Pair Screened Multipair Industrial Cable, 28 AWG, 300V, twisted pair, Mfr. Part No.: 8134 060100
- B: Amphenol FCI Economical Series Die Cast Zinc Right Angle Backshell, 15 Way, Strain Relief, Mfr. Part No.: 8655MHRA1501LF
- C: Amphenol FCI Panel Mount, 15 Pin D-sub Connector Socket, Shell Size A, Mfr. Part No.: DA15S096TLF
- D: Amphenol FCI Panel Mount, 15 Pin D-sub Connector Plug, Shell Size A, Mfr. Part No.: DA15P096TXLF

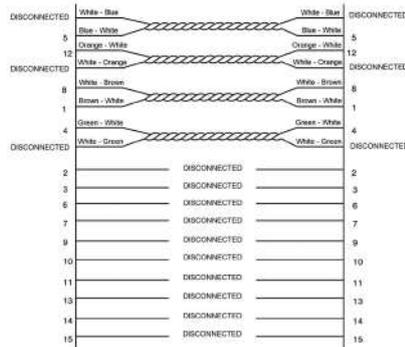


4. Installation

The cables can pass on the cabinet as indicated in the following pictures:

1

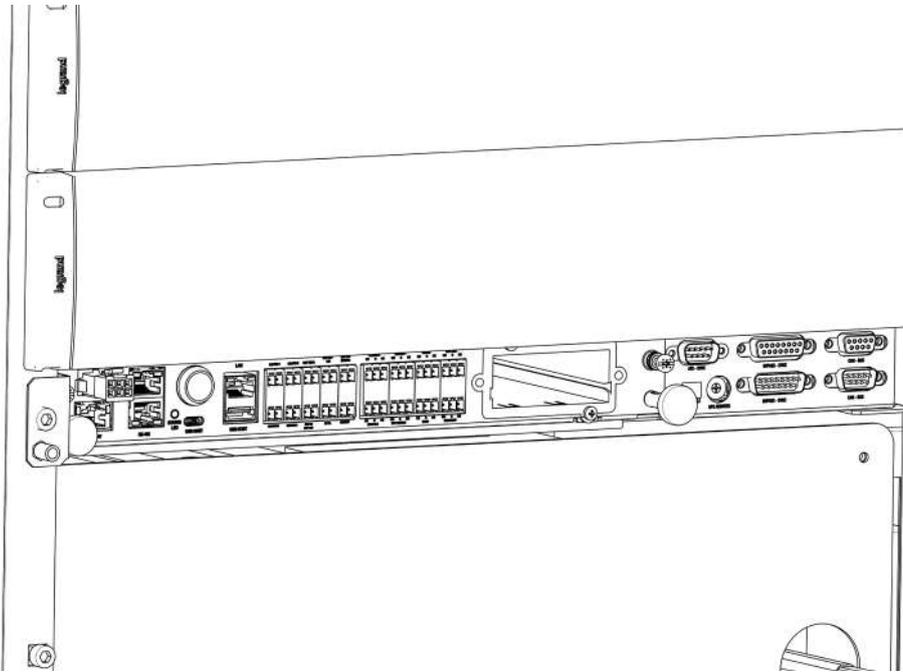


2

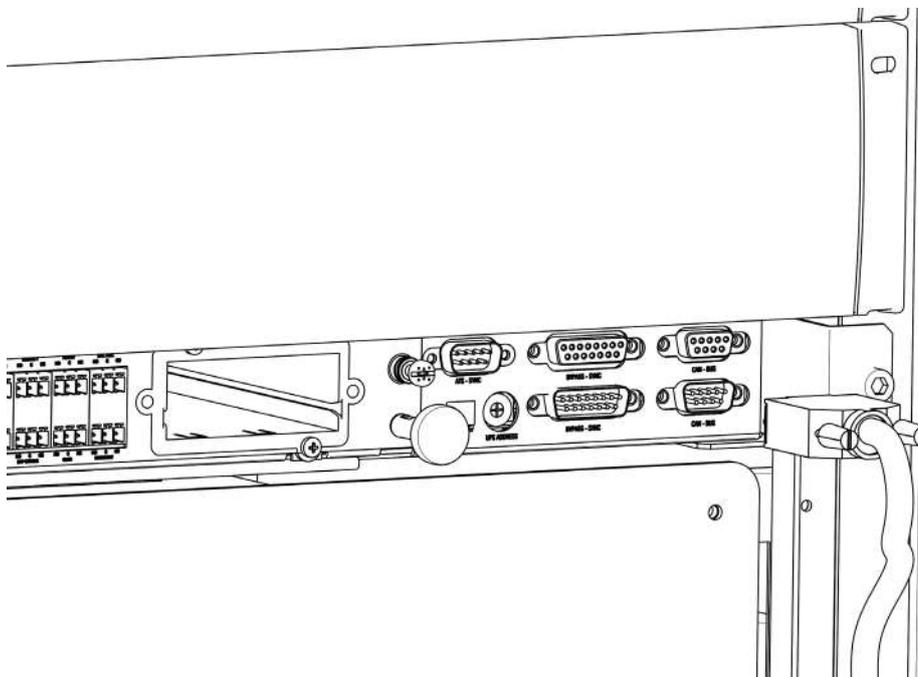

4. Installation


The first and the last UPS of the parallel system must be terminated. To do this, remove the fixed part of the SSS interface from the cabinet following the steps indicated on paragraph 6.3.3.

The fixed part of the SSS interface has two dip switches. SW2 is linked to N2B (the male connector of the CAN-BUS port of the SSS interface). SW3 is linked to N2A (the female connector of the CAN-BUS port of the SSS interface).

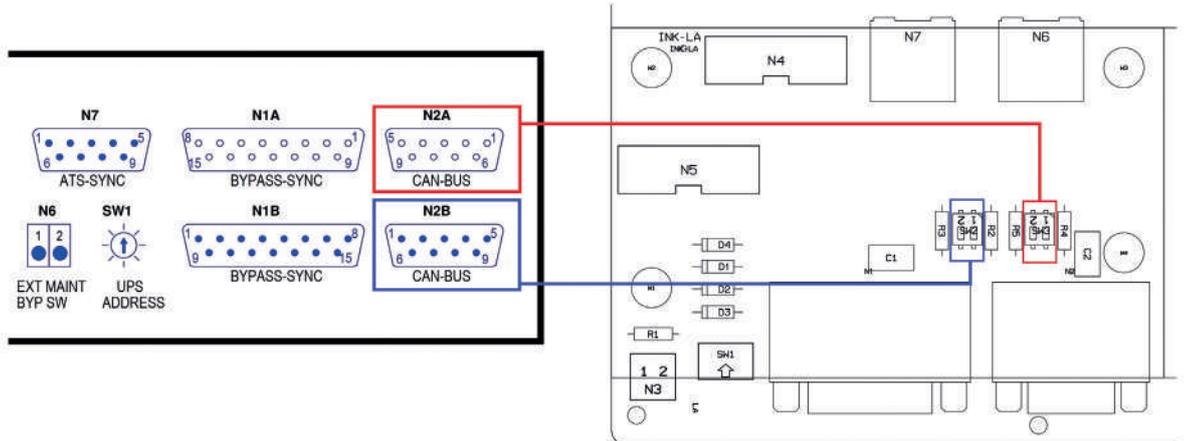


According to which CAN-BUS port is used on the first and on the last UPS of the parallel system, the relative dip switch must be set to ON if the port is free or to OFF if the cable is connected.

For example, for the configuration shown before, set the dip switch as indicated in the following picture:

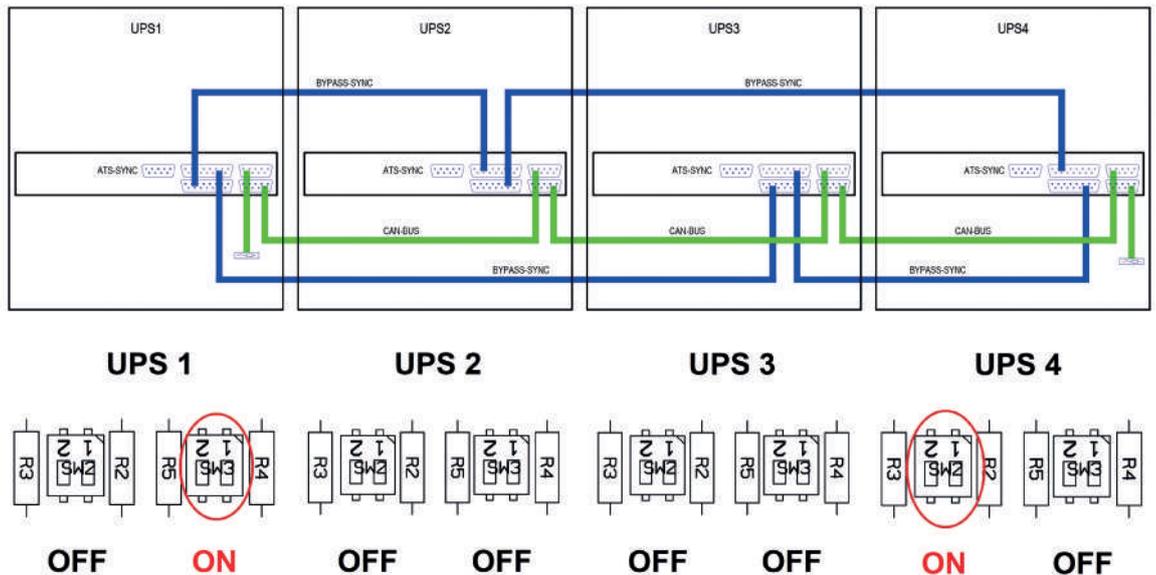

For the installation of the cables for the parallel system, it is recommended to provide an external system bypass as indicated in the following connection diagram:

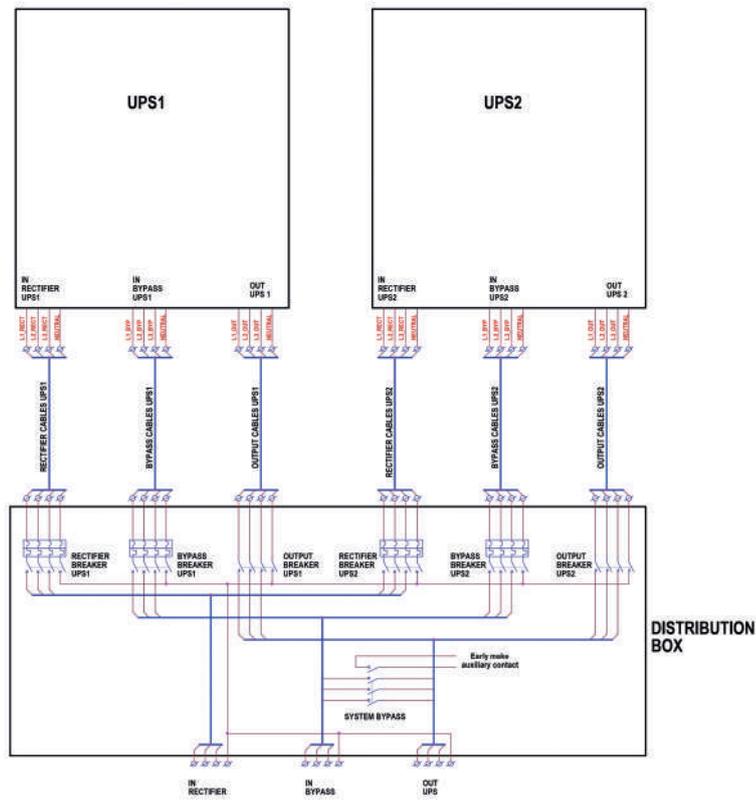

Follow these steps:

- connect the PE (Protective Earth) between the UPS units to ensure an equipotential bonding;
- connect the input line and the bypass line (including the earthing cable) of the mains to the distribution box where it also present the external system bypass;
- connect the load to the output line of the distribution box;
- connect the input cables for each UPS (see paragraph 4.2.6) to the input line of the distribution box;
- connect the bypass cables for each UPS (see paragraph 4.2.7) to the bypass line of the distribution box. These cables must have the same length and the same cross section;
- connect the output cables for each UPS (see paragraph 4.2.8) to the output line of the distribution box. These cables must have the same length and the same cross section.


Use only the external system bypass for maintenance and block the maintenance bypass of each single UPS unit to 0 (open) with a lock.

An early make contact of the external maintenance bypass must be connected to the N6 terminal of the SSS interface (EXT MAINT BYP SW) of one UPS unit of the parallel system (see paragraph 4.5).

If redundancy is required, add an early make contact from the external maintenance bypass for each N6 terminal of the SSS interfaces of the UPS units.

4. Installation

The following diagram indicates how to connect battery cabinets to a parallel system:

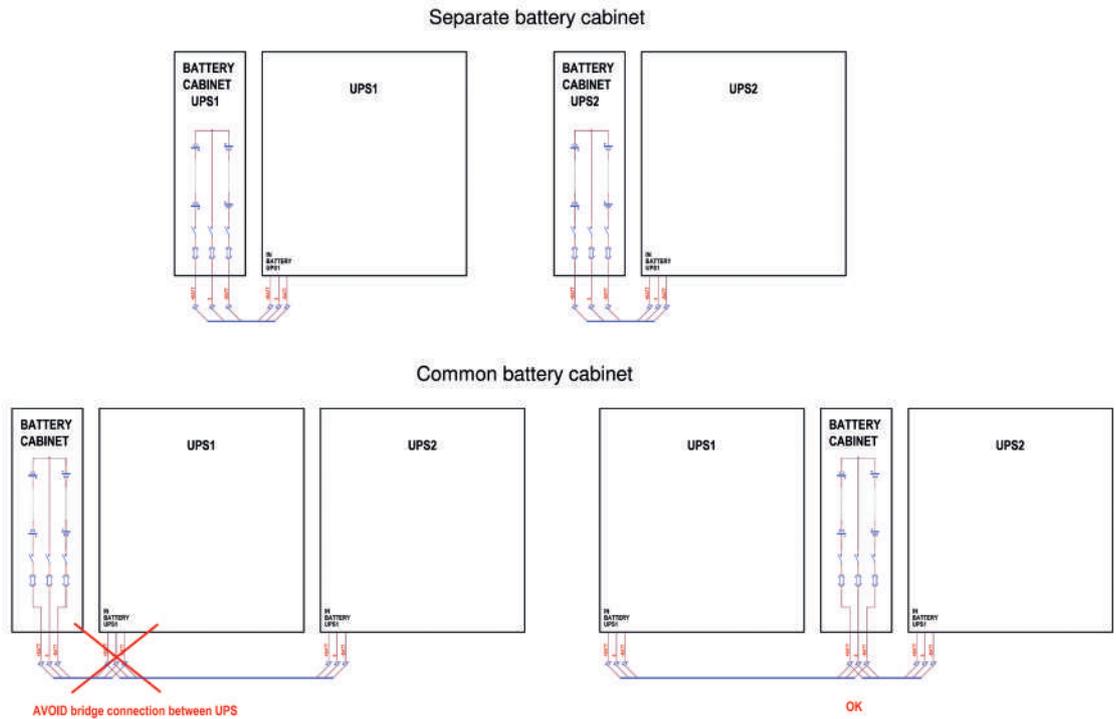

4.3 Power modules installation

Once all the electrical connections have been made, close the distribution panels and fix them by screwing all the hex socket M6x16 screws along with M6 toothed washers.

It is then possible to move onto the insertion of the power modules into the UPS.


During the installation it is necessary to use the appropriate Personal Protective Equipment like protective gloves and anti-accident shoes (see paragraph 2.3).

INDICATION


To guarantee the stability of the Keor MOD 125 cabinet, first install the power modules and only later the battery drawers.

Insert the power modules one at a time starting from the top of the cabinet.

Insert two screwdrivers in the upper parts of the plastic slot cover where the power module must be inserted. Slightly turn the screwdrivers down to unhook the cover.

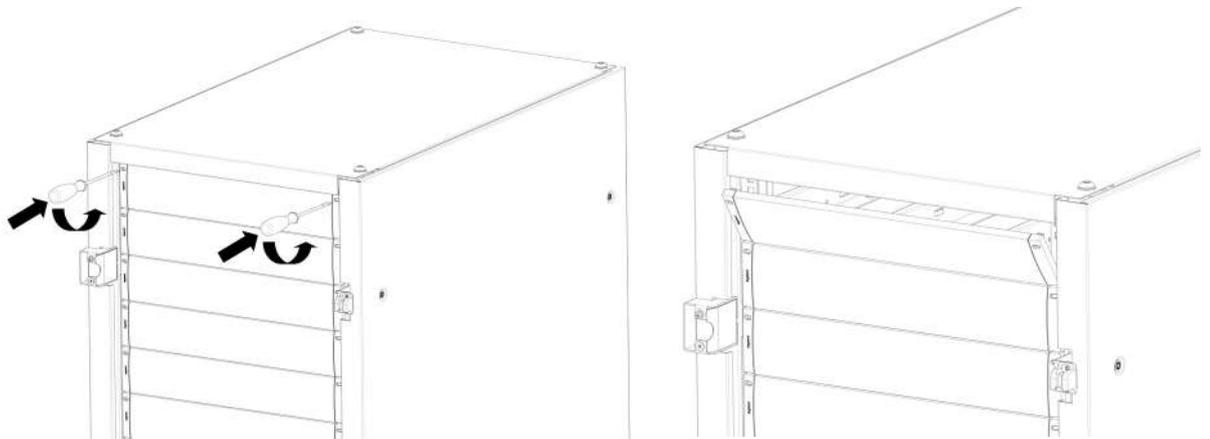


Handle the power module from his sides and never from the front.

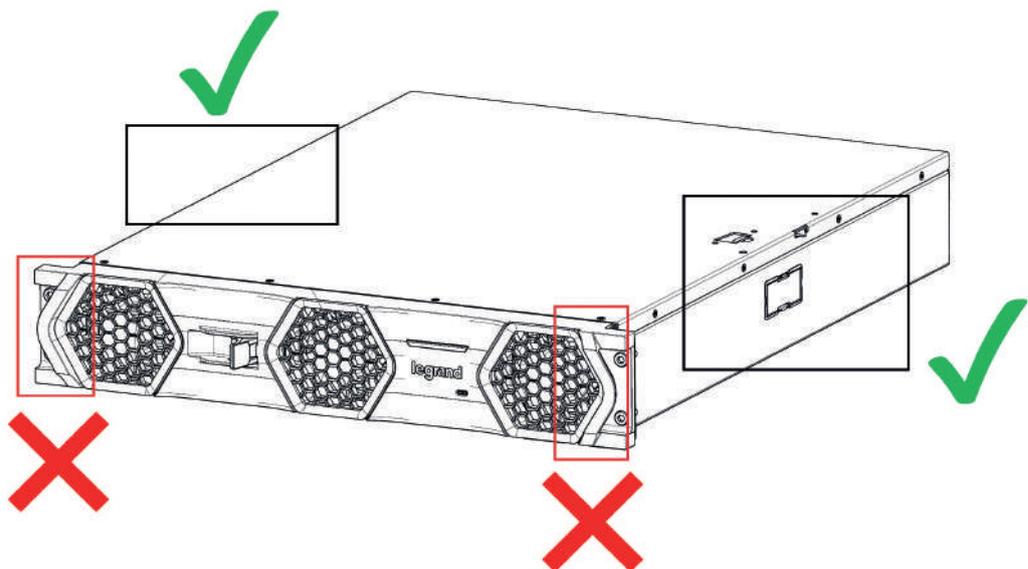


4. Installation

Remove the film protector from the front of the power module. Insert the power module in the free slot, making sure that its switch in the front is open.

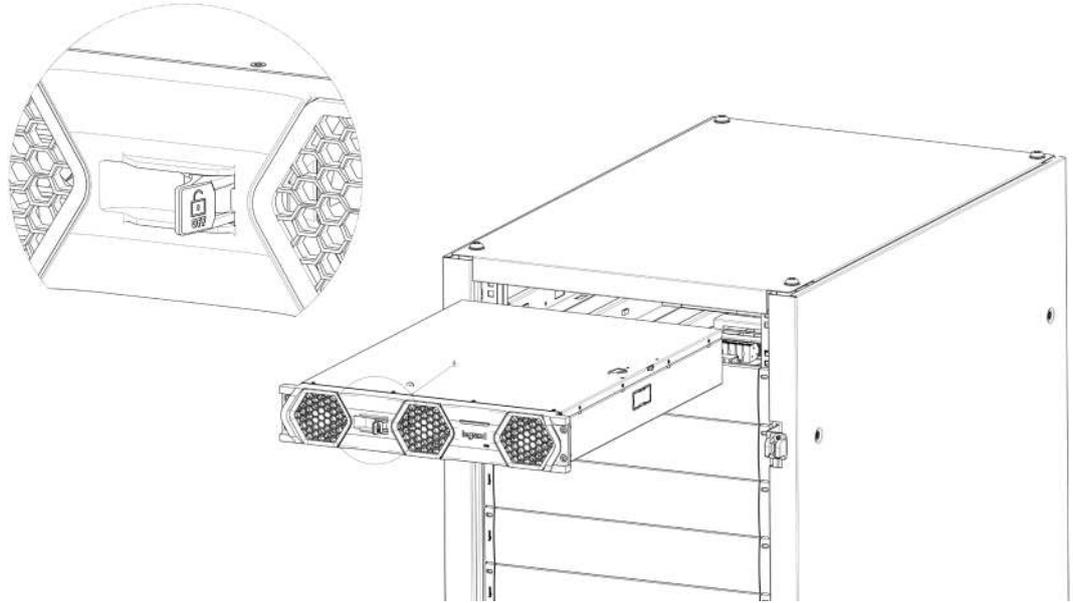

Make sure that the power module is abut and then close its front switch. Fix the module to the cabinet with four screws included in the accessory kit.

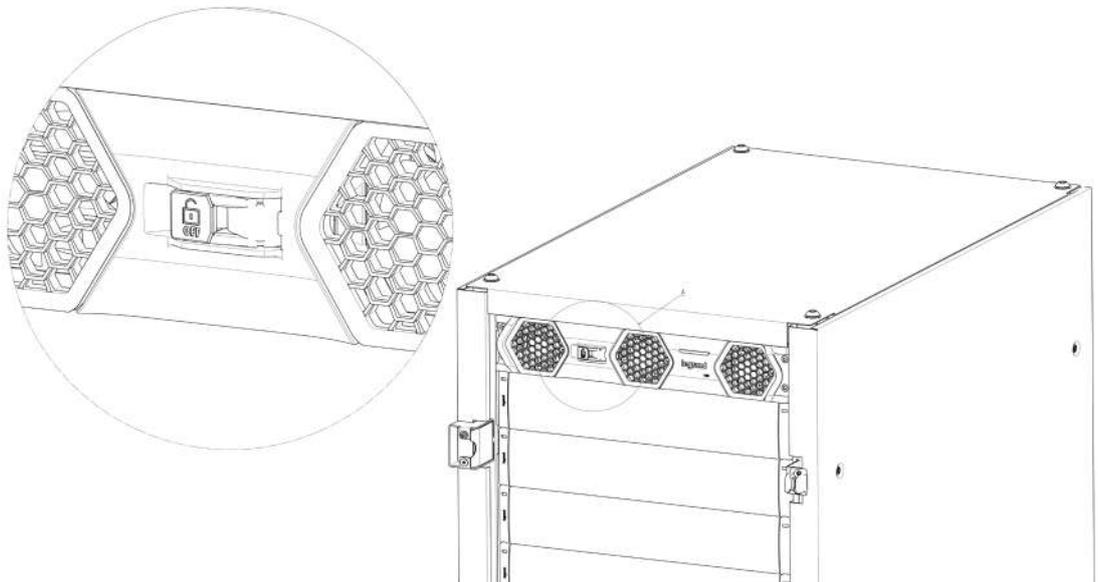


4.4 Battery drawers installation

The cabinet for Keor MOD 125 may include two to ten internal battery drawers. Each battery string is made up of two drawers, therefore it is necessary to install them two by two.


The battery drawers have a specific order in the cabinet that must be kept, especially if the UPS has to work in a configuration with independent strings of batteries.

During the installation it is necessary to use the appropriate Personal Protective Equipment (see paragraph 2.3).

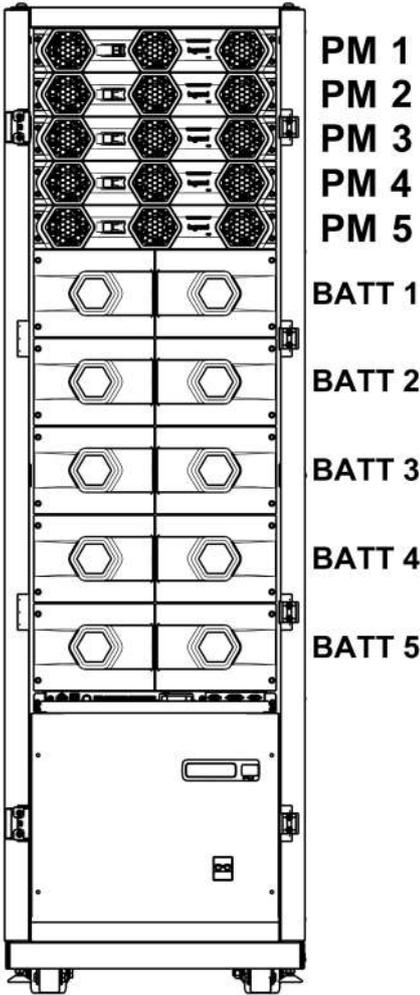


4. Installation


Starting from the top of the cabinet, insert two screwdrivers in the upper parts of the two plastic slot cover where the battery drawers must be installed. Slightly turn the screwdrivers down to unhook the covers.

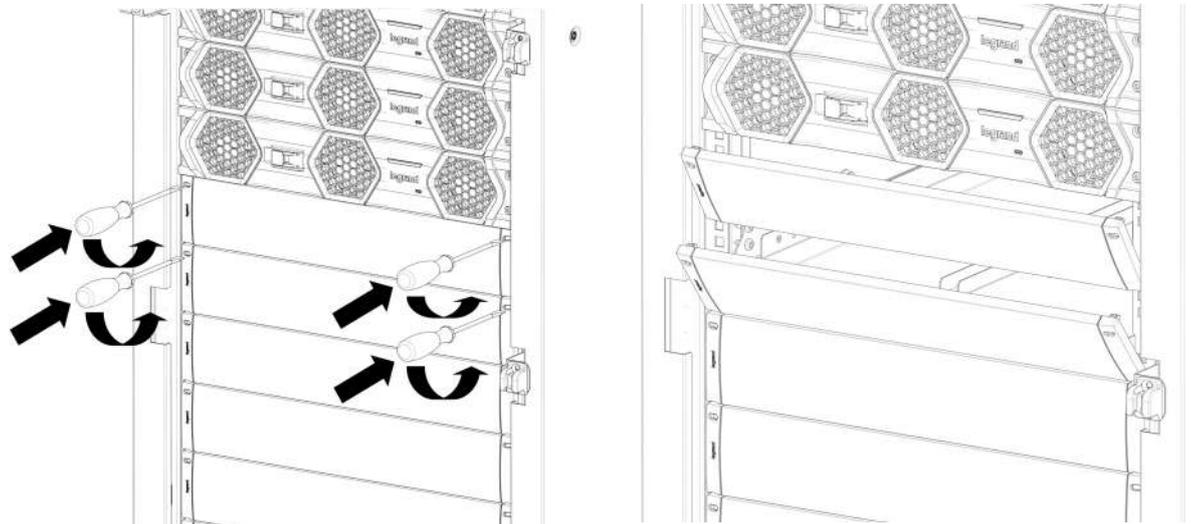

Insert the empty battery drawers in the free slots and push them till the 'click' of the safety block is heard. The battery packs must be added to the drawers only after the activation of the safety block.

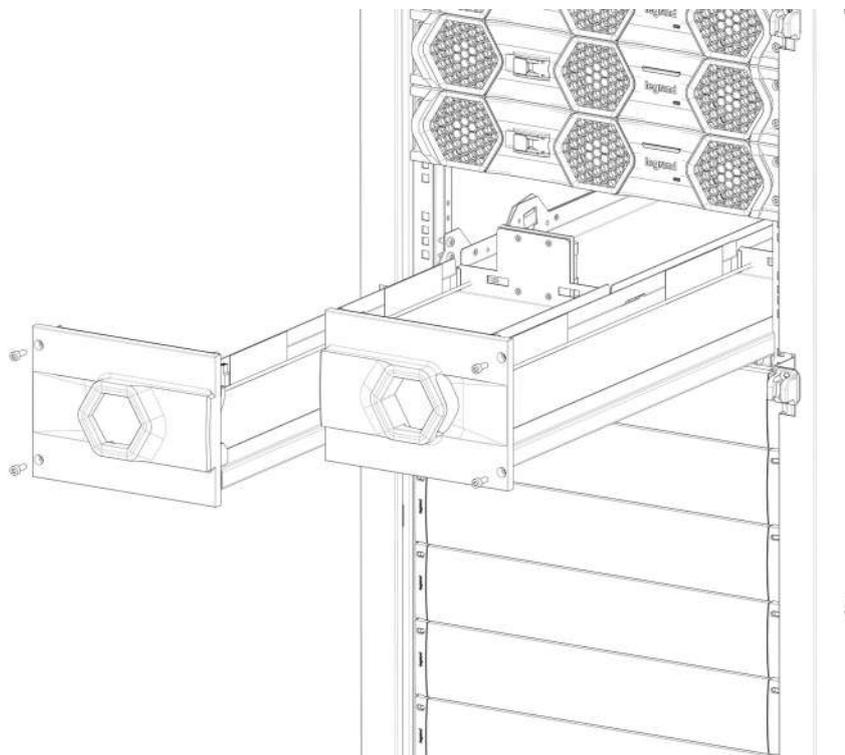


Remove the adhesive tape from the terminal covers at the extremes of the battery pack and remove the covers.

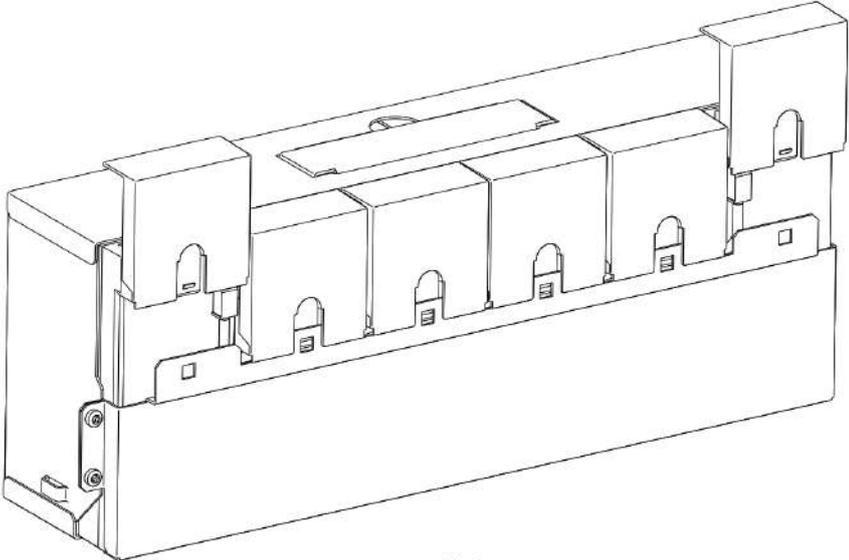


X 4

Add two battery packs on a drawer and connect in series the two packs using the provided cable fixed in the bracket and respecting the polarity (connect a positive terminal to a negative terminal).

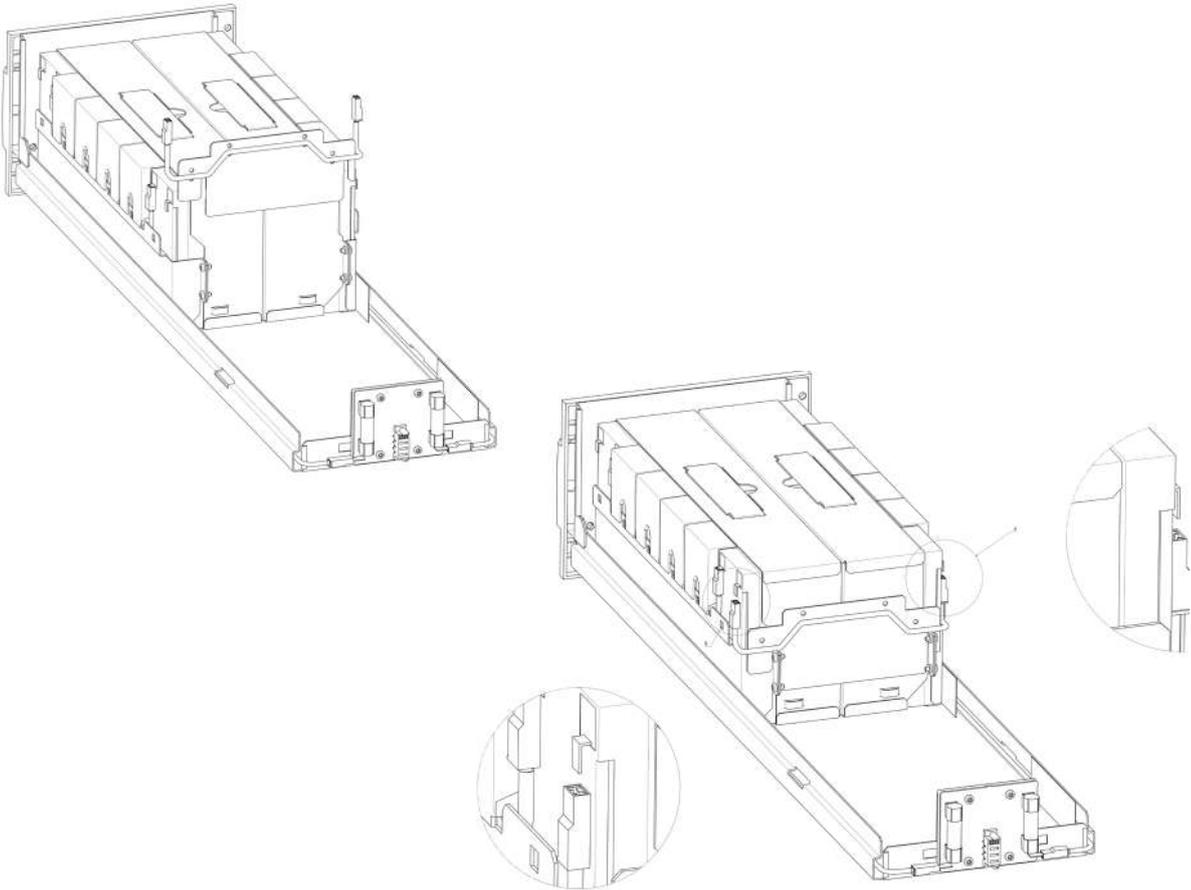


4. Installation


Connect the two provided cables on the free battery terminals that will connect the two battery packs with the other two that will be added in the next step. Insert the terminal covers and fix them to the packs with the adhesive tape.

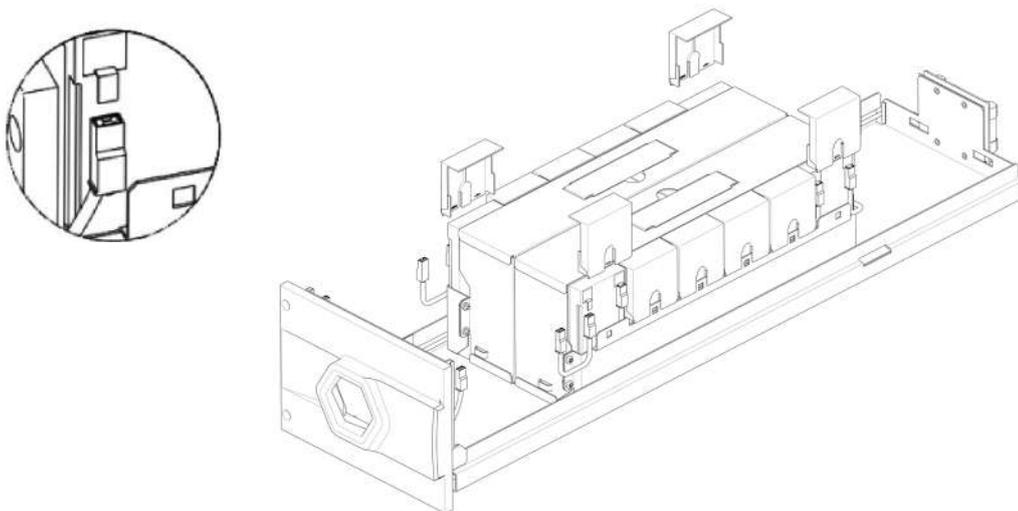


Add other two battery packs on the drawer.

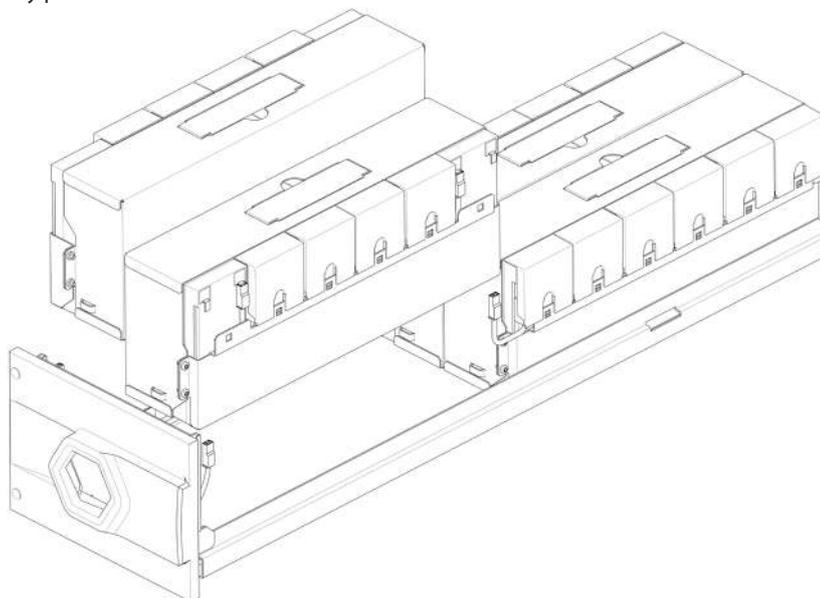


Connect in series the two new packs to the ones already in the drawer using the cable installed previously and respecting the polarity (connect a positive terminal to a negative terminal).
Connect the free terminals of the two batteries located close to the handle of the drawer to the cables that are connected to the back of the drawer. Check the correct polarity of the whole cabling.

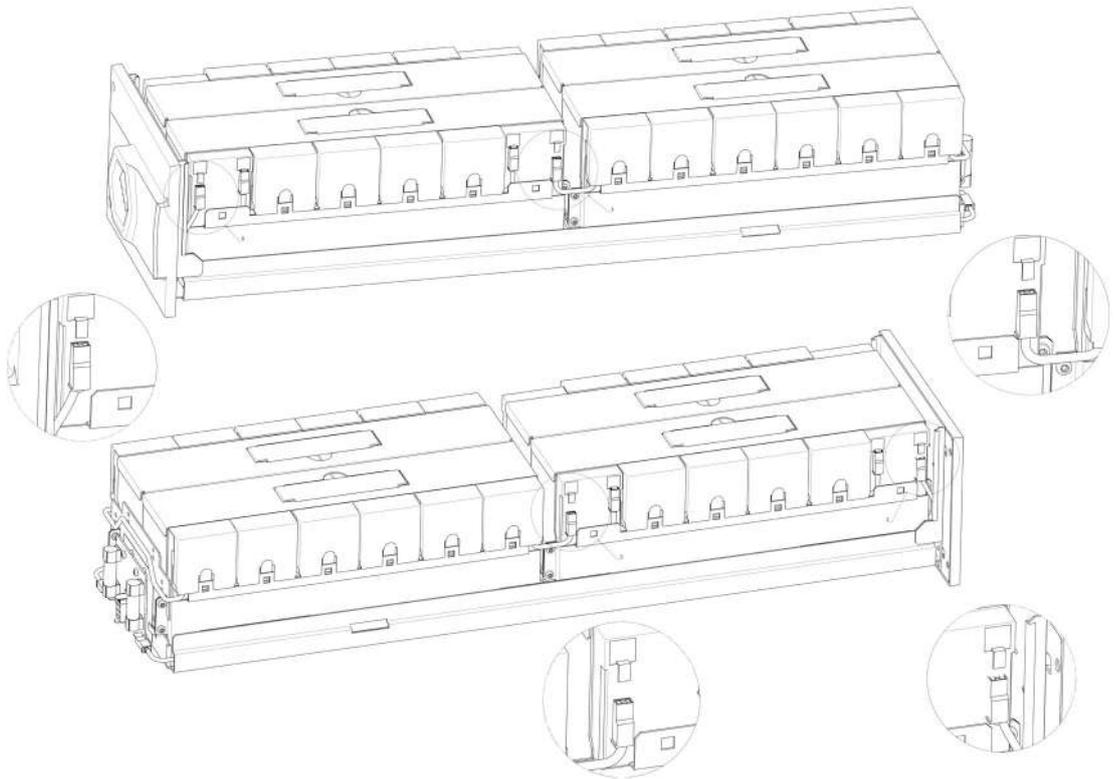

Insert the remaining terminal covers on the batteries and fix them with the adhesive tape to the battery pack.

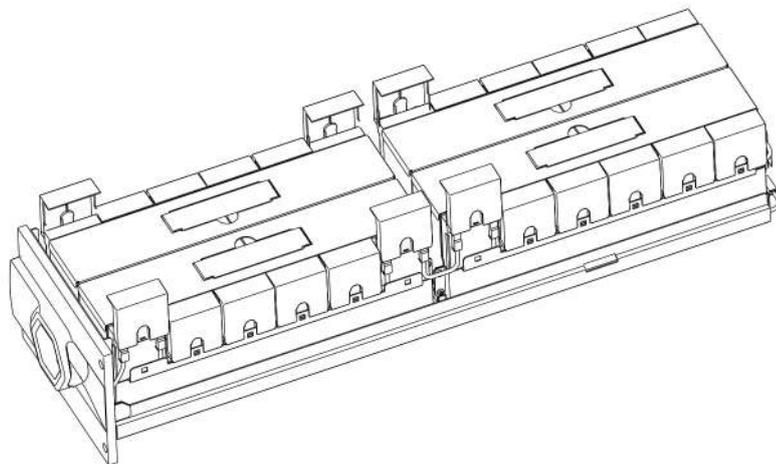


4. Installation


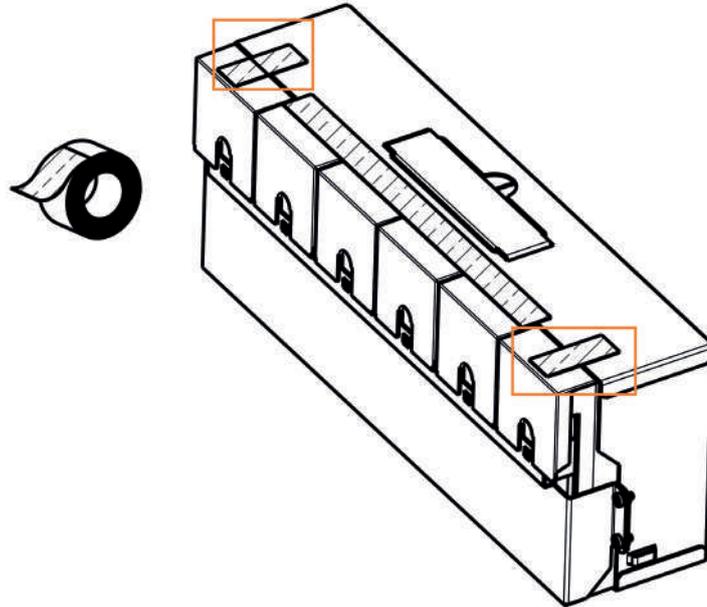


Fill the second drawer in the same way.

After the two drawers are ready, push them inside the UPS cabinet till they are abut and fix them with four screws included in the accessory kit.

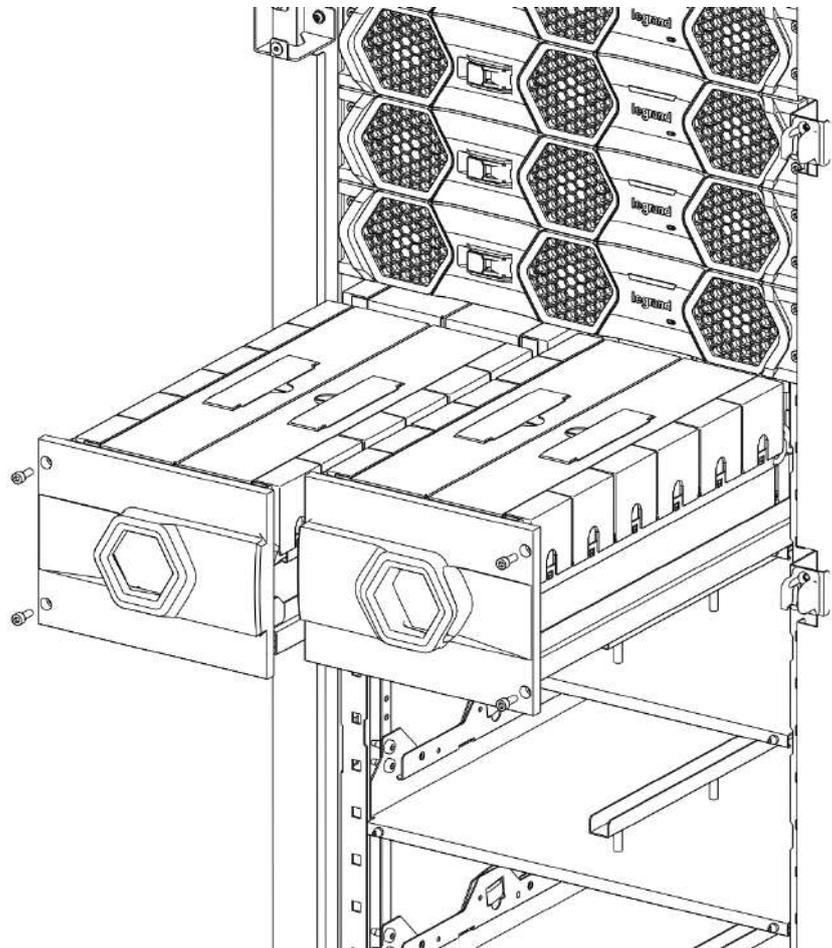

4.5 SSS interface

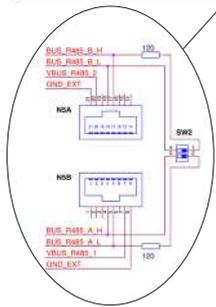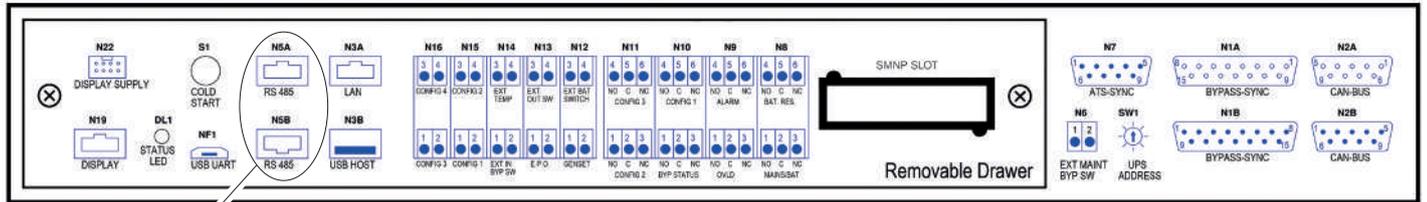

	TERMINAL	PINS	FUNCTION	
Analogic floating inputs	N16	1-2	CONFIGURABLE CONTACT 3	<p>Maximum input voltage: 15V 15 kΩ pull-up</p>
		3-4	CONFIGURABLE CONTACT 4	
	N15	1-2	CONFIGURABLE CONTACT 1	
		3-4	CONFIGURABLE CONTACT 2	
	N14	1-2	EXTERNAL MAINTENANCE BYPASS SWITCH	
		3-4	EXTERNAL TEMEPRATURE SENSOR Maximum Input Voltage: 5 V	
Digital floating inputs	N13	1-2	EPO	<p>Maximum input voltage: 5V 1 kΩ pull-up</p>
		3-4	EXTERNAL OUTPUT SWITCH	
	N12	1-2	GENSET It allows the UPS to know if there is an external generator. If the contact is closed, the generator is present.	
		3-4	EXTERNAL BATTERY SWITCH	
Output contacts	N11	4-5-6	CONFIGURABLE CONTACT 3	<p>NC/NO contacts 30 Vdc - 1 A 125 Vac - 0,5 A (resistive load).</p> <p>Dry Contact</p> <p>When the function is activated, the contact switches from the NC terminal to the NO terminal.</p>
		1-2-3	CONFIGURABLE CONTACT 2	
	N10	4-5-6	CONFIGURABLE CONTACT 1	
		1-2-3	BYPASS STATUS	
	N9	4-5-6	ALARM	
		1-2-3	OVERLOAD	
N8	4-5-6	BATTERY AUTONOMY RESERVE		
	1-2-3	MAINS/BATTERY STATUS		
	N6	1-2	AUXILIARY REMOTE BYPASS CONTACT It is possible to enable the forced bypass mode through this NO contact	

CONNECTOR	TERMINAL
N3B	USB HOST Port used for FW updates

The maximum wire cross sections that can be used for the SSS terminals is 1,5 mm².

4. Installation

4.5.1 Emergency Power Off (EPO)

The UPS has a contact that can be used to activate the immediate stop of the equipment. It can be set as normally closed (NC) or normally open (NO) from the user interface. The default configuration is NC.

The EPO terminal is found on pins 1 and 2 of contact N13 of the SSS interface.

Use a voltage-free contact to connect the epo externally.

INDICATION

It is not possible to connect in parallel the EPO circuits of several UPS. If necessary, use contacts on the EPO emergency pushbutton isolated from each other.

The electric characteristics of the EPO interface are:

- voltage between terminals 1 and 2 of contact N13 with open circuit: 5 Vdc
- current between terminals 1 and 2 of contact N13 with closed circuit: 5 mA

5. Configuration and start-up



DANGER

All the configurations and start-up operations must be carried out exclusively by a SKILLED TECHNICIAN (paragraph 2.2.1).

5.1 Pre-start-up checks

Before powering the equipment, carry out the following checks:


1. Close all the distribution panels on the UPS cabinet.
2. Check that the external mains input disconnecter is open (OFF position).
3. Check that the external bypass input disconnecter (if present) is open (OFF position).
4. Check that the external output disconnecter is open (OFF position).
5. Check that the battery disconnectors of the external battery cabinets (if present) are open.
6. Check that the maintenance bypass disconnecter and the output disconnectors of the UPS are open (OFF position).
7. Check that the input and output wiring has been done and that all the connections have been tightened up properly.
8. Check the correct phase sequence of the input and bypass line (if separate).
9. Check that the parameters (voltage and frequency) of the mains input are compatible with those shown on the UPS rating plate.
10. Check that all the power modules are inserted properly and that the fixing screws are screwed up to abut the relative slots (use hex socket M6x16 screws along with M6 toothed washers).
11. Check that all the battery drawers (if present) are inserted properly and that the fixing screws are screwed up to abut the relative slots (use hex socket M6x16 screws along with M6 toothed washers).
12. Check the presence of the EPO terminal according to the setting (see paragraph 4.5.1)

5.2 Start-up procedure

1. Insert the battery fuses into the appropriate fuse breakers of the external battery cabinets (if present).
2. Press for at least 5 seconds the COLD START button of the SSS interface. The display turns on and the UPS boot starts.
3. The UPS boot ends when the LEDs on the power modules turn to steady blue. Tap on the *Settings* icon of the menu bar at the bottom of the display.





4. Choose the desired language in the tab *GENERAL* by tapping on the pencil icon on the item *Language*.

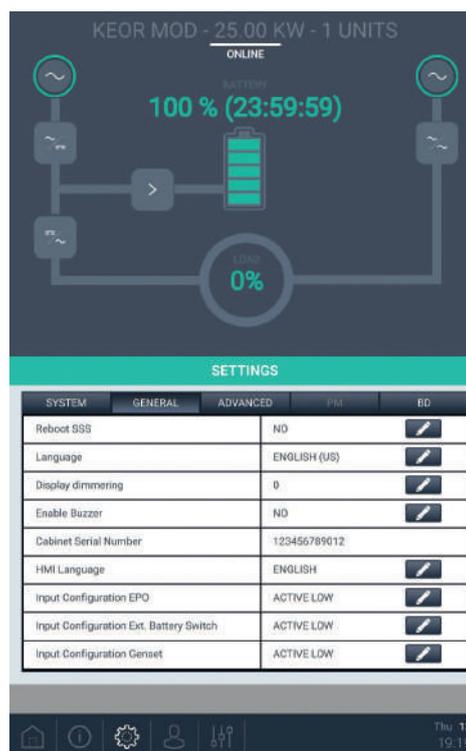

5. Configuration and start-up

- Set the desired voltage and frequency output in the tab *SYSTEM* by tapping on the pencil icon on the items *Output Voltage* and *Output Frequency*.
In the same tab there is also the item *Enable or disable walk-in function*. If the UPS turns from battery mode to normal mode while it is connected to an external generator, especially with full load, there could be some frequency fluctuations causing a condition where the bypass is not available. If the walk-in function is enabled, the PM are not turned from battery mode to normal mode all together; they are turned to normal mode one by one with a time interval of 2 seconds. Tap on the pencil icon of the item *Enable or disable walk-in function* and select *ENABLE* or *DISABLE*.

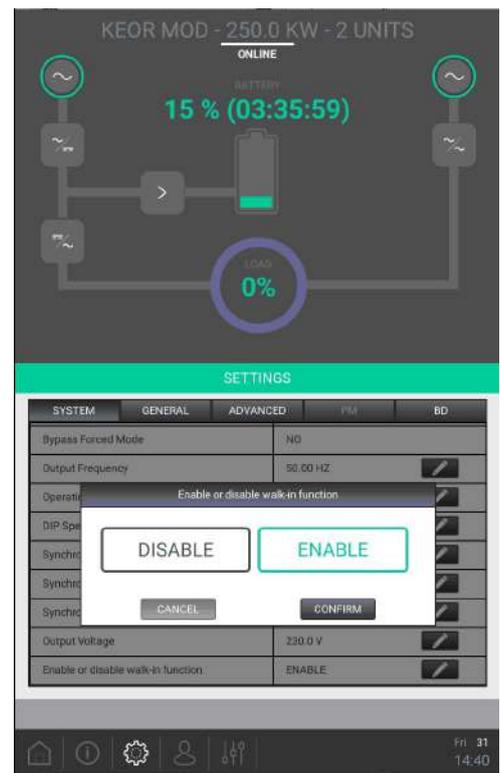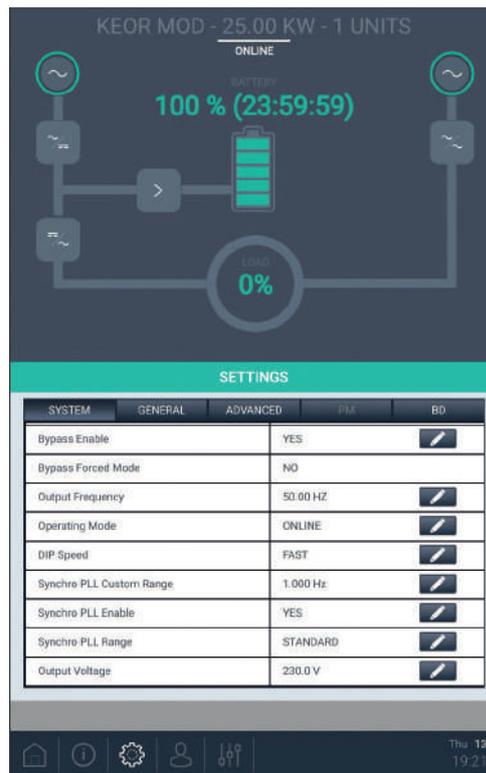


- 6. Select the tab BD to set the number of KB (Battery Kits) and the battery capacity in Ah of the single KB. Tap on the pencil icon of the item *Number of Kit Batteries installed* and insert the number of KB. Tap on the pencil icon of the item *Capacity value of Kit Batteries [Ah]* and insert the value of the battery capacity.

INDICATION

1 KB (Battery Kit) represents a string of 48 batteries in series. In case of models with internal battery drawers, 1 KB is made up of 2 drawers.

The UPS calculates the total battery capacity as produced by the total KB * Capacity.

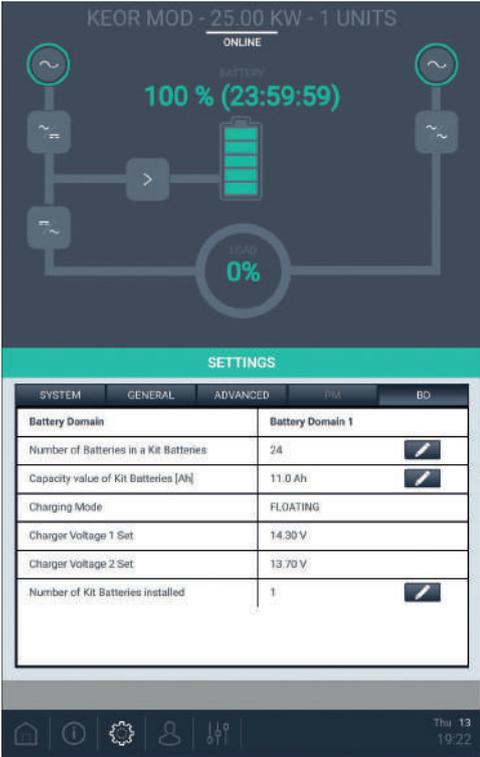

5. Configuration and start-up


7. In the *BD* tab, select the the charge mode of the UPS. There are 2 modes available:
 - Floating mode: the voltage on the batteries is maintained to 13.8 V. For this mode it is also possible to have a tune of the charging voltage according to the temperature detected by an internal sensor of the SSS (in case of internal battery drawers) or through an external sensor (in case of external battery cabinets).
 - 2 step mode: smart charge with an advanced cycle that limits any chance of overcharging or overheating the batteries.
 Tap on the pencil icon of the item *Charging Mode* and choose between these 4 options: *TWO STEP*, *FLOATING*, *FLOATING_INT* and *FLOATING_EXT*.
 The last two options refer to the floating mode with internal or external temperature control.




8. Set the configuration of the batteries (see paragraph 4.2.9) by tapping on the *General Commands* icon of the menu bar at the bottom of the display.



9. Tap on the icon > of the item *BATTERY CONFIGURATION*.

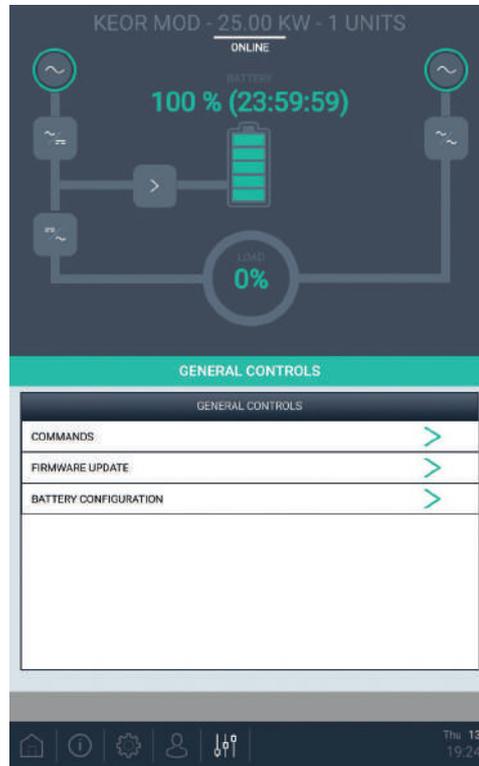

10. Select the type of Battery Configuration among the three options:
- *Common*: all the strings of batteries are in common;
 - *Cabinet*: each UPS unit has his unique battery cabinet;
 - *Individual*: each PM is connected to a unique battery string.

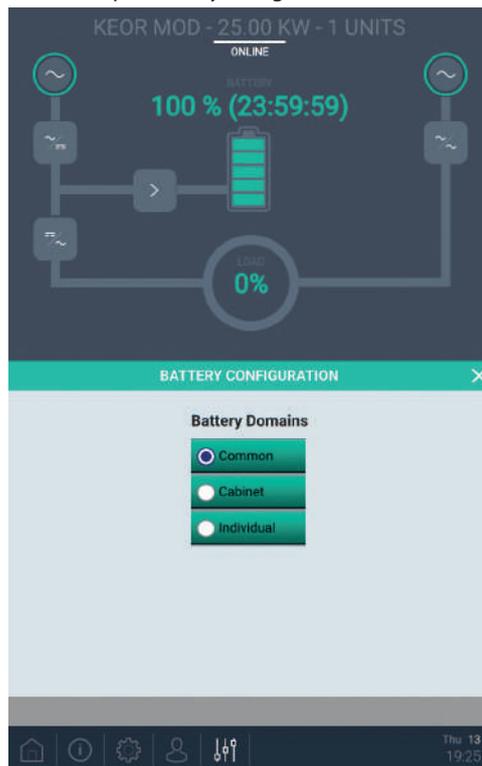

6. Maintenance

11. Provide the mains supply to the UPS by closing the external mains input/bypass input disconnectors (ON position).
12. Ensure that the EPO is connected to the SSS interface (the default setting is NC).
Tap on the *General Commands* icon of the menu bar at the bottom of the display. Find the item *System Power On* and tap on the button *ON* to turn on the UPS.



13. The LEDs on the power modules turn to steady yellow while they are powered from the batteries. When they are powered from the mains and the UPS is on-line, the LEDs turn to steady green.
14. Check that the output voltage and frequency values set correspond with the requirements of the load. If not, turn off the UPS and set the correct values (see step 6).
15. Provide the power supply to the load by closing the external output disconnector (ON position).
16. Close the UPS door and remove the key.

DANGER

Do not remove the power modules during the functioning of the UPS without activating the hot-swap procedure (described in paragraph 6.3.1). The removal of one or more power modules without the proper use of the hot-swap procedure could damage the equipment.

CAUTION

The keys to open the UPS door and the installation manual must not be left at the disposal of the operator.

5.3 Turning off the UPS

Follow this procedure in case there is the need to turn off the UPS:

1. Tap on the *General Commands* icon of the menu bar at the bottom of the display.
2. Then locate the item *System Power Off* and tap on the button *OFF* to turn off the UPS.



3. The LEDs on the power modules turn to steady blue when they are in stand-by mode and the UPS is no longer supplying the load.

DANGER

In this stand-by condition there are still hazardous voltages on the UPS.

To disconnect the UPS from all sources of supply:

- open the external mains input/bypass input disconnectors (ON position);
- open all the fuse breakers of the external battery cabinets (if present);
- remove at least one battery drawer for every shelf present to interrupt the battery string.

6. Maintenance



DANGER

INSTALLATION and ORDINARY MAINTENANCE operations must be carried out only by SKILLED TECHNICIANS (paragraph 2.2.1).

EXTRAORDINARY MAINTENANCE operations must be carried out only by LEGRAND TECHNICAL SUPPORT SERVICE. LEGRAND declines all liability for any injury or damage caused by activities carried out differently from the instructions written in this manual.

6.1 Preventive maintenance

The UPS does not contain parts for preventative maintenance by the operator.

The operator must regularly perform:

- a general external cleaning;
- a check to verify there is no alarm indication on the display;
- a check to verify the correct functioning of the ventilating fans on each power module.

6.2 Periodical checks

The correct functioning of the UPS must be guaranteed by periodical maintenance inspections. These are essential to safeguard the reliability of the equipment.

These inspections should also be made to determine if components, wiring, and connections exhibit evidence of overheating.

During a maintenance inspection, the skilled technician must carry out the following checks:

- no alarm presence;
- list of the memorised events;
- correct function of the static and maintenance bypass;
- integrity of the electrical installation;
- flow of cold air;
- battery status;
- characteristics of the applied load;
- conditions of the installation location.

Contact the LEGRAND Technical Support Service in case of problems.




WARNING

The periodical checks involve operations inside the UPS in presence of dangerous voltages. Only maintenance personnel trained by LEGRAND are authorized to intervene.

It is also possible to perform an automatic battery test. With this function, only one PM is switched to battery mode to verify the battery status.

Tap on the *General Commands* icon of the menu bar at the bottom of the display. Find the item *Battery Test* and tap on the button *START*.

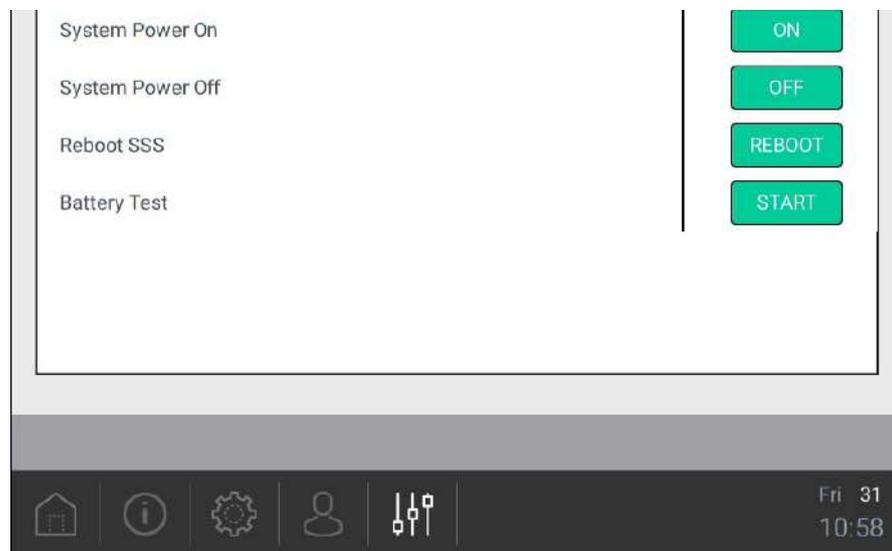

6.3 Ordinary maintenance

6.3.1 Hot-swap procedure for the replacement of power modules

The hot-swap procedure makes it possible to replace a faulty power module while the load is powered by the UPS in on-line mode. In case of a black-out during the procedure, there is no risk to power off the load since it is supplied by the other power modules.


INDICATION

To use this function, the UPS must have at least two power modules and the output power required must not be above the one available during the hot-swap procedure.

Always replace just one PM at a time.


If the load power does not allow the hot-swap without overload, perform the manual bypass mode maintenance procedure.

Each power module (PM) is identified by a unique address inside the system, as shown below:

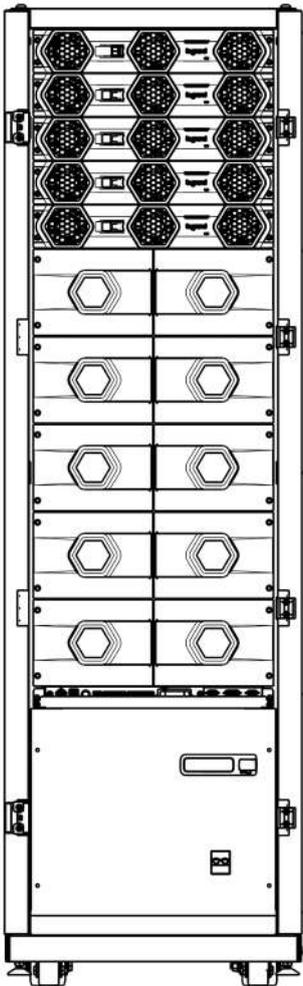

- PM 1
- PM 2
- PM 3
- PM 4
- PM 5

KEOR MOD 125

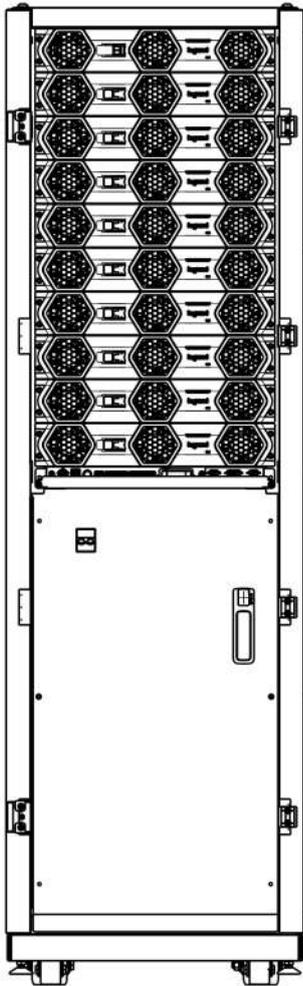

- PM 1
- PM 2
- PM 3
- PM 4
- PM 5
- PM 6
- PM 7
- PM 8
- PM 9
- PM 10

KEOR MOD 250


6. Maintenance

During the hot-swap procedure the maximum active power available is indicated in the following table:


	MAXIMUM ACTIVE POWER AVAILABLE
KEOR MOD 50	25 kW (50%)
KEOR MOD 75	50 kW (66%)
KEOR MOD 100	75 kW (75%)
KEOR MOD 125	100 kW (80%)
KEOR MOD 150	125 kW (84%)
KEOR MOD 175	150 kW (86%)
KEOR MOD 200	175 kW (88,5%)
KEOR MOD 225	200 kW (89%)
KEOR MOD 250	225 kW (90%)

The following is the how-swap procedure:


1. Check that the load connected to the UPS allows the power module replacement without causing an overload.
2. Open the frontal switch of the PM that must be replaced. When the frontal switch is open, it is not possible to restart the PM by simply closing it. It is necessary to extract the PM.

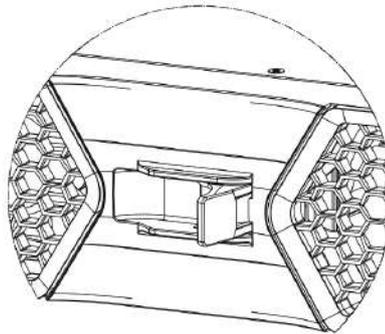


3. Initially, the LED on the PM turns blue. Wait until it turns white: the PM is ready to be replaced.
4. Unscrew the fixing screws of the PM and save them.
5. Extract the PM until the safety block prevents the extraction from continuing.

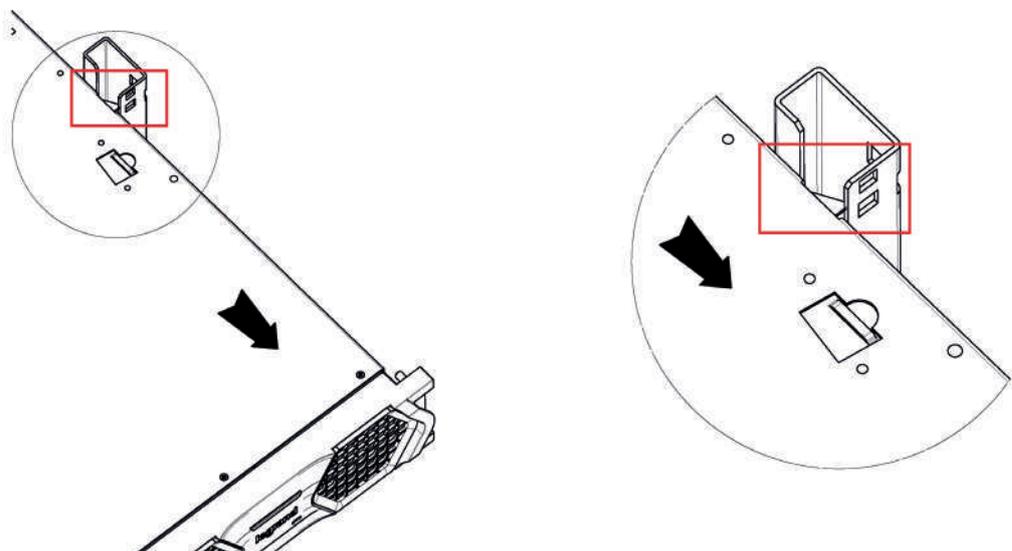

6. Push the safety hook located on the top right of the PM to unlock the block and pull the PM to finalize the extraction.

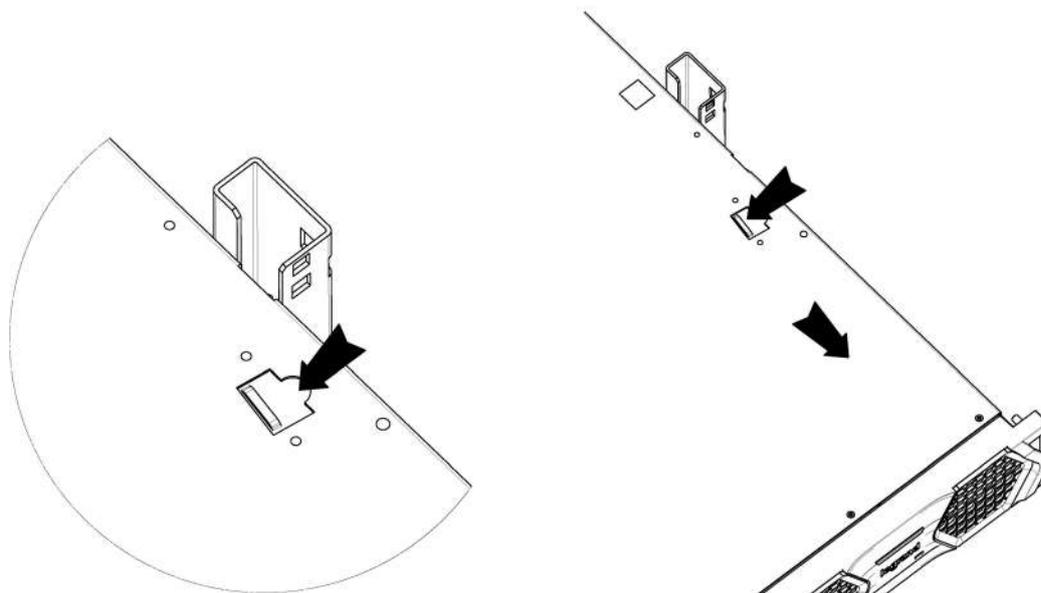

7. Insert the new PM on the free slot making sure that the frontal switch is open and that the module is in abutment.
8. Fix the PM to the cabinet using the screws previously unscrewed.
9. Close the frontal switch of the PM.

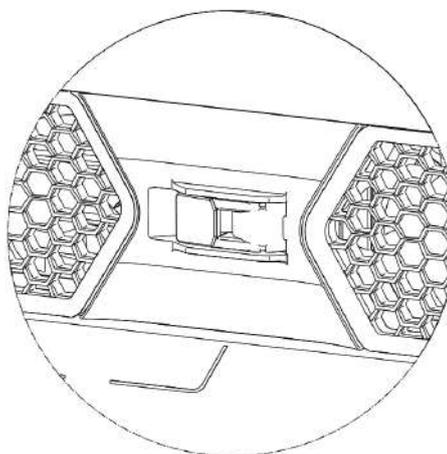

10. The LED on the PM turns red. After the boot of the PM, the LED turns blue. Next, the PM starts in battery mode (yellow LED). Finally, the LED turns green and the PM is powered by the mains.

INDICATION

If one or more screws are lost, use only hex socket M6x16 screws along with M6 toothed washers to fix the power modules.

6. Maintenance

6.3.2 Installation/replacement of power modules with the UPS in maintenance bypass mode

If the hot-swap procedure explained in the previous paragraph is not applicable, it is possible to replace or even to add PM with the UPS in maintenance bypass mode.

INDICATION


During this procedure, the load is not protected by the UPS because it is powered from the bypass input line.

6.3.2.1 Setting the UPS in maintenance bypass mode

1. Tap on the *Settings* icon of the menu bar at the bottom of the display.




2. Check on the tab *System* that the item *Bypass Enable* is set to YES. If not, tap on the item and enable the bypass.

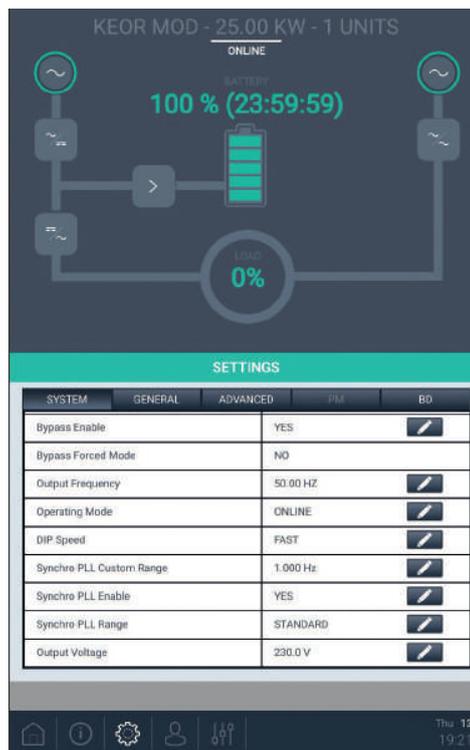

3. Tap on the *General Commands* icon of the menu bar at the bottom of the display.



4. Tap on the icon > of the item *COMMANDS*.

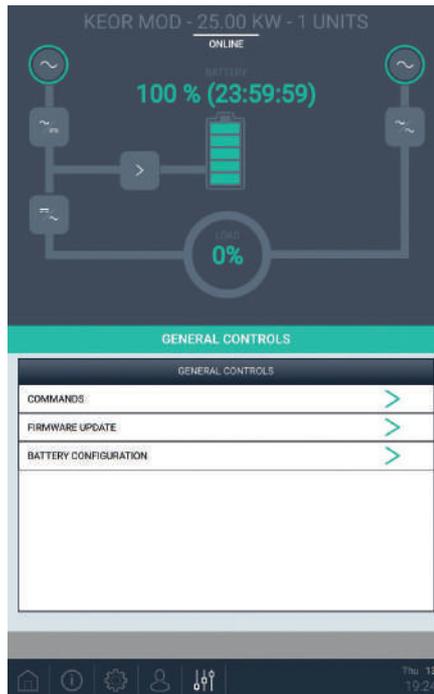

5. Tap on the *Bypass on* button of the item *Force Bypass*. The LEDs of the PM blink fast in orange.



6. Maintenance

6. Close the maintenance manual bypass switch by bringing it to the ON position. The load is powered directly from the bypass line.
7. Turn OFF the UPS by following the procedure described at paragraph 5.3. The LEDs of the PM turn to blue when the PM are in stand-by mode.
8. If present, open the battery disconnectors of the external battery cabinets.



DANGER


If there are battery drawers installed in the cabinet, some internal parts of the UPS are still live with dangerous voltage. Remove at least one battery drawer for every shelf present to interrupt the battery string.

6.3.2.2 Installation/replacement of power modules


Check that the procedure for setting the maintenance bypass mode described in paragraph 6.3.2.1 has been applied.

To replace a PM:


1. Open the frontal switch of the PM to be replaced.

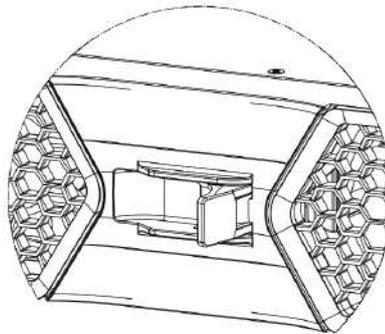


2. Unscrew the fixing screws of the PM and save them.
3. Extract the PM until the safety block prevents to continue the extraction.

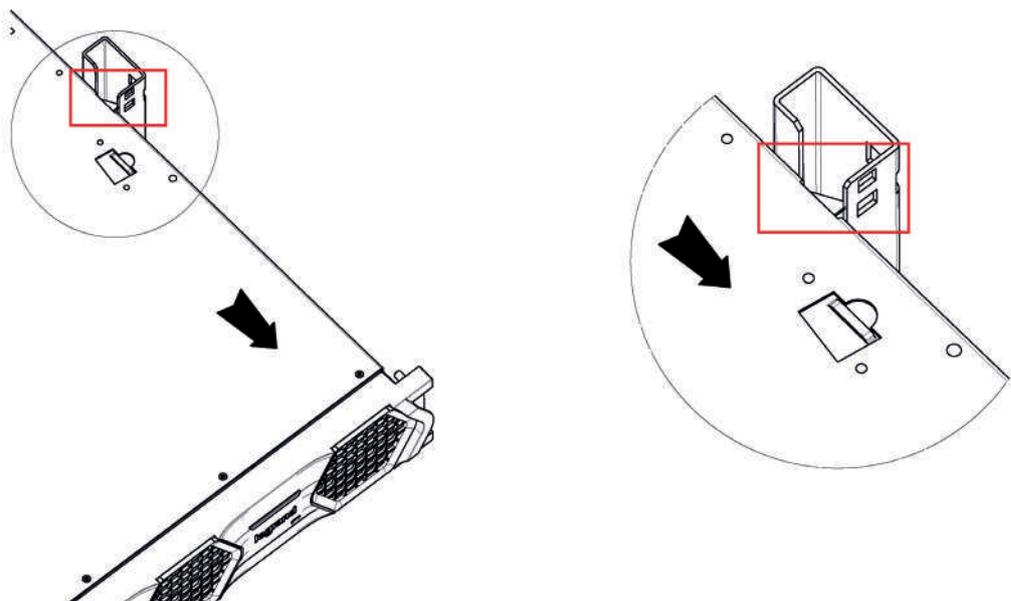

4. Push the safety hook located on the top right of the PM to unlock the block and pull the PM to finalize the extraction.

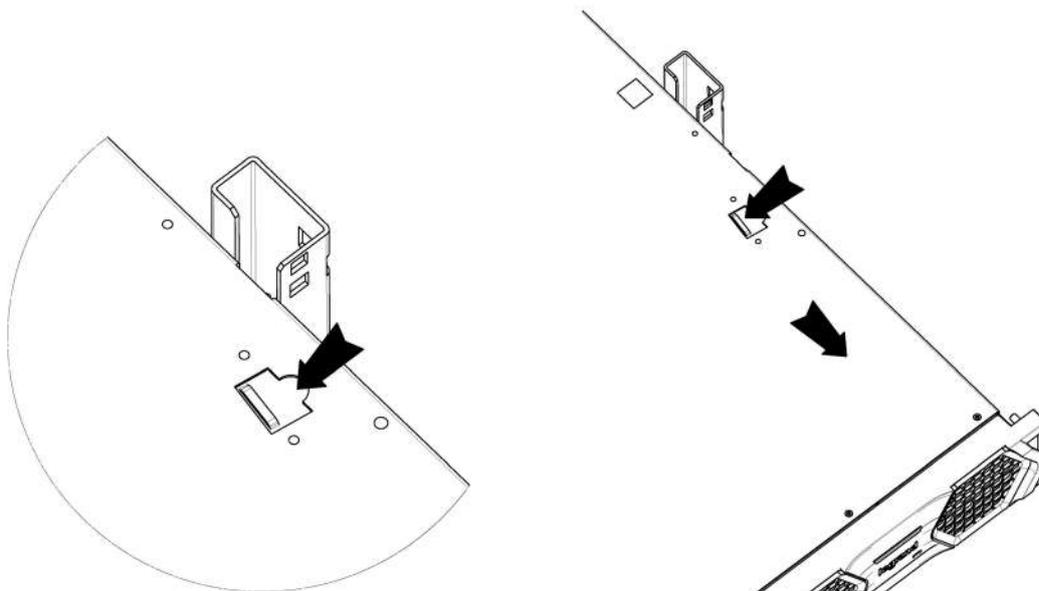

5. Insert the new PM on the free slot making sure that the frontal switch is open and that the module is in abutment.
6. Fix the PM to the cabinet using the screws previously unscrewed.
7. Close the frontal switch of the PM and wait until the LED of the PM turns blue.

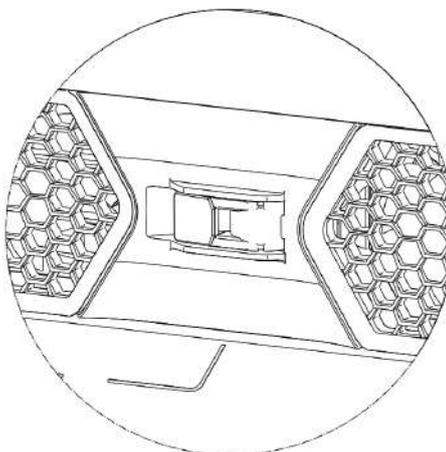

To add a PM:

1. Unscrew the screws of the protective cover of a free slot starting from the top of the cabinet.
2. Insert the new PM on the free slot making sure that the frontal switch is open and that the module is in abutment.
3. Fix the module using the screws previously unscrewed.
4. Close the frontal switch of the PM.

INDICATION

If one or more screws are lost, use only hex socket M6x16 screws along with M6 toothed washers to fix the power modules.

6. Maintenance

6.3.2.3 Exit the UPS from the maintenance bypass mode

1. If present, close the battery disconnectors of the external battery cabinets and insert all the internal battery drawers.
2. Tap on the *General Commands* icon of the menu bar at the bottom of the display. Find the item *System Power On* and tap on the button *ON* to turn on the UPS.




3. Wait for the UPS boot until the LEDs of the PM blink fast in orange.
4. Open the maintenance manual bypass switch by bringing it to the OFF position
5. Tap on the *General Commands* icon of the menu bar at the bottom of the display. Tap on the icon > of the item *COMMANDS*. Tap on the *Bypass off* button of the item *Force Bypass*. The LEDs of the PM turn to steady green.




6.3.3 Removal of the SSS drawer


1

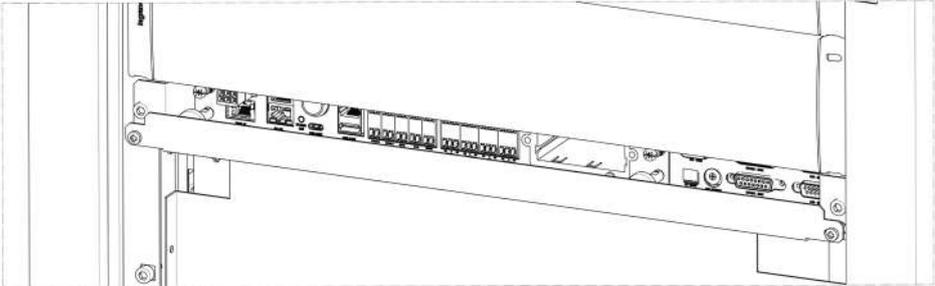


2

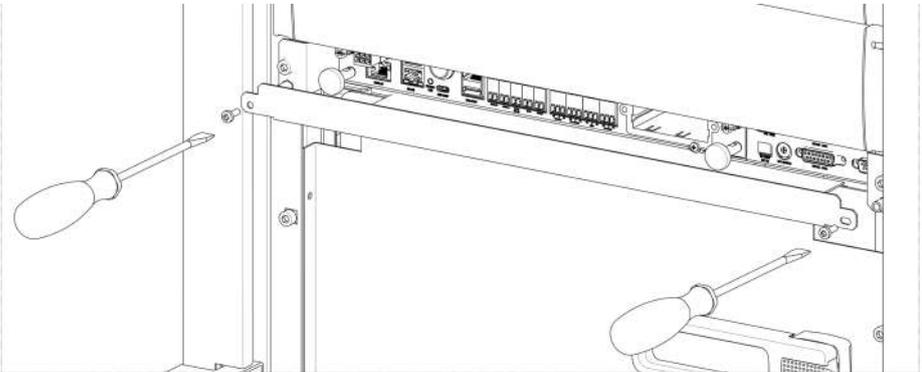

3

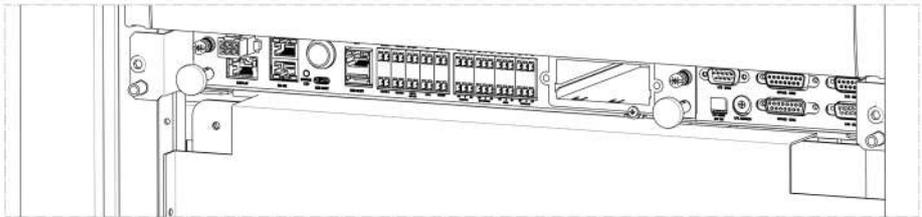

4

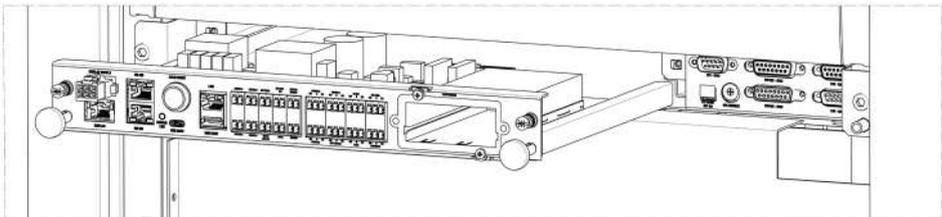

6. Maintenance

6.4 Battery drawers replacement



WARNING

A battery can present a risk of electrical shock and high short circuit current. Read and apply the safety instructions in chapter 2 before operating on batteries


INDICATION

The battery drawers must always be added/removed in multiples of two (1 KB consists of two battery drawers). Always replace just one KB at a time. If one KB is added, start from the free slots at the top which are covered by protective covers. If a KB is completely removed, install the protective covers to block any access to live parts. If the installation/removal procedure changes the total number of KB installed in the UPS, it is necessary to update this setting from the control panel.


6.4.1 Installation/replacement of battery drawers with UPS in on-line mode


To replace a battery drawer:

1. Check that the UPS has installed more than 1KB every 25kVA of power supplied to the output.
2. Check that the UPS is not working in battery mode and that the battery charger is in the "maintenance" or "standby" state.
3. Extract the battery drawer until the safety block prevents to continue the extraction.

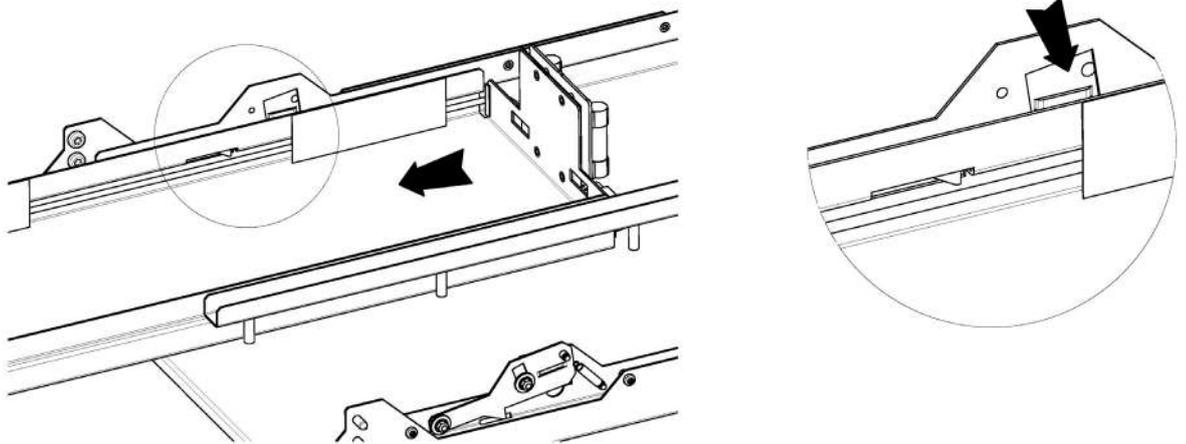


4. Remove all the battery packs from the drawer. Use the handle included in the accessory kit to remove the battery packs at the back of the drawer.

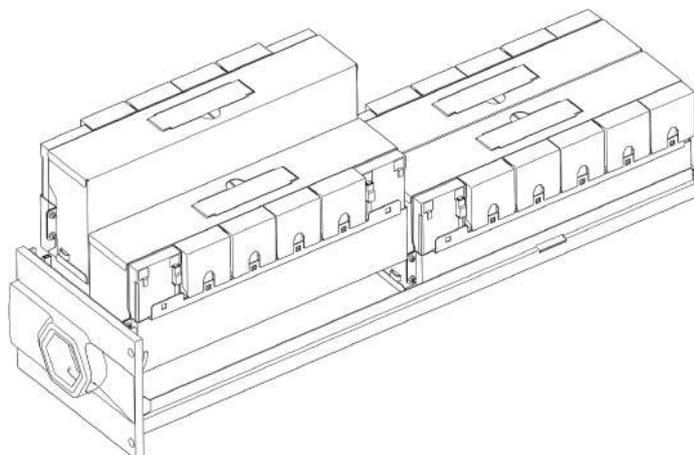

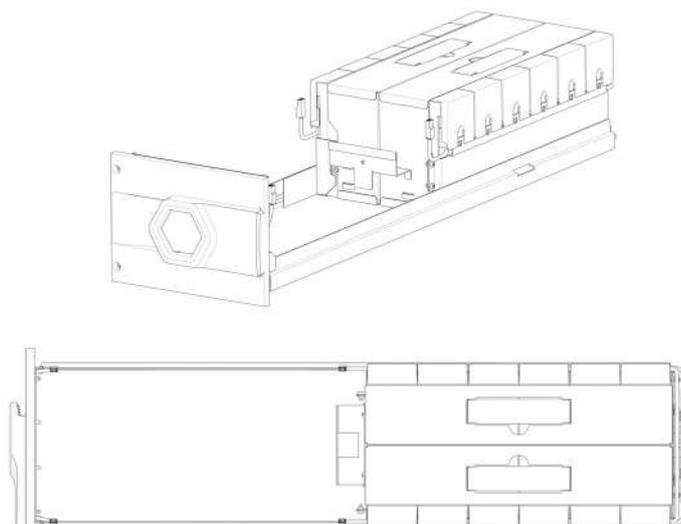

5. Push up the safety hook located on the left side of the battery drawer to unlock the block and pull the drawer to finalize the extraction.

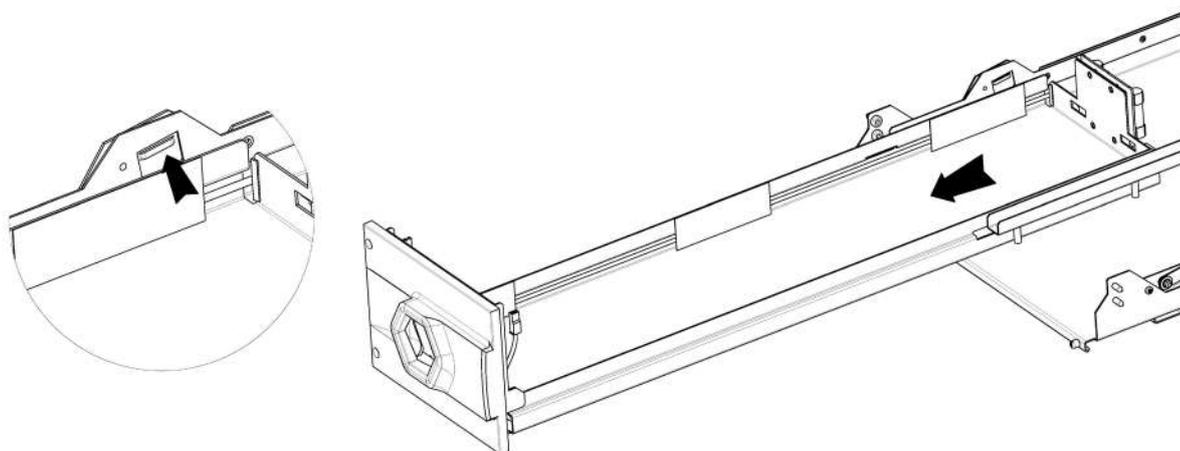

6. Follow the procedure shown at paragraph 4.4 to insert a new battery drawer

INDICATION

If the UPS turns to battery mode during these operations, do not continue the installation/replacement. It is possible to resume the operations when the UPS turns to on-line mode.

When there is a black-out during the replacement of battery drawers, the backup time is reduced. It is necessary to carefully assess this event before starting with the installation/replacement procedure.

To add a battery drawer:


Follow the procedure shown at paragraph 4.4 to add a new battery drawer

6. Maintenance


6.4.2 Installation/replacement of battery drawers with UPS in maintenance manual bypass

To replace a battery drawer:


1. Follow the procedure described in paragraph 6.3.2.1 for setting the UPS in maintenance bypass mode.
2. Extract the battery drawer until the safety block prevents to continue the extraction.

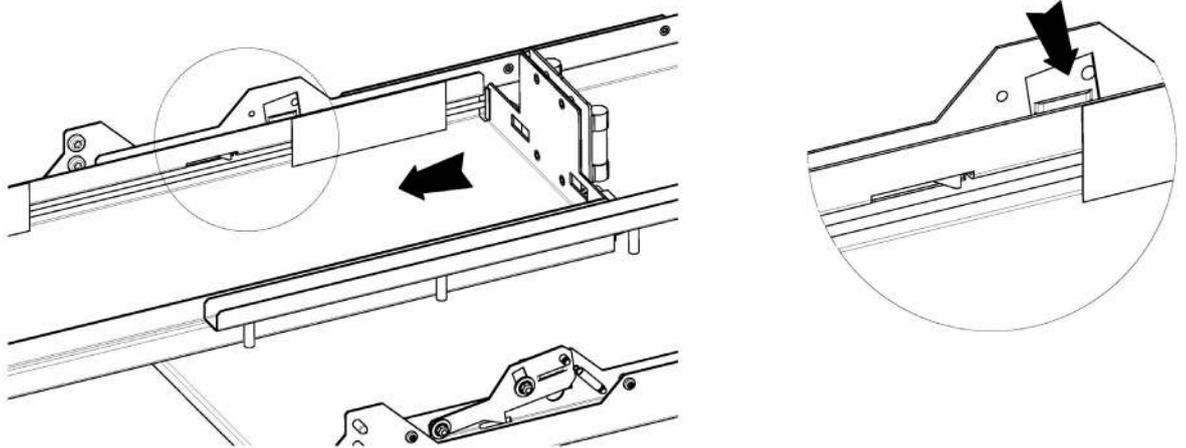

3. Remove all the battery packs from the drawer. Use the handle included in the accessory kit to remove the battery packs at the back of the drawer.

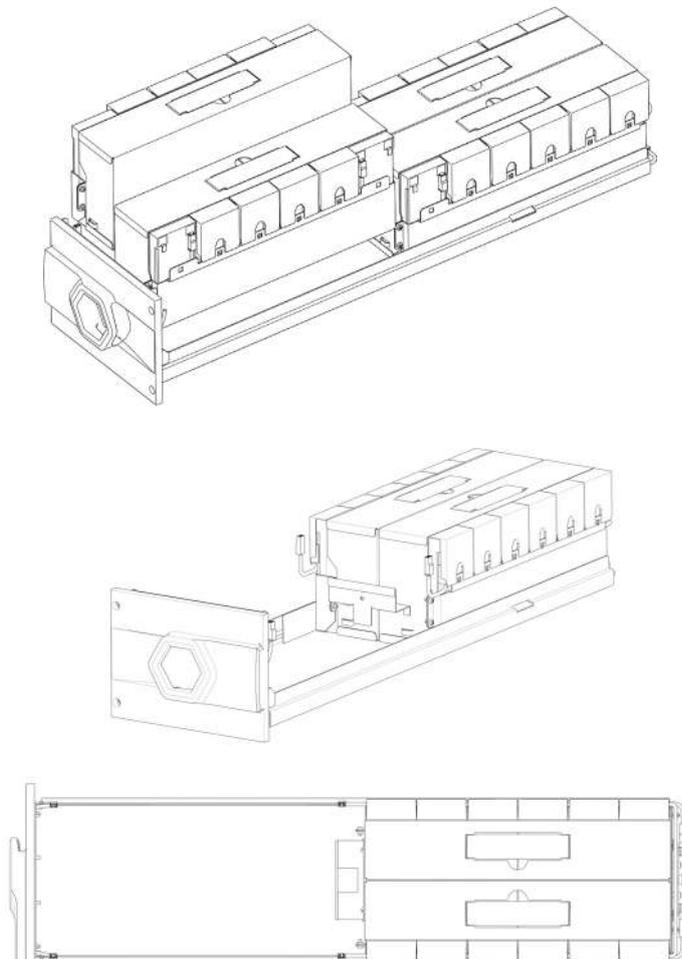

4. Push up the safety hook located on the left side of the battery drawer to unlock the block and pull the drawer to finalize the extraction.

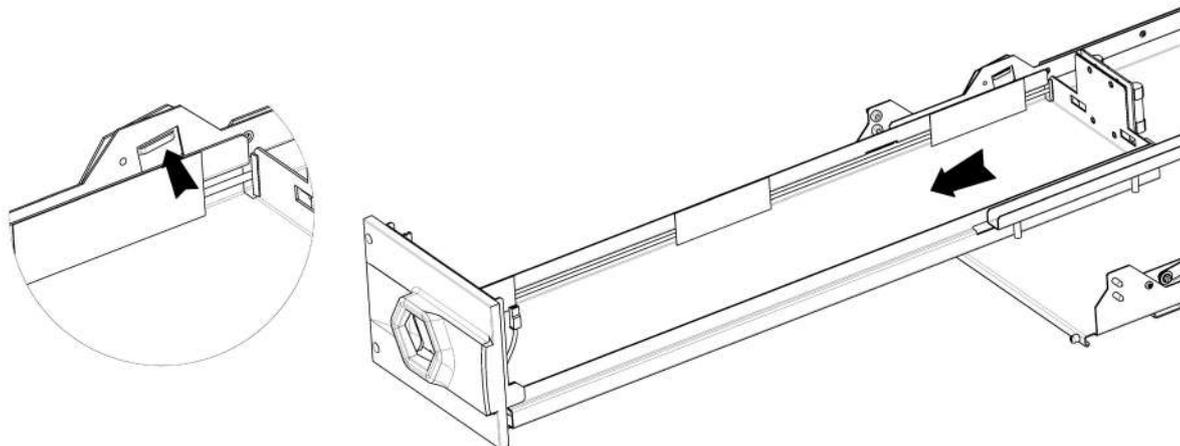

5. Follow the procedure shown at paragraph 4.4 to insert a new battery drawer
6. Follow the procedure described in paragraph 6.3.2.3 to exit from the maintenance bypass mode.

To add a battery drawer:

1. Follow the procedure described in paragraph 6.3.2.1 for setting the UPS in maintenance bypass mode.
2. Follow the procedure shown at paragraph 4.4 to add a new battery drawer
3. Follow the procedure described in paragraph 6.3.2.3 to exit from the maintenance bypass mode.

INDICATION

During the installation/replacement operations, the load is not protected by the UPS because it is powered from the bypass input line.

6.5 Replacing the fuses and surge arrester (DIN rail)

A surge arrester and two fuse holders can be found in the DIN rail inside the cabinet. It is not necessary to open the front panel for the replacement.

The first fuse holder contains a 16A GG 10x38mm fuse (LG-013316). It is in series to the surge arrester.


The second fuse holder contains a 2A GG 10x38mm fuse (LG-013302). It is in series to the input bypass disconnecter release coil.

The surge arrester is a T2 40kA 1P SPD (LG-412230).


INDICATION

It is mandatory to verify monthly the indication on the surge arrester. The device works correctly if the indicator is green. If the device is damaged, the indicator is red and the surge arrester must be replaced.

6. Maintenance

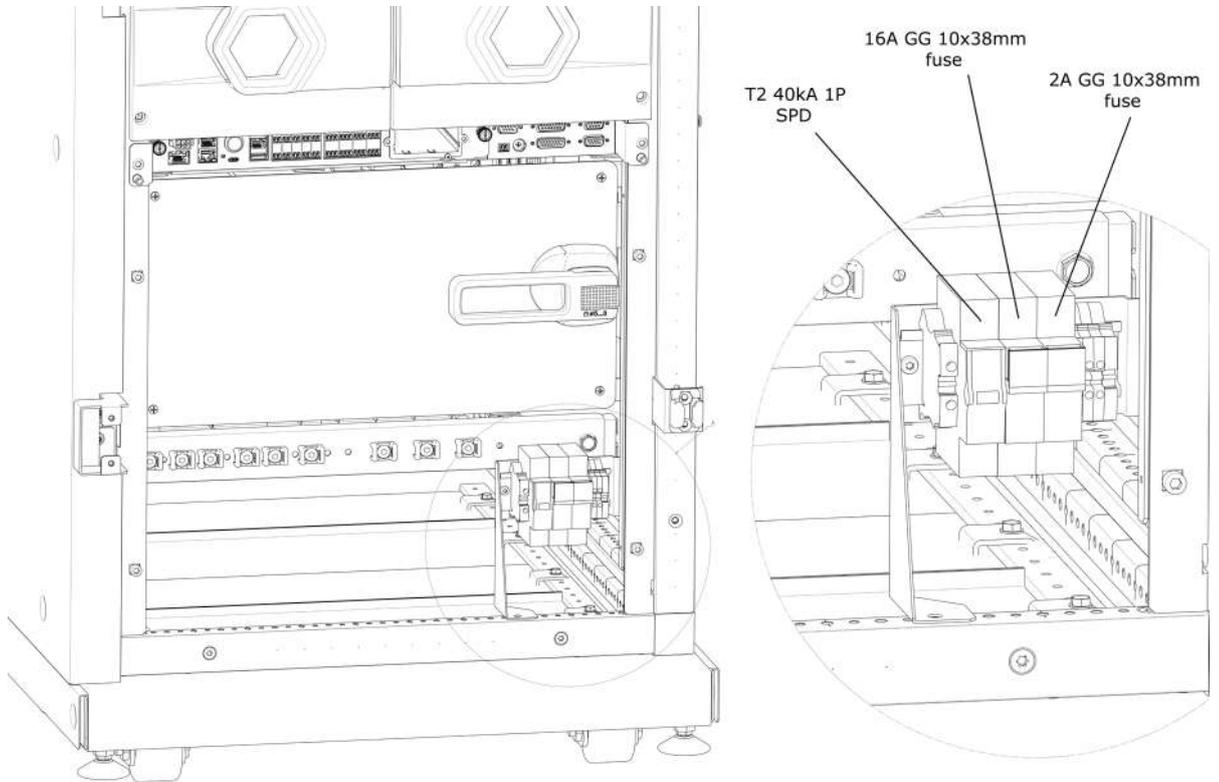

KEOR MOD 125

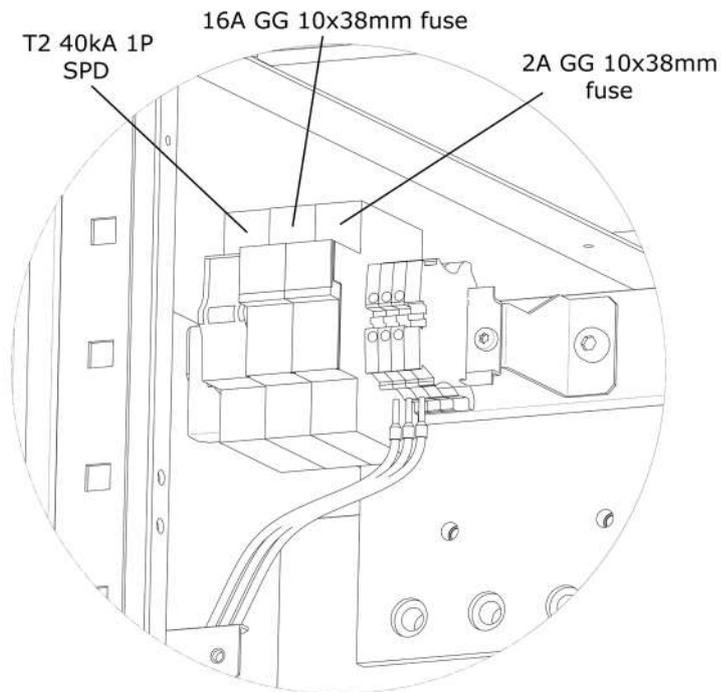

KEOR MOD 250

6.6 Extraordinary maintenance

Contact the LEGRAND Technical Support Service if there are failures that require the access to internal parts of the UPS.

7. Warehousing



DANGER

All storage operations must be carried out only by a **SKILLED TECHNICIAN** (paragraph 2.2.1)



DANGER

A SKILLED TECHNICIAN must check that there is no voltage present before disconnecting the cables. All the battery isolator switches on the UPS and on the EBC must be open.

All the battery isolator switches on the UPS and on the external battery cabinets must be open. The battery drawers of the UPS and of the external battery cabinet (if present) must be removed.

7.1 UPS

The UPS must be stored in an environment with a room temperature between -20°C (-4°F) and +50°C (+122°F) and humidity less than 90% (not condensing).

7.2 Batteries

It is possible to store batteries without recharging them in the following conditions:

- up to 6 months if the temperature is between +20°C (+68°F) and +30°C (+86°F);
- up to 3 months if the temperature is between +30°C (+86°F) and +40°C (+104°F);
- up to 2 months if the temperature is over +40°C (+104°F).



CAUTION

Batteries must never be stored if partially or totally discharged.

LEGRAND is not liable for any damage or bad functioning caused to the UPS by wrong warehousing of the batteries.

8. Dismantling



Dismantling and disposal operations must be carried out only by a **SKILLED TECHNICIAN** (paragraph 2.2.1). The instructions in this chapter are to be considered indicative: in every country there are different regulations regarding the disposal of electronic or hazardous waste such as batteries. It is necessary to strictly adhere to the standards in force in the country where the equipment is used.
Do not throw any component of the equipment in the ordinary rubbish.

8.1 Battery disposal

Batteries must be disposed of in a site intended for the recovery of toxic waste. Disposal in the traditional rubbish is not allowed.
Apply to the competent agencies in your countries for the proper procedure.



A battery may constitute a risk of electric shock and high short-circuit current.
When working on batteries, the prescriptions indicated in chapter 2 must be adhered to.

8.2 UPS dismantling

The dismantling of the UPS must occur after the dismantling of the various parts it consists of.
For the dismantling operations, it is necessary to wear the Personal Protective Equipment mentioned in paragraph 2.3.
Sub-divide the components separating the metal from the plastic, from the copper and so on according to the type of selective waste disposal in the country where the equipment is dismantled.
If the dismantled components must be stored before their disposal, be careful to keep them in a safe place protected from atmospheric agents to avoid soil and groundwater contamination.

8.3 Electronic component dismantling

For the disposal of electronic waste, it is necessary to refer to the relevant standards.




This symbol indicates that in order to prevent any negative effects on the environment and on people, this product should be disposed of separately from other household waste, by taking it to authorised collection centres, in accordance with the EU countries local waste disposal legislations. Disposing of the product without following local regulations may be punished by law. It is recommended to check that this equipment subject to WEEE legislations in the country where it is used.

9. Mechanical characteristics


The UPSs Keor MOD are sold as empty power cabinets. It is necessary to purchase the power modules separately.

9.1 Cabinets

(all the dimensions are in mm)

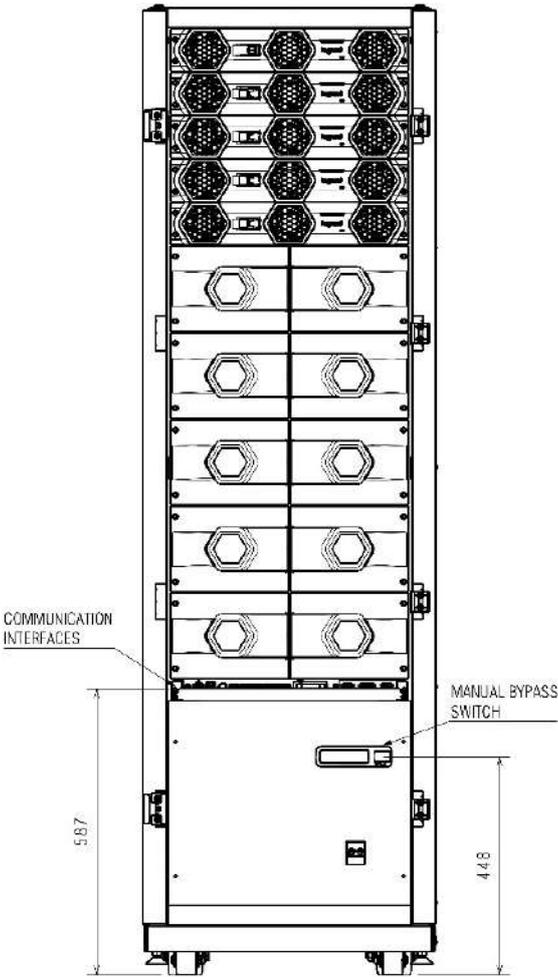



3 104 80 KEOR MOD 25-125 kVA

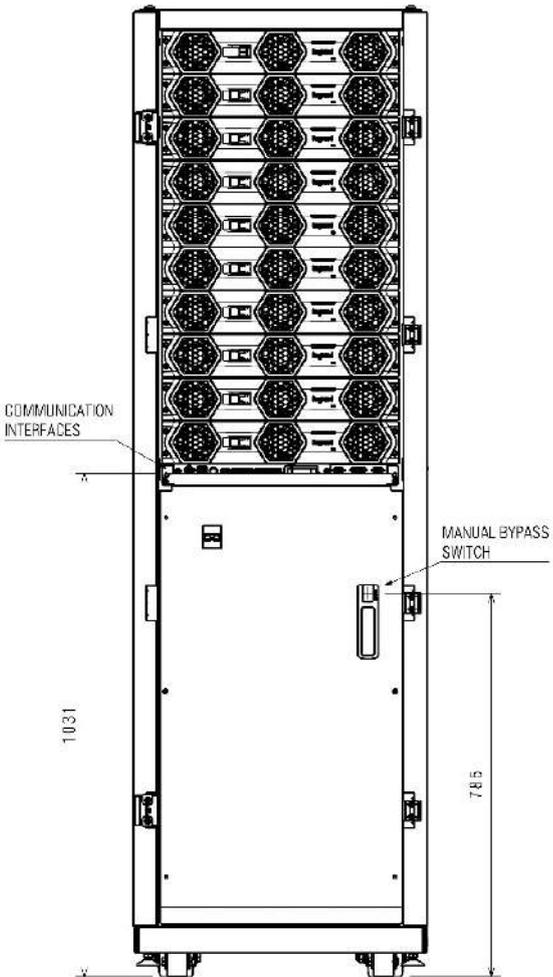


3 104 81 KEOR MOD 25-250 kVA


9. Mechanical characteristics

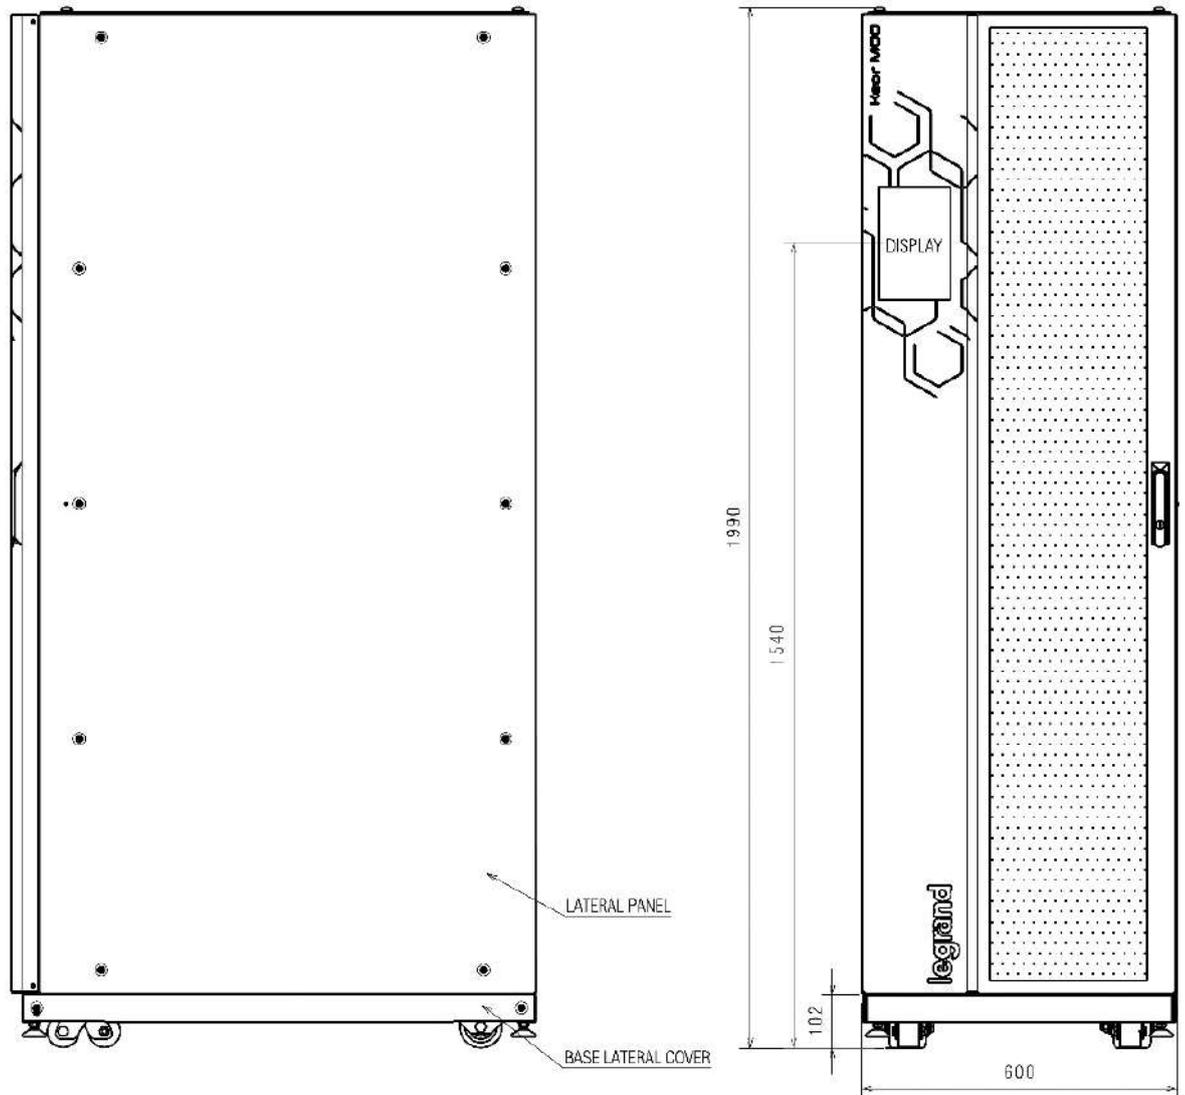

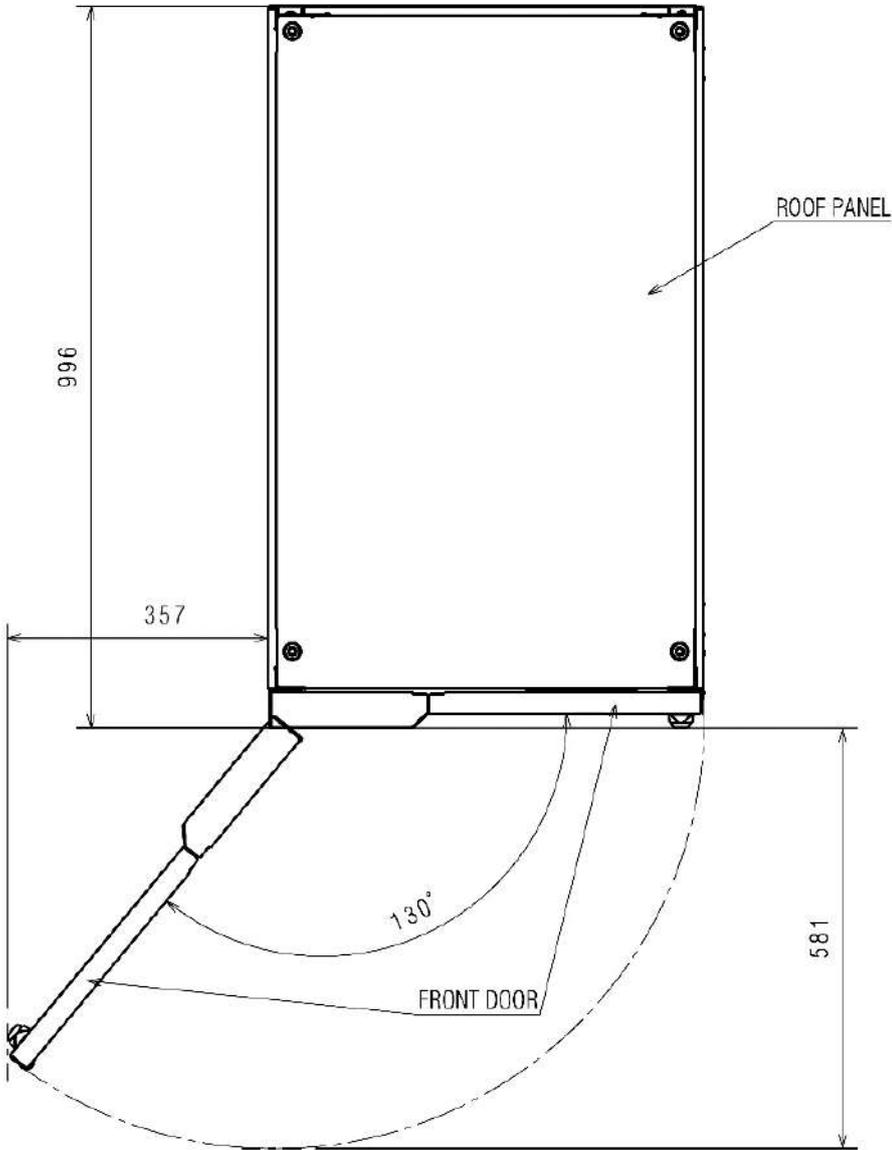

9. Mechanical characteristics

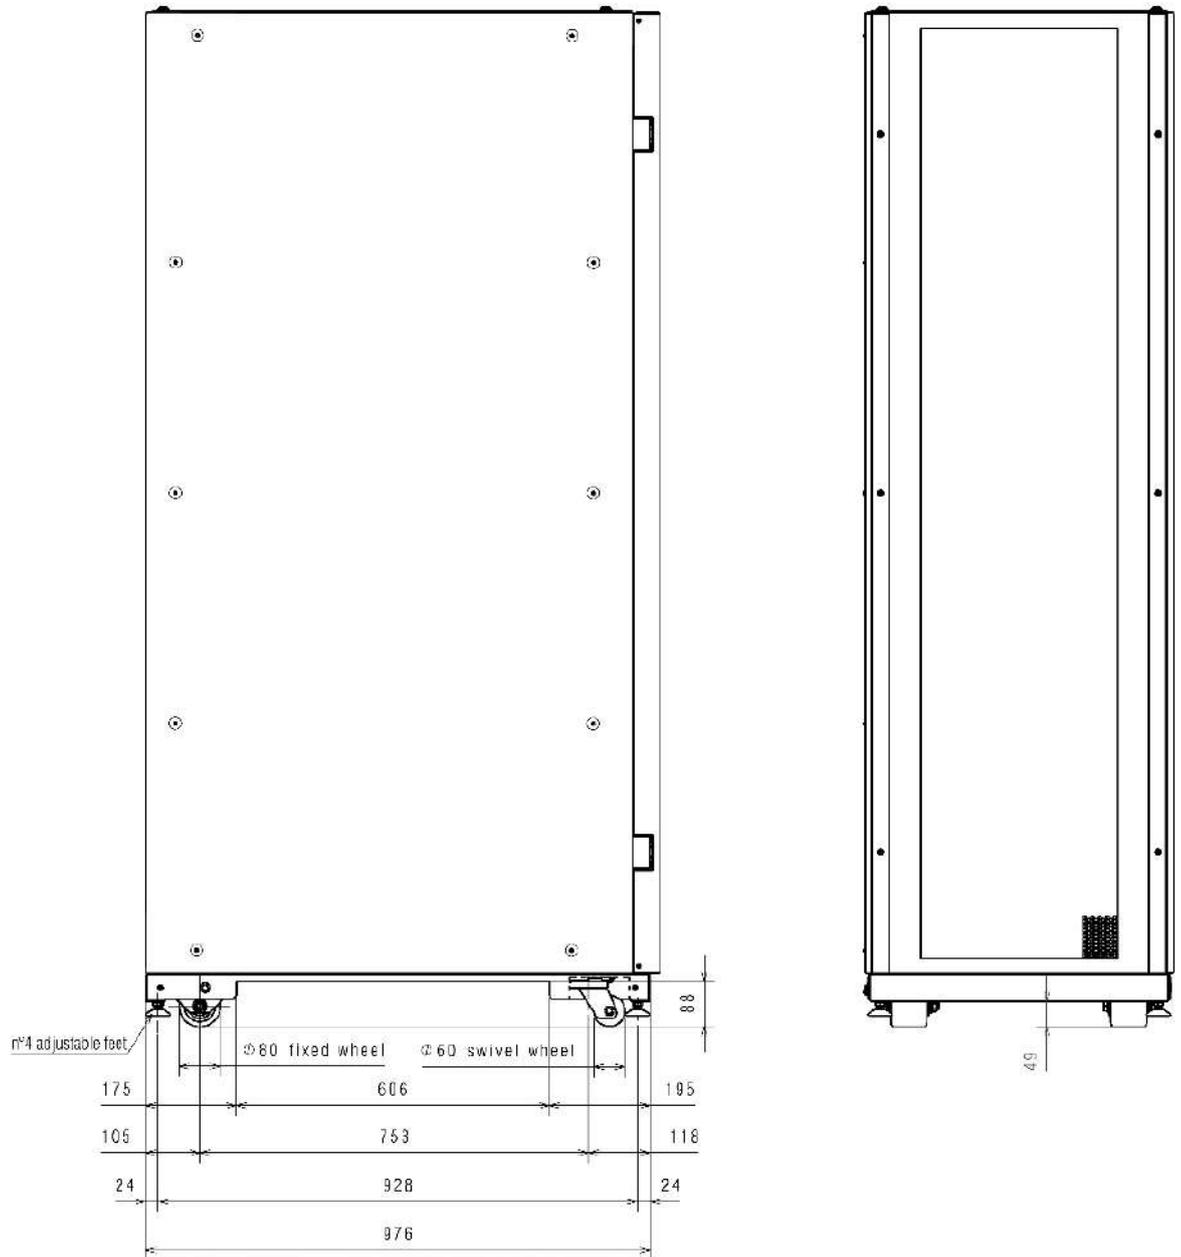


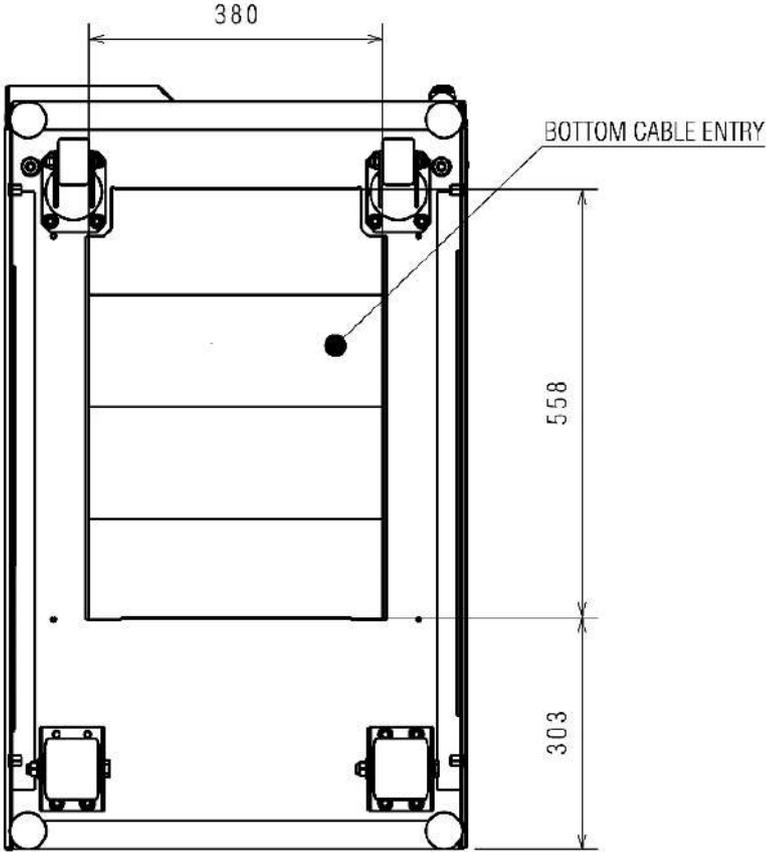

9. Mechanical characteristics




9.2 Power module PM25

(all the dimensions are in mm)

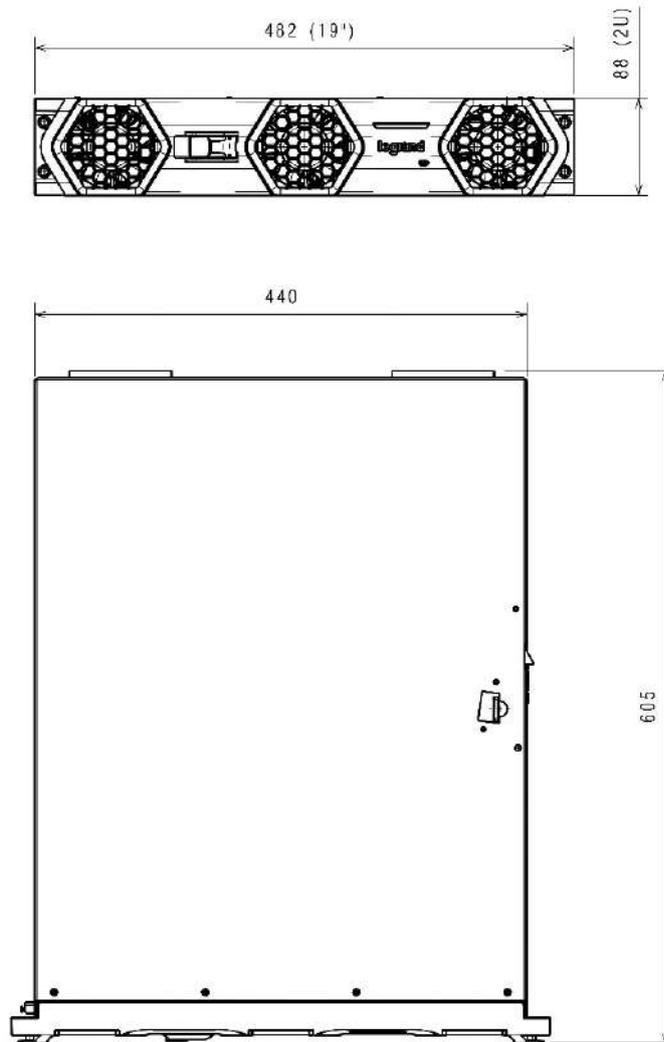

10. Technical data




9.3 Battery drawer
(all the dimensions are in mm)

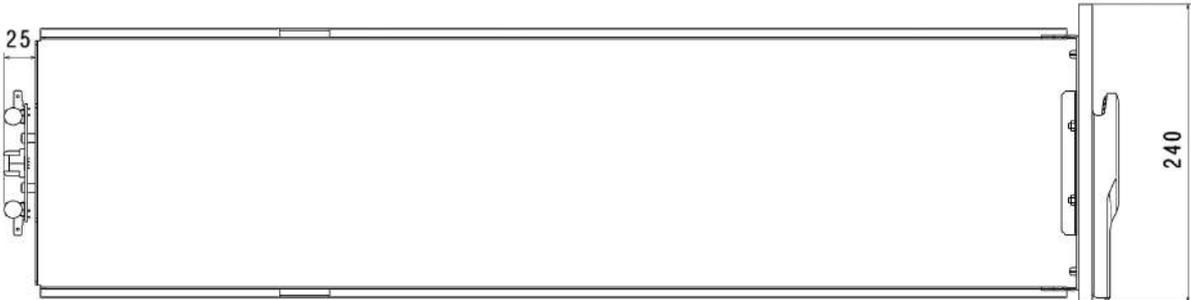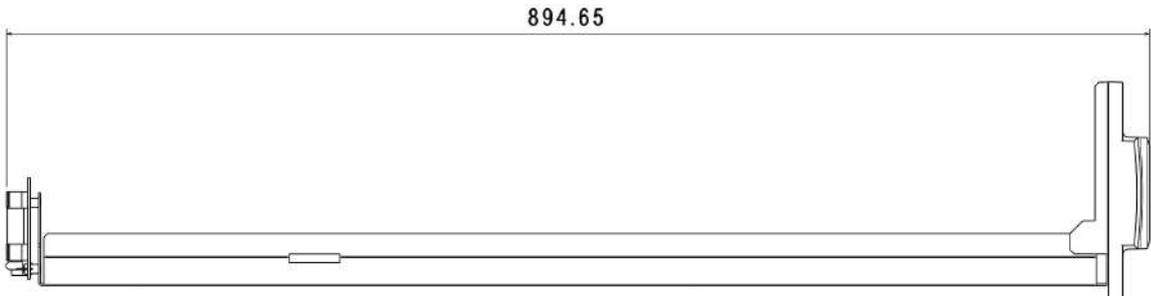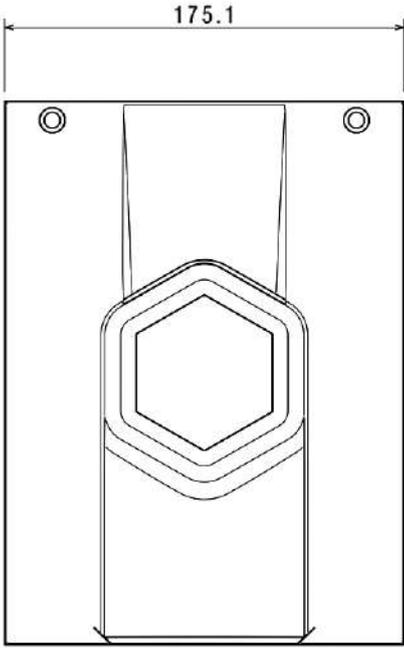

9. Mechanical characteristics

9.4 Battery block

(all the dimensions are in mm)

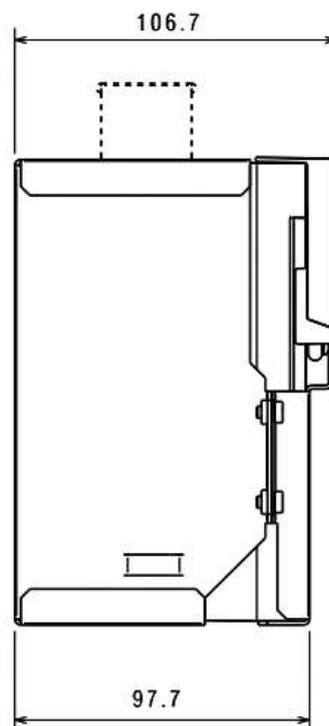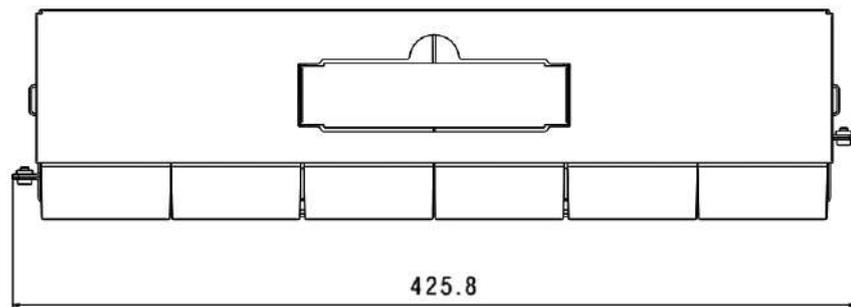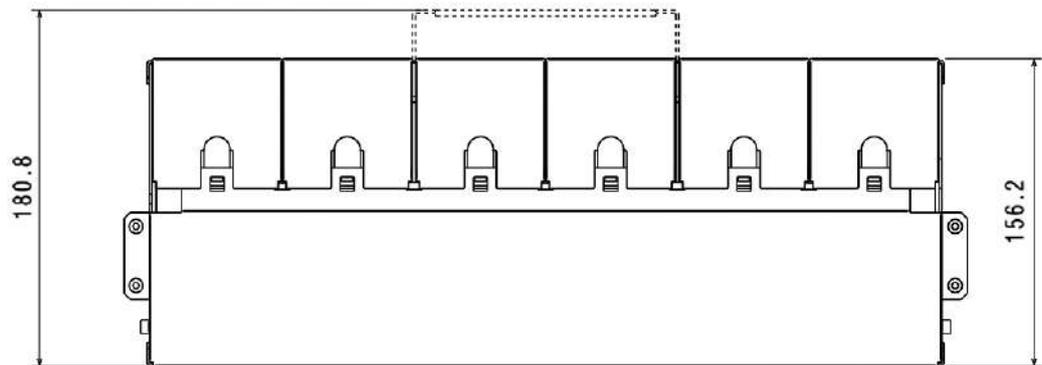

10. Technical data

Main features

	Keor MOD 25	Keor MOD 50	Keor MOD 75	Keor MOD 100	Keor MOD 125	Keor MOD 150	Keor MOD 175	Keor MOD 200	Keor MOD 225	Keor MOD 250
Nominal Power (kVA)	25	50	75	100	125	150	175	200	225	250
Active Power (kW)	25	50	75	100	125	150	175	200	225	250
Number of power modules	1	2	3	4	5	6	7	8	9	10
Technology	online, double conversion VFI-SS-111 (EN62040-3)									
IN/OUT configuration	Three-phase / Three-phase									
Dual Input	Available									
UPS system	Modular, expandable and redundant									
Neutral system	Neutral passing straight from input to output (not isolated)									
Bypass	Automatic (static) Manual (for maintenance)									
Overvoltage category	OVC II									

Input electrical characteristics

	Keor MOD 25	Keor MOD 50	Keor MOD 75	Keor MOD 100	Keor MOD 125	Keor MOD 150	Keor MOD 175	Keor MOD 200	Keor MOD 225	Keor MOD 250
Rated input current (A) (full load and 400V input voltage)	37.6	75	113	150	188	225.6	263.2	300	338	376
Maximum input current (A) (full load and 320V input voltage)	47	94	141	188	235	282	329	376	423	470
Input voltage (V)	400 + 15% - 20% (3F+N+PE)									
Input frequency (Hz)	50 / 60 ± 2% 50 / 60 ± 14 % (autosensing and/or selectable by the user)									
Input Power Factor	> 0.99									
Total harmonic distortion of the input current	THDi < 3% (at full load)									
Icp Prospective short-circuit current (kA)	10									

10. Technical data

Output electrical characteristics (normal mode)

	Keor MOD 25	Keor MOD 50	Keor MOD 75	Keor MOD 100	Keor MOD 125	Keor MOD 150	Keor MOD 175	Keor MOD 200	Keor MOD 225	Keor MOD 250
Maximum output current (A)	36	72	108	144	180	216	252	288	324	360
Output voltage (V)	380/400/415 ± 1%									
Output frequency (Hz)	50 / 60 (selectable by the user)									
Range of the output frequency	If synchronized with the bypass frequency: adjustable range from ±1% to ±14% If not synchronized (free run): ± 0.1 Hz									
Crest factor admitted on the output current	3:1									
Total harmonic distortion of the output voltage	THDv < 0.5% (at full linear load) THDv < 1% (at full non-linear load)									
Efficiency in Normal Mode	up to 96.5%									
Efficiency in Eco Mode	99%									
Overload capacity	125% for 10 minutes without automatic bypass intervention 150% for 60 seconds without automatic bypass intervention									

Output electrical characteristics (battery mode)

	Keor MOD 25	Keor MOD 50	Keor MOD 75	Keor MOD 100	Keor MOD 125	Keor MOD 150	Keor MOD 175	Keor MOD 200	Keor MOD 225	Keor MOD 250
Output voltage (V)	380/400/415 ± 1%									
Output frequency (Hz)	50 / 60 Hz ± 1%									
Total harmonic distortion of the output voltage	THDv < 0.5% (at full linear load) THDv < 2.5% (at full non-linear load)									
Overload capacity	115% for 10 minutes									
Shortcircuit	I _{cc} = 3 I _n for 50 ms I _{cc} = 1.45 I _n for 1 sec									

Batteries and battery charger characteristics

	Keor MOD 25	Keor MOD 50	Keor MOD 75	Keor MOD 100	Keor MOD 125	Keor MOD 150	Keor MOD 175	Keor MOD 200	Keor MOD 225	Keor MOD 250
Nominal battery voltage (V)	± 288 (48 blocks)									
Battery voltage range (V)	± 264 to ± 312 (44-52 blocks)									
Battery wiring	Internal batteries: string made up of 2 drawers (composed by 4 blocks of 6 batteries) External batteries						Only external batteries			
Battery type	VRLA						-			
Unitary capacity	12 Vdc - 9 Ah 12 Vdc - 11 Ah						-			
Type of battery charger	High performance PWM, one for each power module Smart charge technology (3-stage advanced cycle)									
Maximum recharge current (A)	5 (for each power module installed)									
Independent battery configuration	maximum 5 sets of independent batteries (configurable as common or separate units)									

Features

	Keor MOD 25	Keor MOD 50	Keor MOD 75	Keor MOD 100	Keor MOD 125	Keor MOD 150	Keor MOD 175	Keor MOD 200	Keor MOD 225	Keor MOD 250
Display	10-inch rotating colour touchscreen									
Communication ports	2 x RS485 ports (one for external accessories) 10 input floating contacts 8 output floating contacts 1 interface slot USB host port									
Protections	Backfeed protections (NC/NO auxiliary contact) Emergency Power Off (EPO) Electronic against overloads, short-circuit and excessive battery discharge Block of functions due to the end of autonomy In-rush limiter on start up Internal battery circuit fuses (for internal battery drawers)									
Remote management	available									

10. Technical data

Mechanical characteristics

	Keor MOD 25	Keor MOD 50	Keor MOD 75	Keor MOD 100	Keor MOD 125	Keor MOD 150	Keor MOD 175	Keor MOD 200	Keor MOD 225	Keor MOD 250
Empty power cabinet	3 104 80					3 104 81				
Net weight (kg)	256					233				
Dimensions H x W x D (mm)	1990 x 600 x 1000									
Installable Power modules PM25 3 106 75	up to 5					up to 10				
PM25 net weight (kg)	22,5									
Installable battery drawers	up to 10					-				
Weight of one battery block (kg)	17 (9Ah batteries) 19,2 (11Ah batteries)					-				
Weight of one battery drawer with 4 battery blocks (kg)	72 (9Ah batteries) 81 (11Ah batteries)					-				

Environmental conditions

	Keor MOD 25	Keor MOD 50	Keor MOD 75	Keor MOD 100	Keor MOD 125	Keor MOD 150	Keor MOD 175	Keor MOD 200	Keor MOD 225	Keor MOD 250
Operating temperature (°C)	0 ÷ +40									
Relative humidity during operation	0% ÷ 95% non-condensing									
Storage temperature (°C)	-20 ÷ +50 (excluding batteries)									
Noise level at 1 metre (dBA)	50 ÷ 65									
Ingress Protection Marking	IP 20									
Pollution degree	PD2									
Environmental category (EN 60721-3-3)	class 3K2									
Operating height	up to 1000 metres above sea level without derating									
Heat dissipation with full load (BTU/h)	3560	7120	10680	14240	17800	21360	24920	28480	32040	35600

Reference directives and standards

Marks	CE
Safety	Directive 2014/35/EU EN 62040-1
EMC	Directive 2014/30/EU EN 62040-2
Performance and test requirements	EN 62040-3

11. Tables



CAUTION

The choice of the type and section of the power cables must be done according to the voltage and rated current as well as the local wiring standards and regulations. It is a responsibility of the installation engineer.

The input current and the output power of the UPS are indicated in chapter 10 and the battery current in table 5 of this chapter.


The following tables give an indication of the wire cross sections to use if the wires are unipolar with simple PVC installation and installation in tube in the air.

TABLE 1
Minimum wire cross sections recommended

POWER	INPUT CABLE	BYPASS CABLE (in case of separate bypass line)	OUTPUT CABLE
125 kVA	Phase: 1 x 95 mm ² or 2 x 50 mm ² per pole Neutral: 1 x 120 mm ² or 2 x 70 mm ²	Phase: 1 x 95 mm ² or 2 x 50 mm ² per pole Neutral: 1 x 120 mm ² or 2 x 70 mm ²	Phase: 1 x 95 mm ² or 2 x 50 mm ² per pole Neutral: 1 x 120 mm ² or 2 x 70 mm ²
250 kVA	Phase: 1 x 185 mm ² or 2 x 95 mm ² per pole Neutral: 1 x 240 mm ² or 2 x 120 mm ²	Phase: 1 x 185 mm ² or 2 x 95 mm ² per pole Neutral: 1 x 240 mm ² or 2 x 120 mm ²	Phase: 1 x 150 mm ² or 2 x 70 mm ² per pole Neutral: 1 x 240 mm ² or 2 x 120 mm ²

11. Tables

TABLE 2
Maximum wire cross sections and maximum crimping lugs

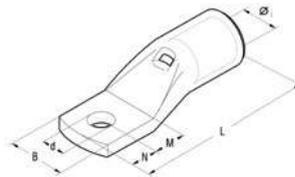

CABINET	INPUT - BYPASS - OUTPUT	NEUTRAL	BATTERY (CONFIGURED AS COMMON BATTERY)
KEOR MOD 125	<p>up to 95 mm² B = 25 mm (M8 standard palm width)</p> <p>up to 185 mm² B = 24,5 mm (M8 contained palm width)</p>	<p>up to 120 mm² B = 28,5 mm (M8 standard palm width)</p> <p>up to 185 mm² B = 24,5 mm (M8 contained palm width)</p> <p>for independent strings of battery up to 16 mm² B = 11,5 mm (M5 contained palm width)</p>	<p>1 x up to 120 mm² B = 28,5 mm (M8 standard palm width)</p> <p>1 x up to 185 mm² B = 24,5 mm (M8 contained palm width)</p> <p>2 x up to 70 mm² B = 21 mm (M8 standard palm width)</p> <p>2 x up to 150 mm² B = 19 mm (M8 contained palm width)</p>
KEOR MOD 250	<p>up to 150 mm² B = 31,5 mm (M10 standard palm width)</p> <p>up to 240 mm² B = 31 mm (M10 contained palm width)</p>	<p>3 x up to 240 mm² B = 31,5 mm (M10 standard palm width)</p> <p>3 x up to 300 mm² B = 31 mm (M10 contained palm width)</p> <p>6 x up to 120 mm² B = 28,5 mm (M10 standard palm width)</p> <p>6 x up to 185 mm² B = 24,5 mm (M10 contained palm width)</p>	<p>1 x up to 240 mm² B = 39 mm (M8 standard palm width)</p> <p>2 x up to 120 mm² B = 28,5 mm (M8 standard palm width)</p> <p>2 x up to 150 mm² B = 19 mm (M8 contained palm width)</p>

TABLE 3
Automatic breaker recommended for input and bypass line

POWER	AUTOMATIC CIRCUIT BREAKER
125 kVA	In=250 A curve C Icp=10kA
250 kVA	In=630 A curve C Icp=10kA

TABLE 4
Residual current breaker recommended for input and bypass line

POWER	RESIDUAL CURRENT BREAKER (IΔn)
125 kVA	≥ 300 mA type B
250 kVA	

TABLE 5
Maximum current absorbed by the batteries at full load and minimum wire cross sections recommended for connecting the UPS to the external battery units

POWER	MAXIMUM BATTERY CURRENT	MINIMUM WIRE CROSS SECTION
125 kVA	325 A	Common battery: 1 x 150 mm ² (per pole) Independent strings: 5 x 16 mm ² (per pole)
250 kVA	650 A	Common battery: 2 x 150 mm ² (per pole) Independent strings: 5 x 35 mm ² (per pole)

TABLE 6
External battery cabinets

ITEM CODE	CABINET DIMENSION (L X D X H) mm	SWITCHES AND PROTECTION KIT	BATTERIES (Ah)
3 109 65	1200 x 900 x 1900	1x FUSE HOLDER 3P NH2 400A - 3x aR FUSE 315A	70-93
3 109 67	1200 x 900 x 1900	1x FUSE HOLDER 3P NH2 400A - 3x aR FUSE 350A	105
3 109 44	1200 x 900 x 1900	1x FUSE HOLDER 3P NH1 250A - 3x aR FUSE 250A	55
3 109 89	2 cabinets 810 x 840 x 1900	2 cabinets 2x FUSE HOLDER 3P NH2 400A - 3x gR FUSE 315A	80



KEOR MOD Battery Drawers – Battery Blocks

EN

ENGLISH

3

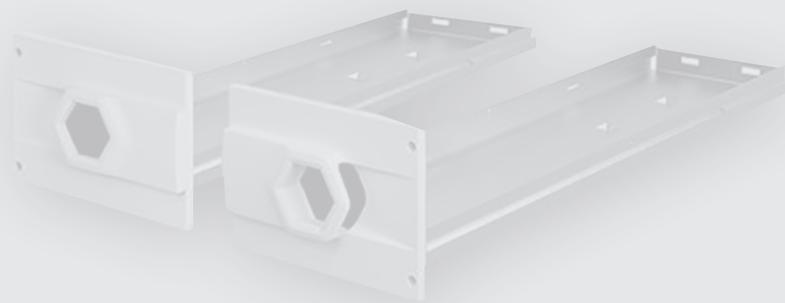
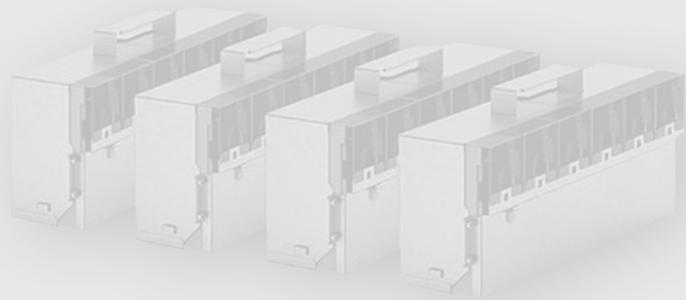


Table of Contents

1	Introduction	4
1.1	Purpose of the manual	4
1.2	Symbols in the manual	4
1.3	Where and how to keep the manual	4
1.4	Update of the manual	5
1.5	Manufacturer's liability and guarantee	5
1.6	Copyright	5
2	Safety regulations	6
2.1	General notes	6
2.2	Definition of "Skilled Technician"	6
2.3	Personal Protective Equipment	4
2.4	General warnings	4
3	Installation	8
4	Warehousing and dismantling	16
4.1	Warehousing	16
4.2	Dismantling	16
5	Mechanical characteristics	17
5.1	Battery drawer	17
5.2	Battery block	18

1. Introduction

INDICATION

The instructions in this manual are intended for a **SKILLED TECHNICIAN** (paragraph 2.2)

1.1 Purpose of the manual

The purpose of this manual is to provide the skilled technician with instructions for safely installing the battery drawers and battery blocks on the Keor MOD UPS.

The reading of this manual is essential but does not substitute the skill of technical personnel who must have received adequate preliminary training.

The original text of this publication, drafted in English, is the only reference for the resolution of disputes of interpretation linked to translations into other languages.

1.2 Symbols in the manual

Some operations are shown in graphic symbols that draw the attention of the reader to the danger or the importance they imply:



This indication shows a danger entailing a high degree of risk that, if not avoided, will lead to death or serious injury or considerable damage to the equipment and things around it.



This indication shows a danger entailing a medium degree of risk that, if not avoided, could lead to death or serious injury or considerable damage to the equipment and the things around it.



This indication shows a danger entailing a low level of risk that, if not avoided, could lead to minor or moderate injury or material damage to the equipment and the things around it.

INDICATION

This symbol indicates important information which should be read carefully.

1.3 Where and how to keep the manual

This manual must be kept in a safe, dry place and must always be available for consultation exclusively by the skilled technician.

It is recommended to make a copy of it and file it away.

INDICATION

The manual provided with the equipment is an integral part of it and must therefore be kept for its entire lifetime. In case of need (for example in case of damage that even partially compromises its consultation) the skilled technician is required to get a new copy from the Manufacturer, quoting the publication code on the cover.

1.4 Update of the manual

The manual reflects the state of the art when the equipment was put onto the market. The manual cannot be considered inadequate when new standards come into force or modifications are made to the equipment.

Any addition to the manual that the Manufacturer considers appropriate to send to the users, must be kept together with the manual of which they will become an integral part.

The version of the manual updated to its latest release is available on the Internet at <http://www.ups.legrand.com>

1.5 Manufacturer's liability and guarantee

The Manufacturer declines all indirect or direct responsibility arising from:

- assembly and cabling made by personnel not fully qualified according to national standards to work on equipment presenting electrical hazards;
- assembly and cabling made without using safety equipment and tools required by national safety standards;
- failure to observe the installation instructions and use of the equipment which differs from the specifications in the manuals;
- modifications made to the equipment, software, functioning logic unless they have been authorized by the Manufacturer in writing;
- repairs that have not been authorized by the LEGRAND Technical Support Service;
- damage caused intentionally, through negligence, by acts of God, natural phenomena, fire or liquid infiltration.

The transfer of the equipment to others also requires to hand over all the manuals. Failure to do it will automatically nullify any right of the buyer, including the terms of the guarantee where applicable.

If the equipment is sold to a third party in a country where a different language is spoken, the original owner shall be responsible for providing a faithful translation of this manual in the language of the country where the equipment will be used.

1.6 Copyright

The information contained in this manual cannot be disclosed to any third party. Any partial or total duplication of the manual by photocopying or other systems, including electronic scanning, which is not authorized in writing by the Manufacturer, violates copyright conditions and may lead to prosecution.

LEGRAND reserves the copyright of this publication and prohibits its reproduction wholly or in part without previous written authorization.

2. Safety regulations



Before carrying out any operation, it is necessary to read the entire manual carefully, especially this chapter. Consult it repeatedly during installation and maintenance by a skilled technician.

2.1 General notes

The equipment has been made for the applications given in the manual. It may not be used for purposes other than those for which it has been designed, or differently from those specified in this manual.

The various operations must be carried out according to the criteria and the chronology described in this manual.

2.2 Definition of “Skilled Technician”

The figure that will carry out the installation is called “Skilled Technician”.

This definition refers to people who have specific technical qualification which enables them to operate according to safety standards in relation to the dangers linked to the presence of electric current.

They are aware of the method of installing, assembling, repairing and using the equipment safely.

The Skilled Technician is qualified according to national safety standards to work under dangerous electrical voltage and uses the personal protective equipment required by national safety standards for all the operations indicated in this manual (see the examples listed in paragraph 2.3).

2.3 Personal Protective Equipment



The installation of batteries in a UPS poses a considerable risk of electric shocks and a high short circuit current. During installation, use and maintenance operations, the equipment mentioned in this section must be used.

People responsible for operating this equipment and/or passing close to it must not wear garments with flowing sleeves, nor may laces, belts, bracelets or other metal pieces that might cause a danger.

The following list sum up the minimum Personal Protective Equipment to wear always. Additional requirements may be needed according to national safety standards.



Anti-accident and non-sparking shoes with rubber sole and reinforced toe



Protective gloves for handling operations



Isolated rubber gloves for operations of connection and work under hazardous voltage



Protective garments for electrical work



Protective face and head shield



Isolated tools

INDICATION

The skilled technician must work on electrical insulated carpet and he must not wear any kind of metal objects like watches, bracelets, etc.

2.4 General warnings

WARNING

A battery can present a risk of electrical shock and burns by high short-circuit current. Failed batteries can reach temperatures that exceed the burn thresholds for touchable surfaces. The following precautions should be observed when working on batteries:

- a) remove watches, rings or other metal objects.
- b) use tools with insulated handles.
- c) wear rubber gloves and boots.
- d) do not lay tools or metal parts on top of batteries.
- e) disconnect the charging source prior to connecting or disconnecting battery terminals.
- f) determine if battery is inadvertently grounded. If inadvertently grounded, remove source from ground. Contact with any part of a grounded battery can result in electrical shock. The likelihood of such shock can be reduced if such grounds are removed during installation and maintenance (applicable to equipment and remote battery supplies not having a grounded supply circuit).
- g) never leave live cable terminals without an insulated protection.
- h) When replacing batteries, replace with the same type and number of batteries or battery packs. There is the risk of explosion if batteries are replaced by an incorrect type.

Do not dispose of batteries in a fire. The batteries may explode.

Do not open or mutilate batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic. The batteries installed inside the cabinet must be disposed of correctly. For the disposal requirements refer to local laws and relevant standards.

CAUTION

To prevent damage or safety hazard, keep the batteries and the UPS cabinet away from flames and any other device that may cause sparks.

INDICATION

If any visible damage is found on the product during the unpacking operation, do not install the batteries but repack the units and return them to your reseller or distributor.

INDICATION

Batteries tend to discharge if they are stored and not connected to the UPS. They should be recharged every 2-3 months if unused. During normal operation, the batteries will be kept charged.

INDICATION

Operating temperatures above the recommended range will result in decreased battery life and performance and will reduce or void the battery warranty.

3. Installation



DANGER

All installation operations must be carried out exclusively by a **SKILLED TECHNICIAN** (paragraph 2.2).




WARNING

The installation procedure below explains how to install the battery drawers and battery blocks if the UPS Keor MOD is completely turned OFF and disconnected from all sources of supply, including all battery drawers and external battery cabinets.

In case of replacements of battery drawers with the UPS turned ON, follow strictly the instructions outlined in the UPS installation manual.


The cabinet for the Keor MOD 125 allows to have from two to ten internal battery drawers. Each battery string is made up of two drawers therefore it is necessary to install them two by two.

The battery drawers have a specific order in the cabinet that must be kept especially if the UPS has to work in a configuration with separate batteries (not in common).

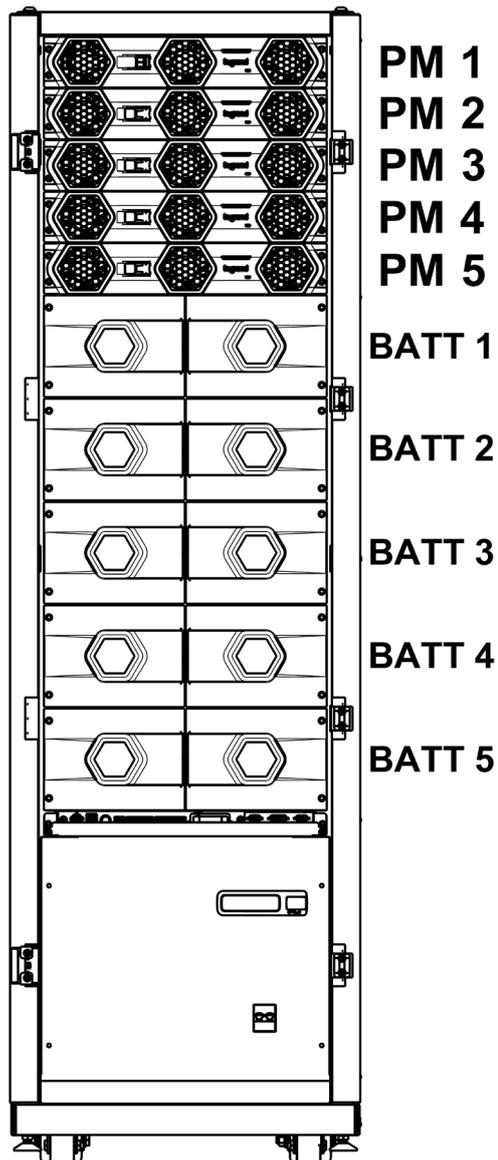


KEOR MOD Battery Drawers – Battery Blocks

Starting from the top of the cabinet, unscrew the four screws that fix the slot cover where the battery drawers must be installed and save them.

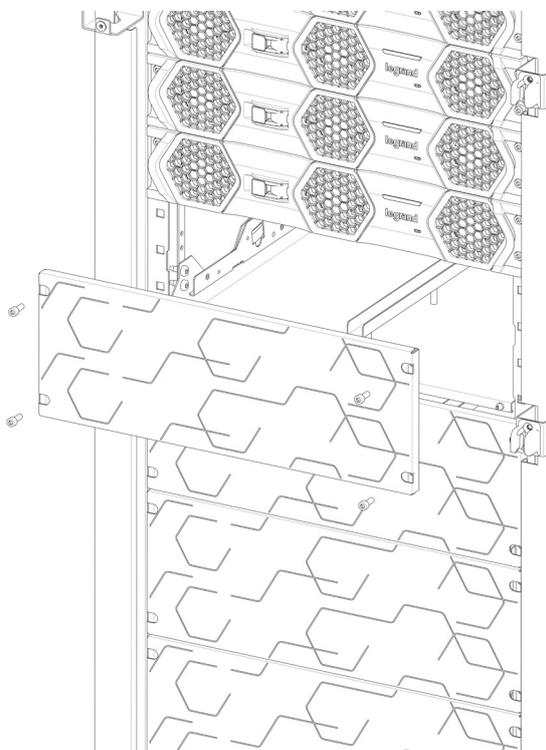


Insert the empty battery drawers in the free slots and push them till you hear a 'click'.
The battery blocks must be added to the drawers only when these are inserted in the cabinet.

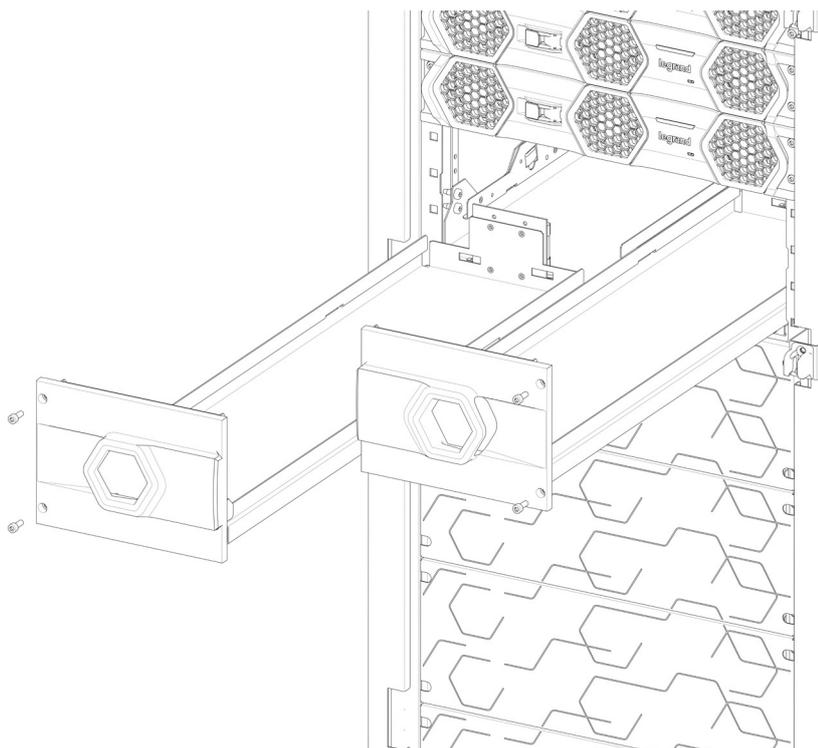



3. Installation

In case of empty battery blocks, start inserting the handle in the block.

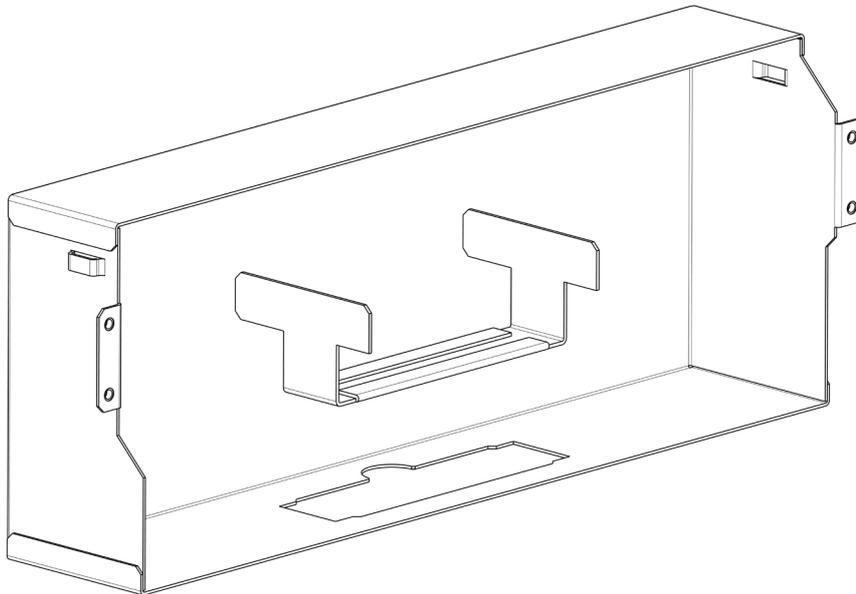


Insert the batteries in the block and connect them in series using the cables provided and respecting the polarity (connect a positive terminal of one battery to a negative terminal of another battery).

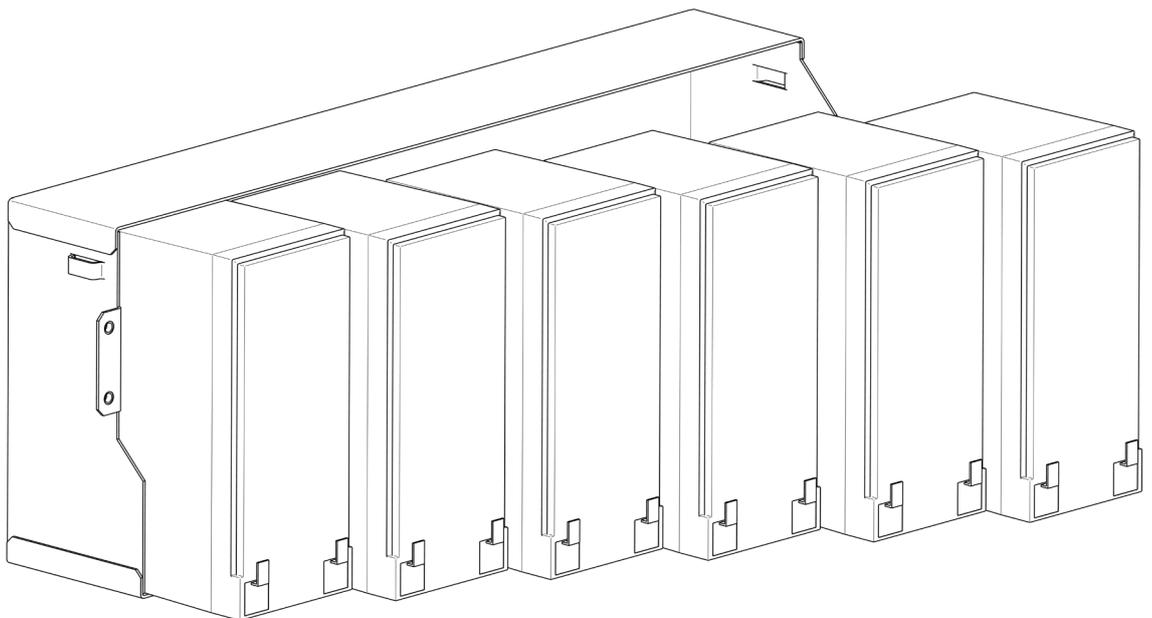

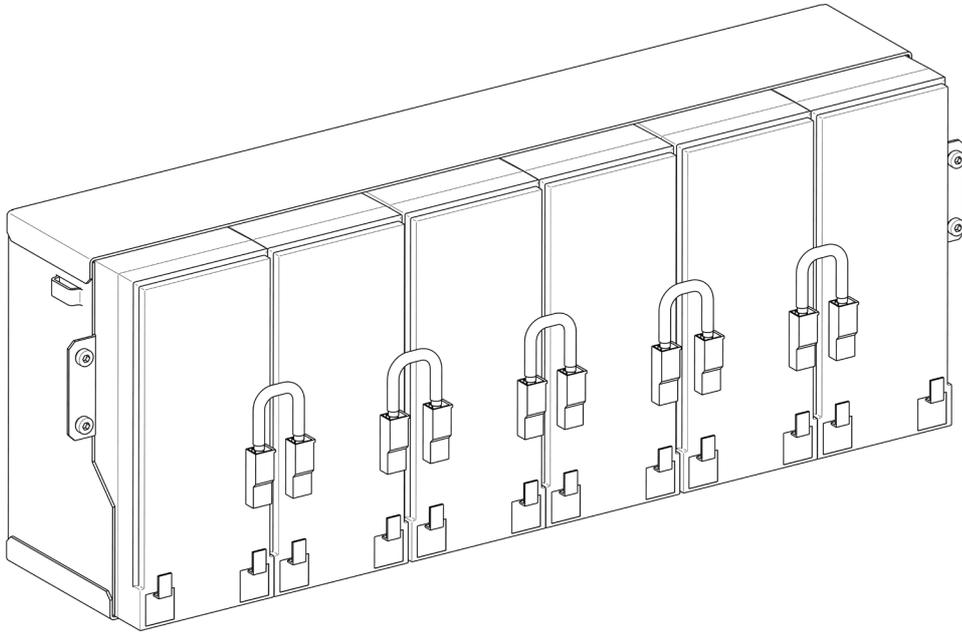


Keep the batteries firm to the block by fixing a metal bar with the four screws provided.

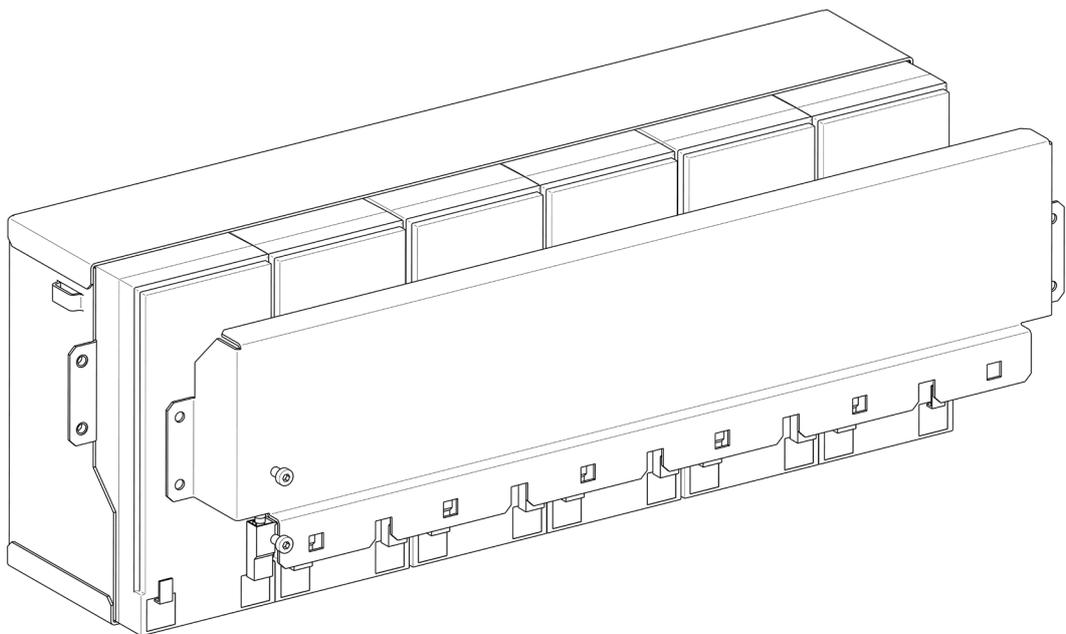

3. Installation


Insert the terminal covers on the four central batteries of the block but not on those at the extremes. Prepare the remaining three battery blocks in the same way.

In case of battery blocks already filled, remove the terminal covers of the batteries at the extremes.

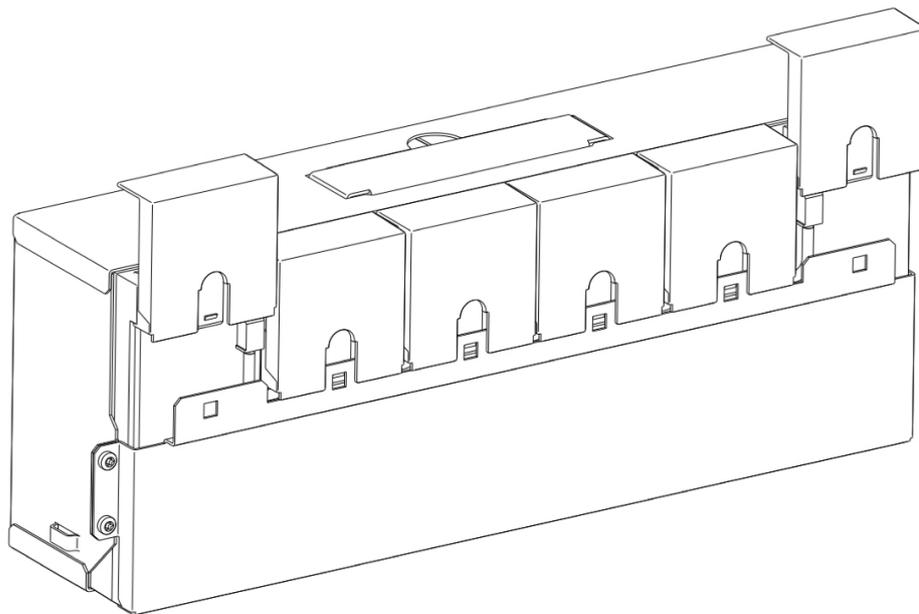


X 4

Add two battery blocks on a drawer and connect in series the two blocks using the cable provided and respecting the polarity (connect a positive terminal to a negative terminal).

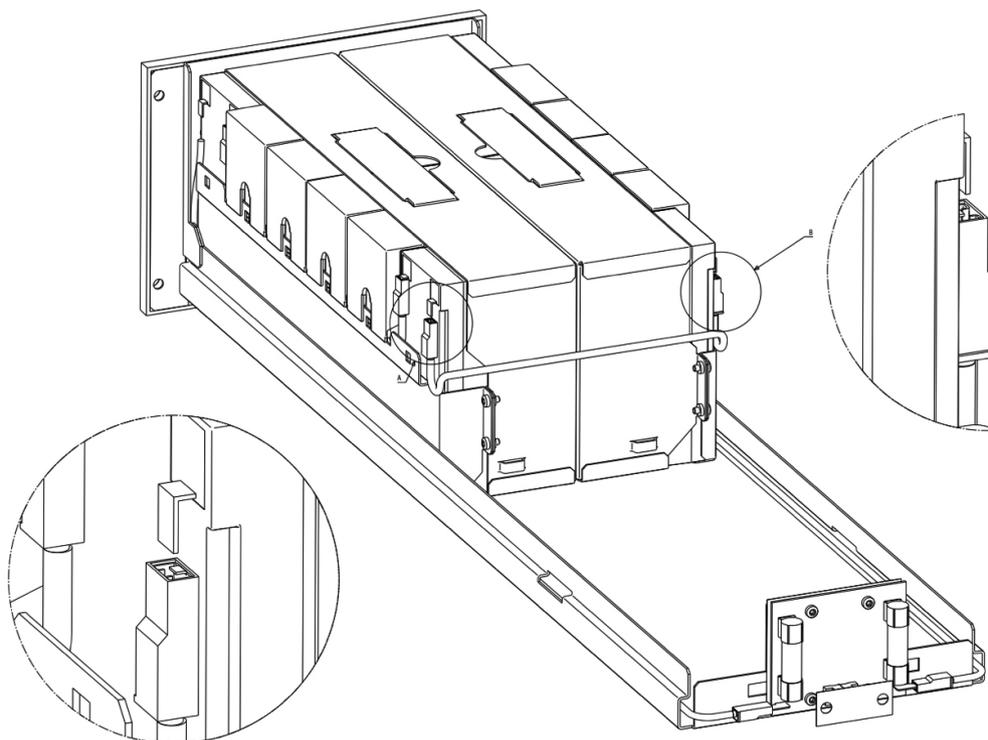


KEOR MOD Battery Drawers – Battery Blocks

Once the connection is done, insert the terminal covers on the two batteries and push the blocks at the bottom of the drawer.

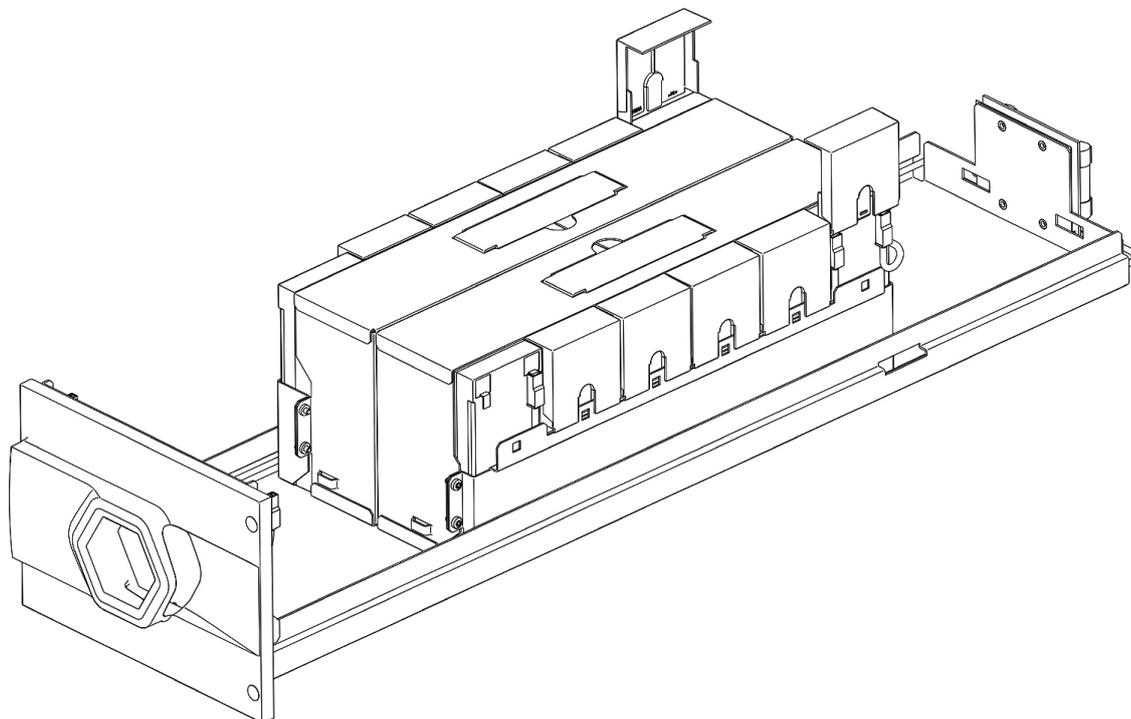


Add other two battery blocks on the drawer.

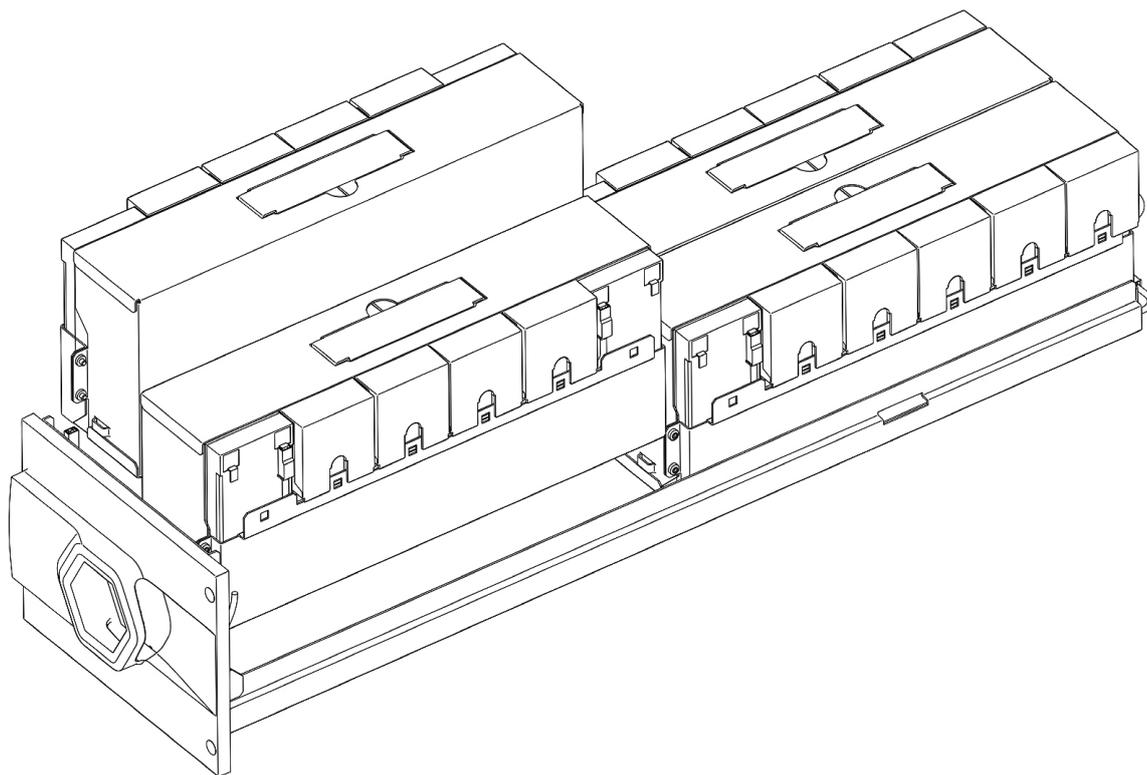


3. Installation

Connect in series the two new blocks to the ones already in the drawer using the cable provided and respecting the polarity (connect a positive terminal to a negative terminal).
Connect the free terminals of the two batteries located close to the handle of the drawer to the cables that go to the back of the drawer. Check the correct polarity of the whole cabling.

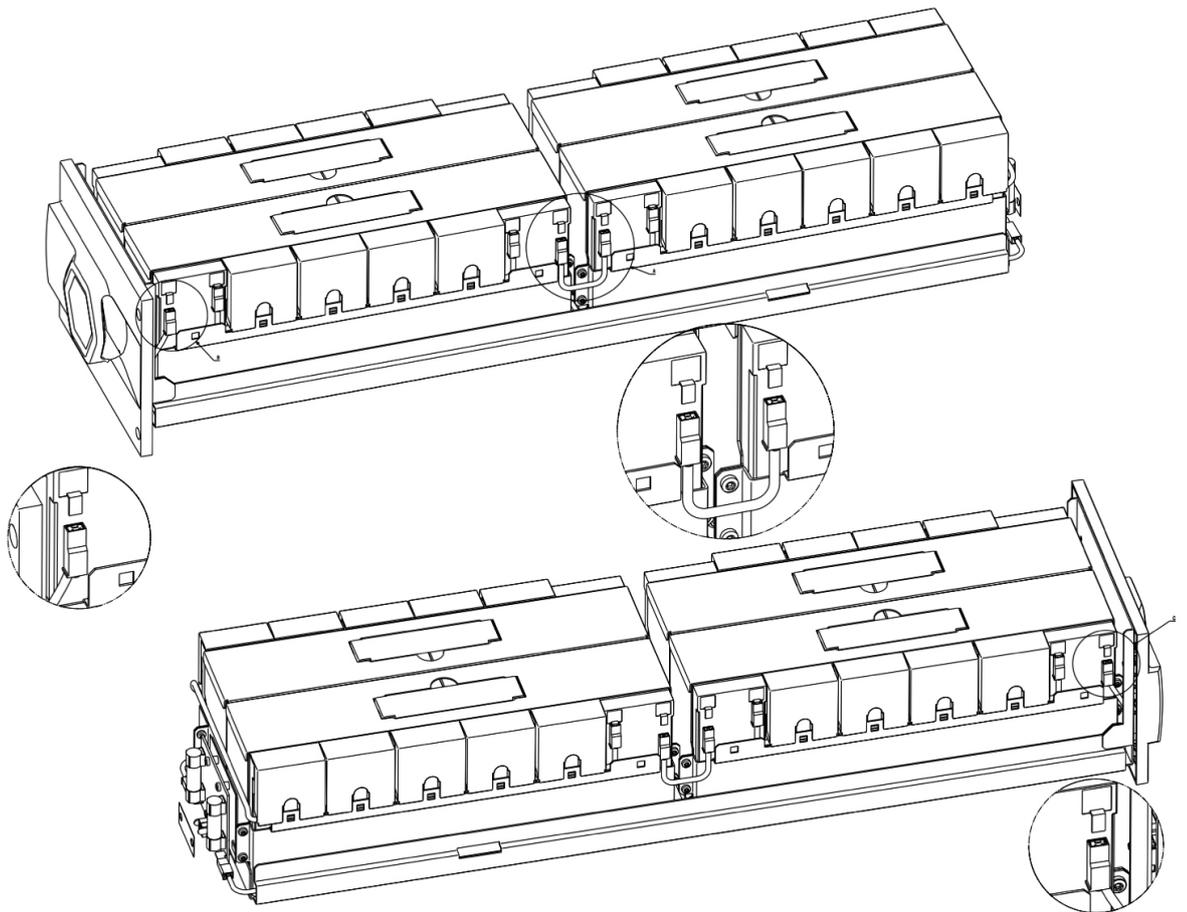


KEOR MOD Battery Drawers – Battery Blocks

Insert the remaining terminal covers on the batteries.

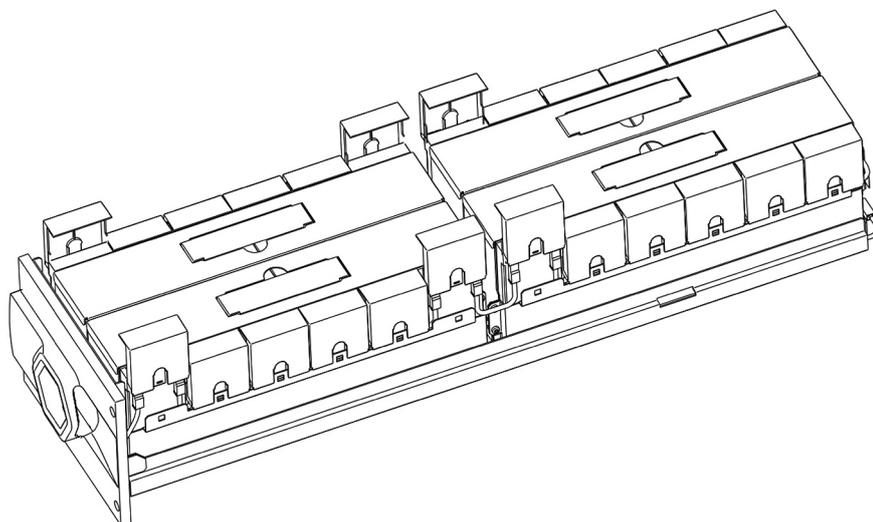

Fill the second drawer in the same way.

After the two drawers are ready, push them inside the UPS cabinet till they are abut and fix them with the four screws that were previously saved.

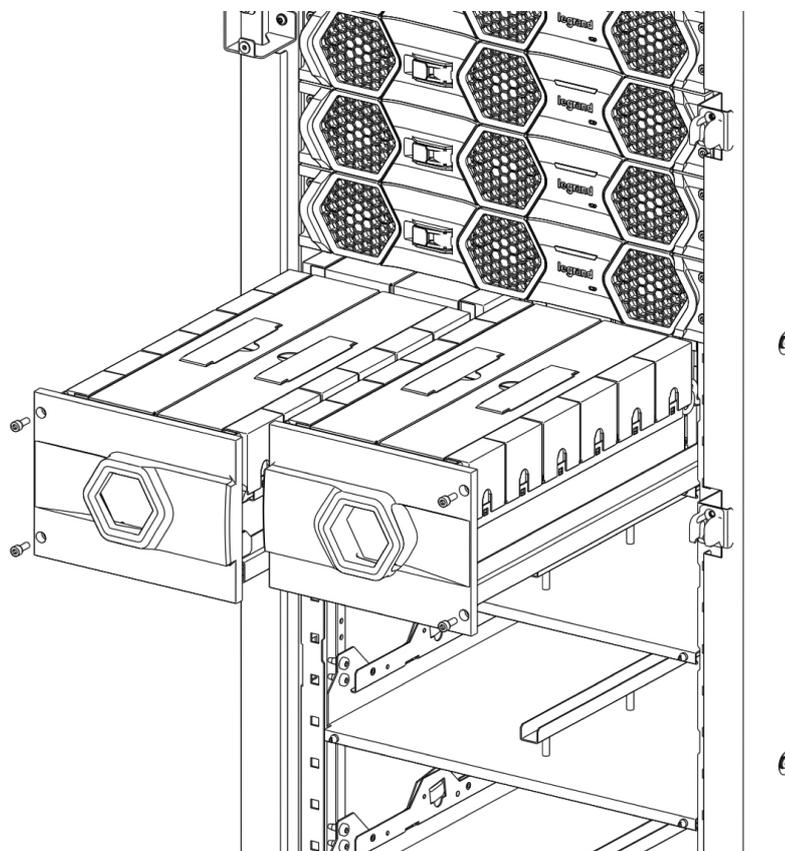

4. Warehousing and dismantling



All storage and dismantling operations must be carried out only by a **SKILLED TECHNICIAN** (paragraph 2.2). The instructions in this chapter are to be considered indicative: in every country there are different regulations regarding the disposal of electronic or hazardous waste such as batteries. It is necessary to strictly adhere to the standards in force in the country where the equipment is used.
Do not throw any component of the equipment in the ordinary rubbish.

4.1 Warehousing

Batteries must be stored in an environment with a room temperature between 0°C (+32°F) and +50°C (+122°F) and humidity less than 90% (not condensing).

The batteries installed inside the battery packs are lead-acid sealed and do not require maintenance (VRLA). The batteries should be charged for 12 hours every 3 months by connecting the battery drawers to the UPS. Repeat this procedure every two months if the storage ambient temperature is above +25°C (+77°F).



Batteries must never be stored if partially or totally discharged.
LEGRAND is not liable for any damage or bad functioning caused to the UPS by wrong warehousing of the batteries.

4.2 Dismantling

Batteries must be disposed of in a site intended for the recovery of toxic waste. Disposal in the traditional rubbish is not allowed.

Apply to competent agencies in your country for the proper procedure.



Pb



A battery may constitute a risk of electric shock and high short-circuit current.
When working on batteries, the prescriptions indicated in chapter 2 must be adhered to.

It is important to dismantle the various parts the battery cabinet consists of. For these operations, Personal Protective Equipment must be worn.

Sub-divide the components separating the metal from the plastic, from the copper and so on according to the type of selective waste disposal in the country where the equipment is dismantled.


If the dismantled components must be stored before being properly disposed, be careful to keep them in a safe place protected from atmospheric agents to avoid soil and groundwater contamination.

For the disposal of electronic waste, it is necessary to refer to the industry standards.

5. Mechanical characteristics

5.1 Battery drawer


(all the dimensions are in mm)

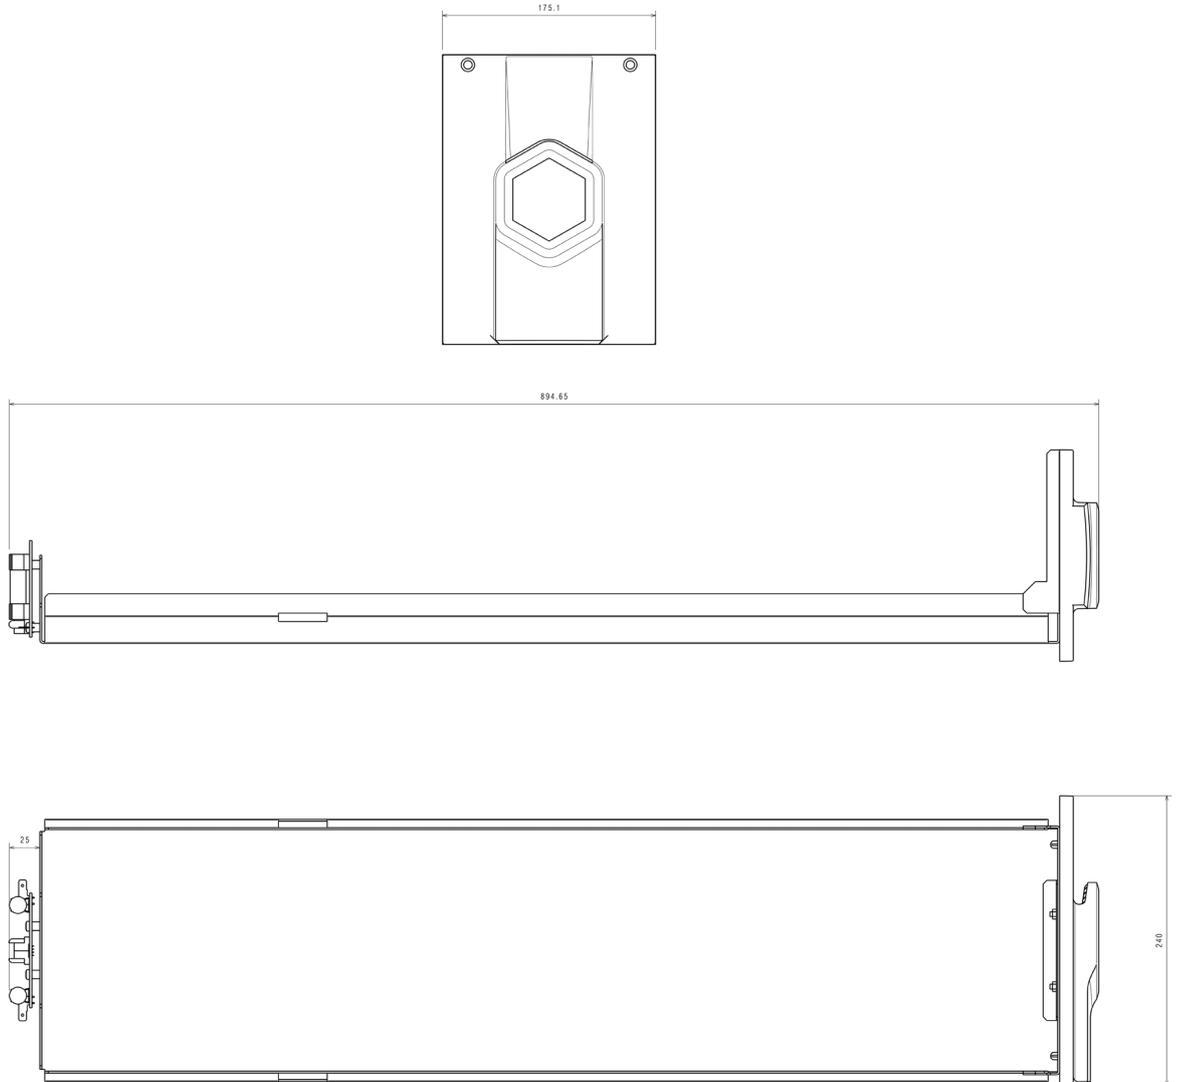


5. Mechanical characteristics

5.2 Battery block

(all the dimensions are in mm)

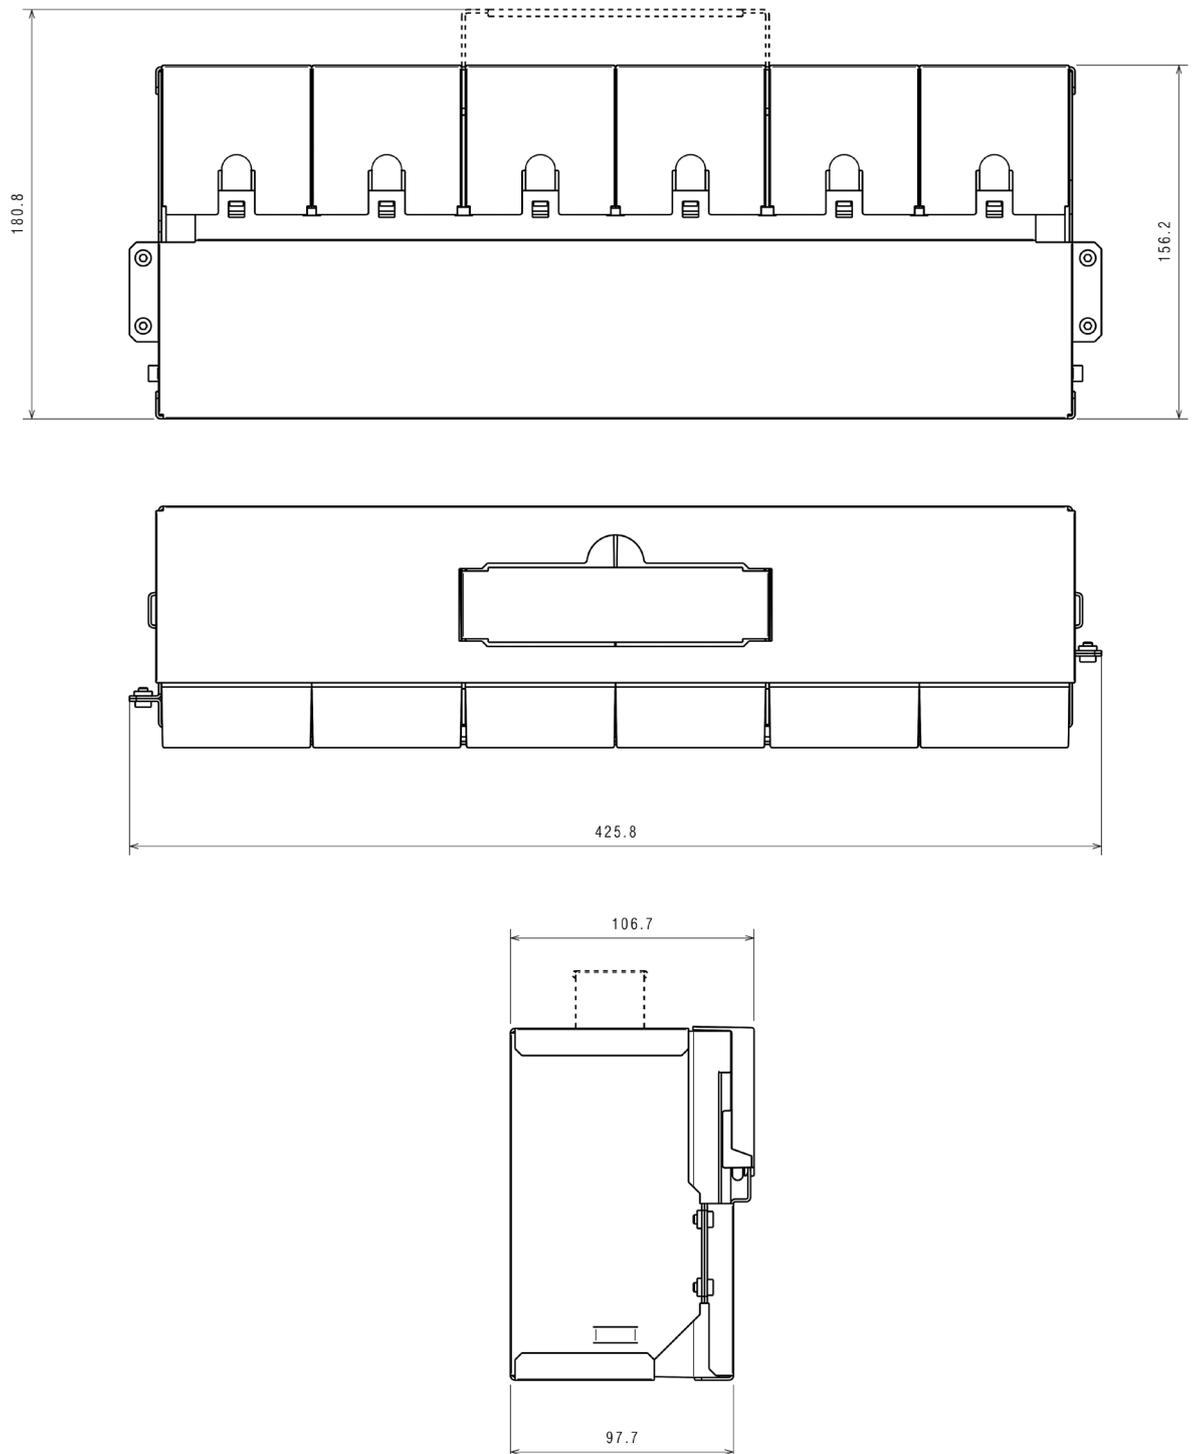

KEOR MOD
Battery Drawers – Battery Blocks

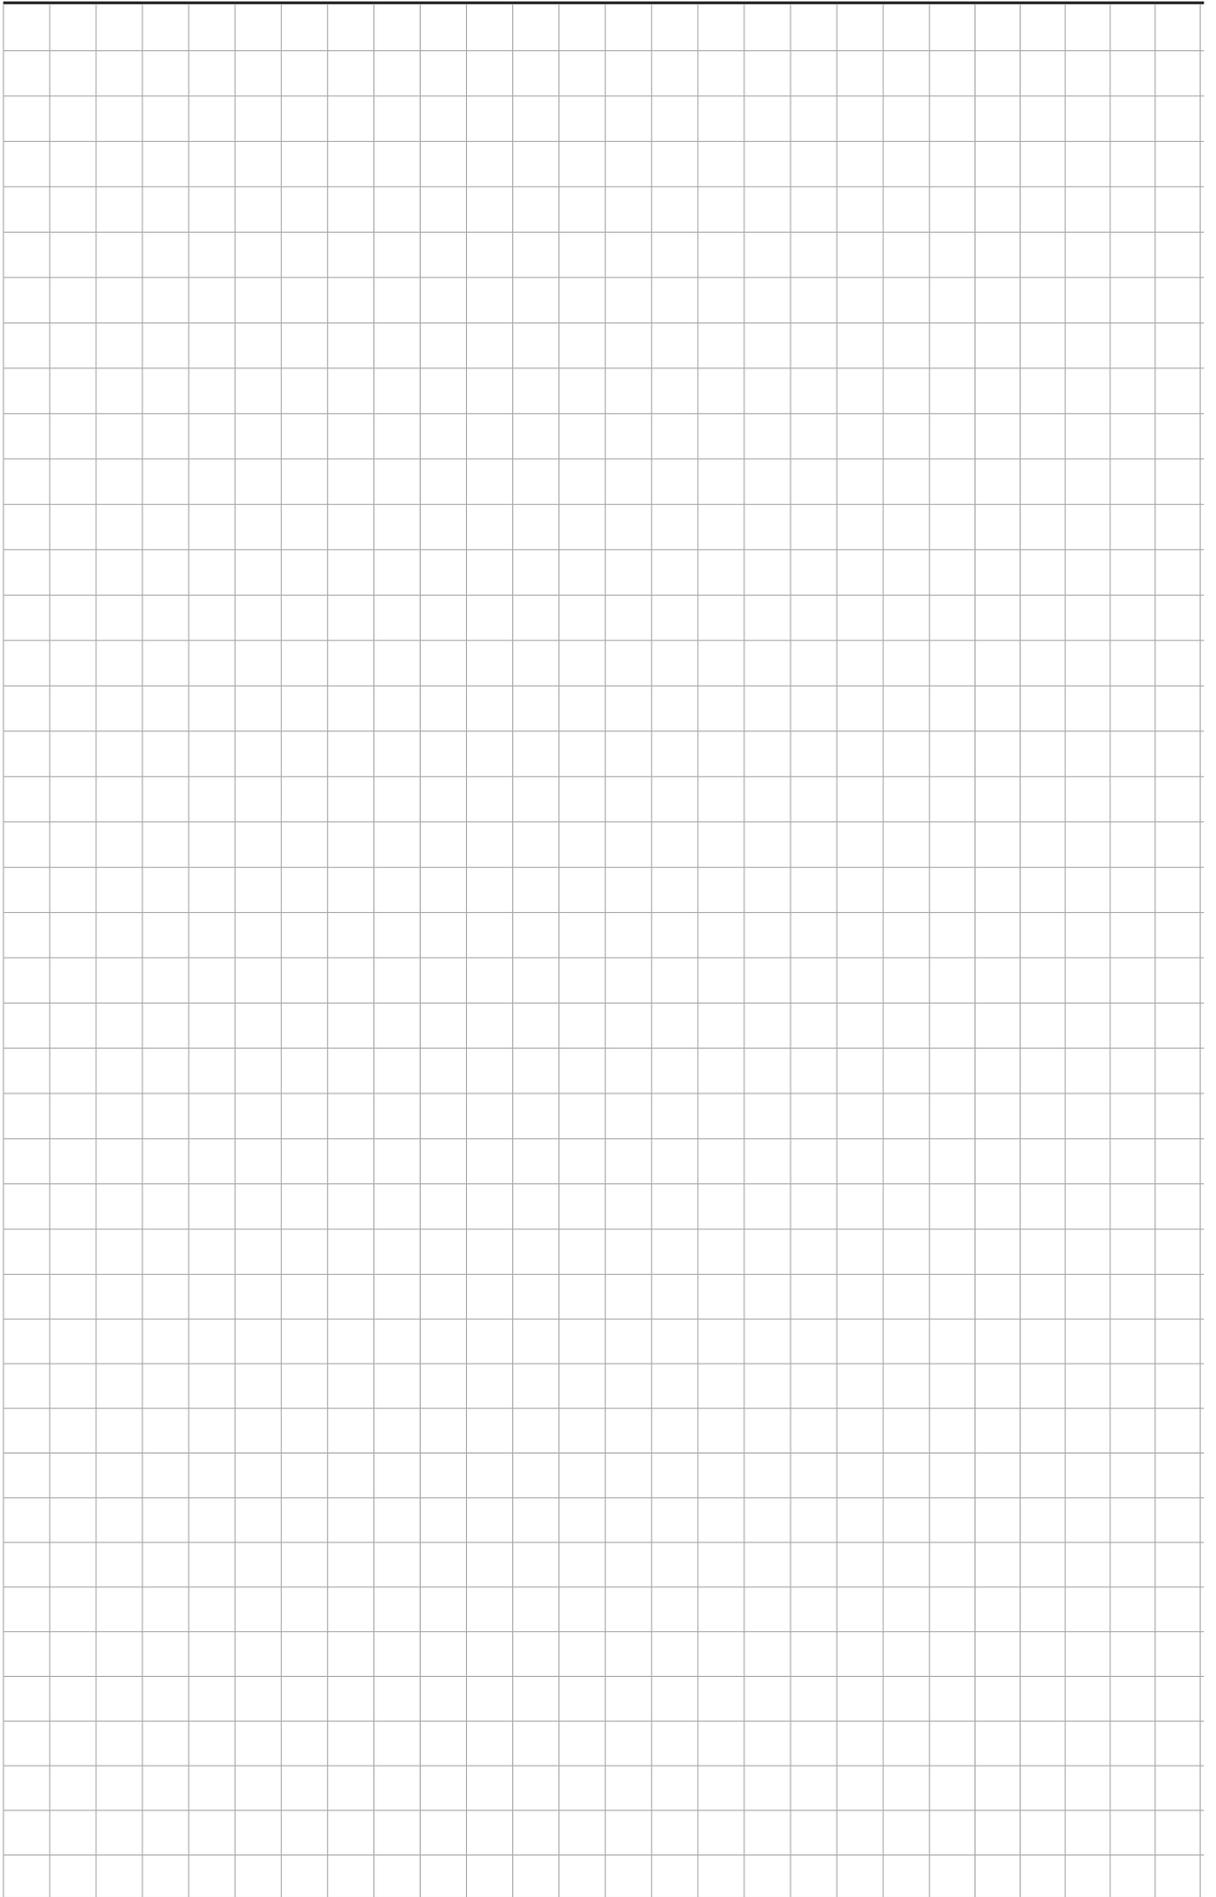

8. Mise au rebut**8. Dismantling****8. Smantellamento****8.3 Élimination des composants électroniques****8.3 Electronic component dismantling****8.3 Smaltimento della componentistica elettronica**

Ajoutez les informations suivantes :


Add the following information:

Aggiungere le seguenti informazioni:

Pour retirer l'écran, dévissez les quatre écrous des quatre tiges filetées M3 qui fixent l'écran à l'armoire.

To remove the display, unscrew the four nuts on four M3 threaded studs that secure the display to the cabinet.


Per rimuovere il display, rimuovere i quattro dadi su quattro perni filettati M3 che fissano il display al cabinet.

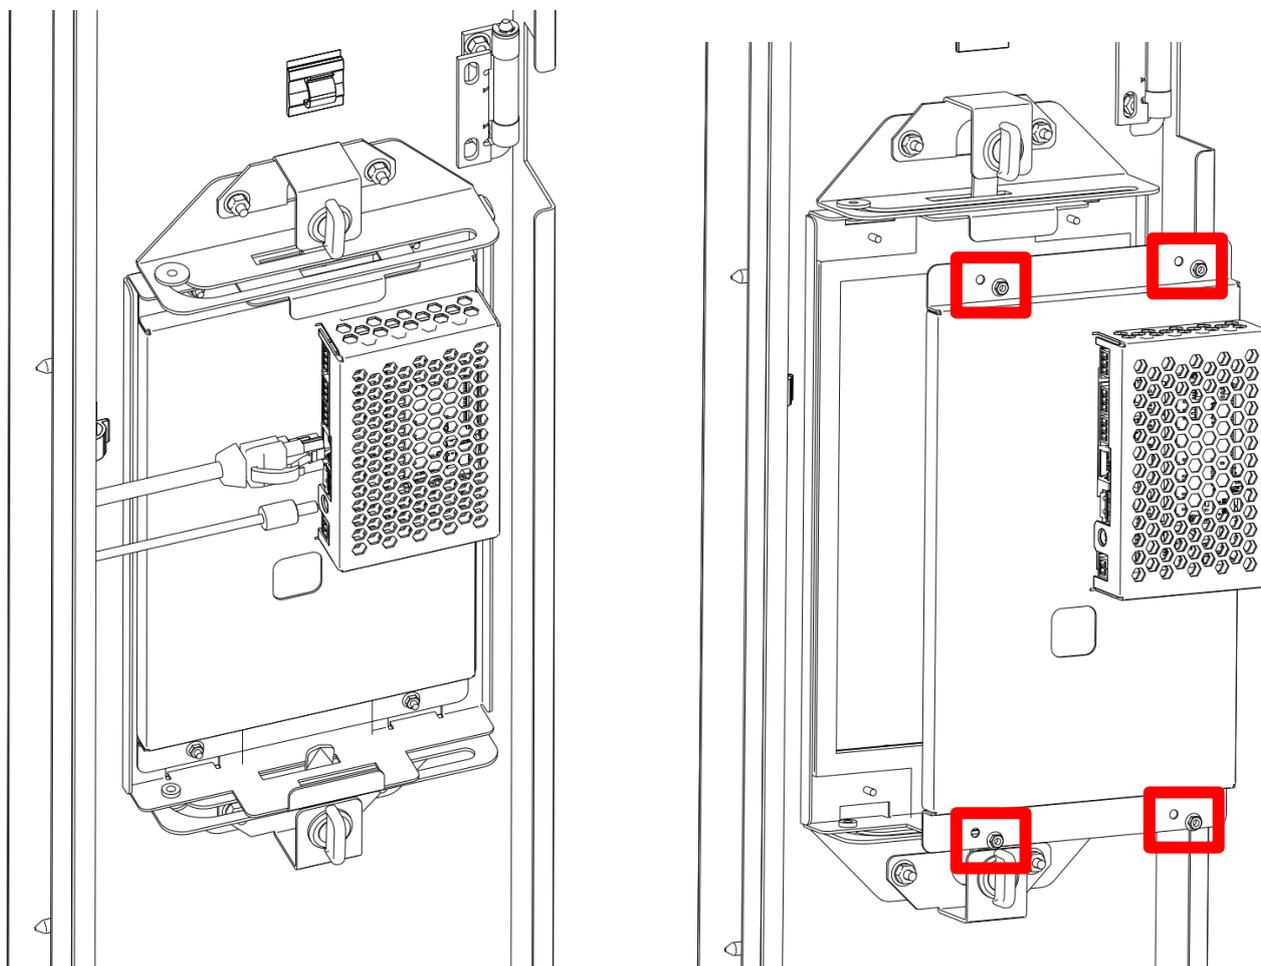

Keor MOD

THREE-PHASE
MODULAR UPS


up to 250 kW

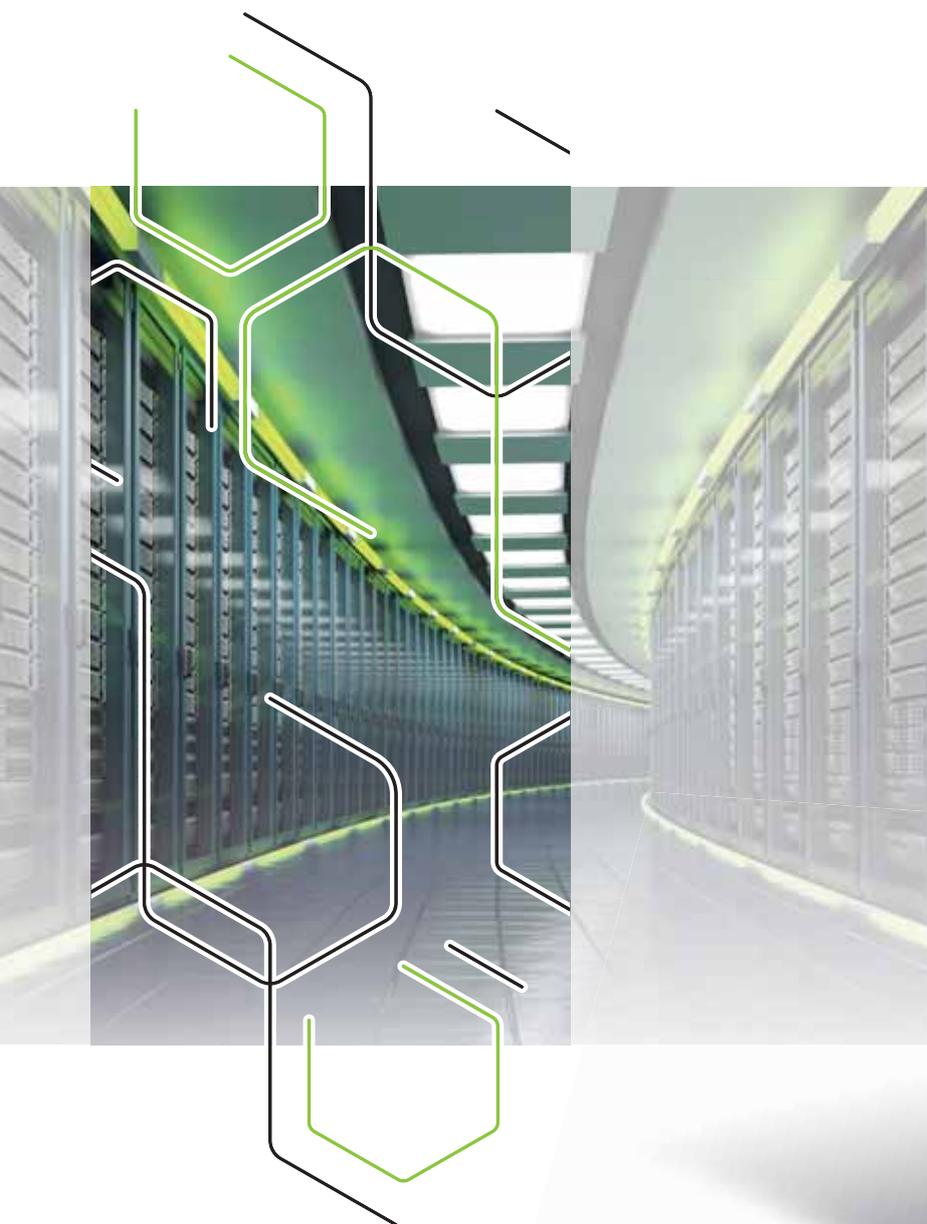

THE GLOBAL SPECIALIST
IN ELECTRICAL AND DIGITAL INFRASTRUCTURES

 **legrand**[®]

legrand

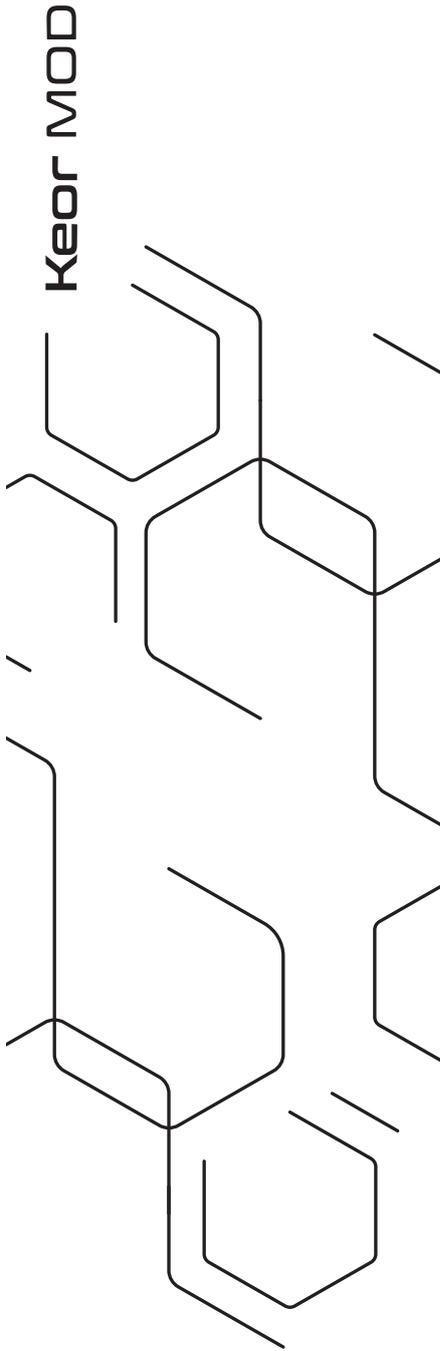

CONTENTS

4	MORE THAN A UPS
6	TECHNOLOGY AND DESIGN
8	IDEAL FOR IT INFRASTRUCTURES
10	A COLLABORATION OF TECHNOLOGY
12	EXCLUSIVE FEATURES
14	INTERNAL BATTERIES UP TO 125 KW
16	EXCLUSIVE TOUCH SCREEN DISPLAY
18	COMPLETE ON BOARD COMMUNICATION
20	CATALOGUE
22	CUSTOMER CARE SERVICES



Keor MOD

MORE THAN A UPS

Legrand presents the new **Keor MOD**, the latest addition to the UPS family that redefines the concept of modularity.

Design with unrivalled futuristic style and features.

Outstandingly flexible architecture for all installations and applications.

State-of-the-art technology to achieve the highest levels of efficiency.



Keor MD101



Keor MOD

TECHNOLOGY AND DESIGN



STYLISH

The elegance of the design and the skilful choice of materials have joined forces to create a modern and cutting-edge machine, a UPS with a highly emotional DNA boasting market-leading performance.

REVOLUTIONARY

All the elements comprising the system have been designed to ensure maximum reliability and performance, without forsaking its ease of installation and maintenance. The use of light colours and highly reflective surfaces contribute to reducing environmental lighting in technical rooms (DATA CENTRES), and reduce consumptions in line with a GREEN approach.

POWERFUL

The **Keor MOD** power module is the smallest 25 kW three-phase module available on the market; its high power density (1136 W/dm³) makes it possible to achieve configurations of 125 kW with 5.2 minutes of autonomy (internal batteries) or 250 kW in less than 1m² of space on the ground with the door open.

PERFORMING

- Double conversion efficiency up to 96.8% (from 20% to 50% of the load)
- Efficiency in ECO mode up to 99%.
- Output power factor = 1
- Hot-swappable modules.
- Modular redundancy in N+1 configuration.
- Intelligence distributed between modules.
- UPS system capacity up to 600 kW.
- Decentralised by-pass.
- Reduced battery charging times.


Keor MOD

IDEAL FOR IT INFRASTRUCTURES

Keor MOD is the ideal solution for all critical computer applications such as DATA CENTERS; its structure allows us to respond to customer demands in terms of continuous evolution of the IT infrastructure.

The range includes just two cabinet configurations:

- up to 5 power modules with internal batteries (25 - 125 kW)
- up to 10 power modules (25 - 250 kW).

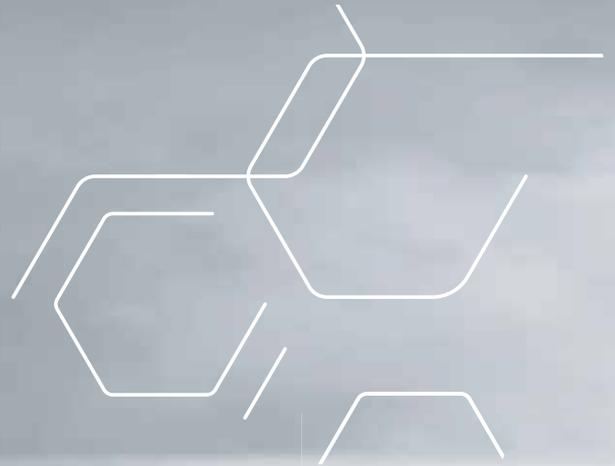



PARALLEL SYSTEM (Up to 600 kW without batteries)

Each unit can be connected in parallel to identical or different units until the desired power and/or redundancy levels are reached.

For instance, it is possible to connect up to 4 x 125 kW units with internal batteries in parallel, obtaining a total system power of 500 kW (N+1 redundancy equal to 475 kW in any failure situation).

Moreover, with **Keor MOD** it is possible to connect in parallel up to 24 power modules, also connecting cabinets with different numbers of modules.



Keor MOD

A COLLABORATION OF



TECHNOLOGY



25 kW power module in just 2 units

Extensive research and use of latest generation components is behind the development of this three-phase power module with top performance levels in its category, minimising footprints and weights.

With a capacity of 25 kW and a footprint of just 2 rack units, the **Keor MOD** power module ensures maximum performance in exceptionally small spaces.

The **Keor MOD** power module is equipped with “System On Chip” type control technology which, unlike the conventional version (DSP based), contains a dual Core ARM A9 processor, a high performance FPGA and a set of advanced devices within one single component. This technological choice provides an impressive range of advantages in terms of processing power, speed and versatility.

The power module houses the following components: input PFC, three-level inverter, integrated and independent control logic, battery charger, static and electromechanical by-pass.


Structured Energy Flow

Unique in its kind, **Keor MOD** introduces the new *Structured Energy Flow* system, effectively eliminating all the connection cables inside the power module.

The connections between the various power sections are achieved by the structure that physically connects them. This results in an exceptionally high level of reliability.


Keor MOD

EXCLUSIVE FEATURES

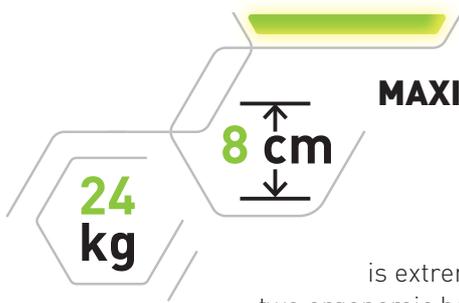

MAXIMUM MANOEUVRABILITY

The power module, is extremely compact and integrates two ergonomic handles to facilitate extraction and insertion of the module. Its light weight means it can also be handled by a single person.

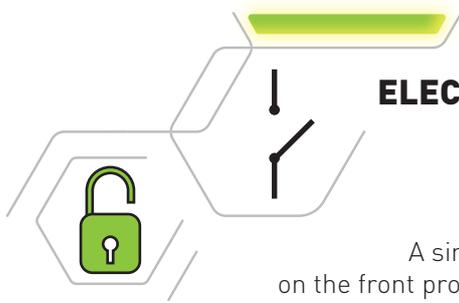

ELECTRICAL AND MECHANICAL SAFETY

A simple and practical "SWITCH" on the front provides the connection and the disconnection both mechanical and electrical, which prevents any incorrect or involuntary removals.



INSTANT COMMUNICATION

Distinctive element of all the Legrand UPS, **Keor MOD** also integrates a Led Status Bar (Multicoloured status bar) with traffic light type coding for the immediate display of the actual operating status.

«HOT SWAP» DESIGN

Thanks to the hot swap functions, plug and play and the total independence of each power module, all maintenance phases and any power expansion are extremely swift and simple.

CONTROLLED NOISE LEVEL

The control of the cooling fans is performed independently based on the load and the temperature of the single power stage, hence decreasing energy consumptions and the noise level of the system.

Keor MOD



INTERNAL BATTERIES UP TO 125 KW

Safe extraction

The battery drawers can be easily extracted using the handle on the front.

The mechanical anti-extraction stop prevents complete extraction of the drawer, preventing accidental falling and allowing operators to work in complete safety.



Light and dividable

The batteries inside the drawer are divided into 4 blocks, each with 6 batteries; this reduces weight (<16 kg each) and avoids direct contacts with dangerous voltages during maintenance phases.

Ease of handling

Each 6-battery block can easily be removed using the integrated handle.

The replacement of individual sections requires very little time and guarantees swift maintenance operations.

Keor MOD

EXCLUSIVE TOUCH SCREEN DISPLAY

PATENT PENDING

Rotating, unique functionality



The 10" touch screen display provides a simplified control panel packed with information, alerts and settings and is also equipped with interactive icons to make navigation and selection of the functions to be controlled quick and simple.

The possibility of being able to rotate the Display inwards by 180° simplifies and speeds up the configuration and maintenance phases.



10 inches with innovative graphics


The display is positioned vertically so you have both the operating block diagram and the UPS layout with all the available information on the same screen.

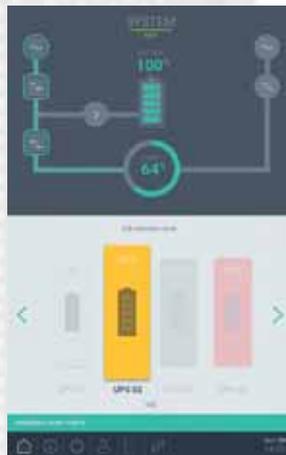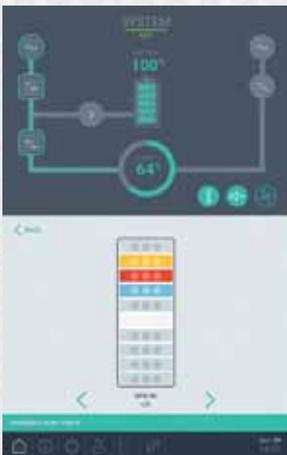




Intuitive and user friendly


All the display icons, including the operating panel, are interactive so as to facilitate navigation and the setting of customisable functions.

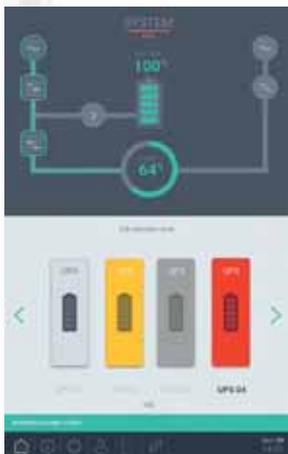

Keor MOD

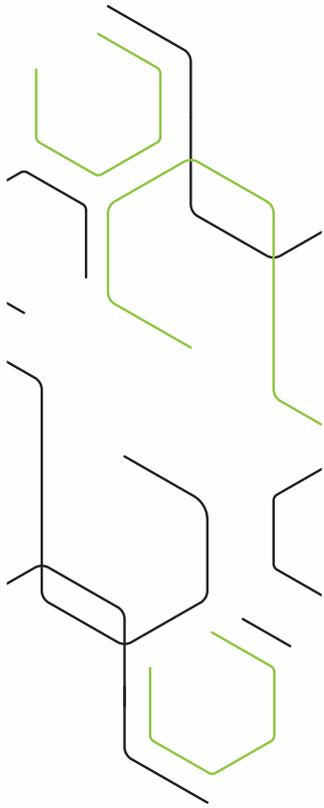

COMPLETE ON BOARD COMMUNICATION

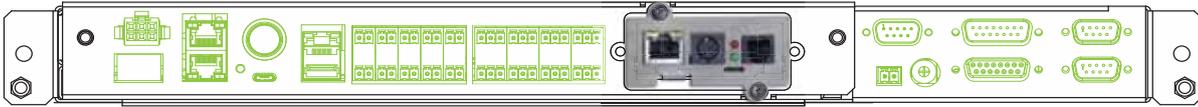

FRONT COMMUNICATION MODULE

The communication module is positioned on the front, is easily accessible and boasts a wide selection of communication interfaces.

- "Cold Start" push-button
- system communication ports
- RS485 port
- RS485 port for external accessories
- logical gate
- communication interface slot
- USB host port
- 11 floating contact inputs
- 8 floating contact outputs



Eliot is the Legrand program dedicated to connected objects (Internet of things) which identifies all those products or systems which, because they can connect to the internet, give added value in terms of functionality, information, interactions with the environment and use.

Keor MOD

UPS Modular three-phase double conversion VFI



3 104 80



Articles UPS - empty power cabinets

Articles	Power (kW)	Installable battery drawers	Distribution	Weight (kg)
3 104 80	25 - 125	from 2 to 10 battery drawers	3-3	256
3 104 81	25 - 250	-	3-3	233

Accessories

Description

- 3 106 75 25 kW power module
- 3 106 76 Empty battery blocks kit for 6 batteries (to be used in sets of 4 per drawer)
- 3 106 77 Kit of 2 EMPTY battery drawers
- 3 106 78 Kit of 4 battery blocks (6 x 9 Ah batteries)
- 3 106 79 Kit of 4 battery blocks (6 x 11 Ah batteries)
- 3 109 62 Kit of 4 battery blocks (6 x 9Ah Long Life batteries)
- 3 104 84 Modular battery cabinet
- 3 109 89 Full conventional battery cabinet *
- 3 109 75 Parallel cable kit (1 kit every 2 cabinets - length 6m)

* to be used in multiples of two

Codes in red new products.

Keor MOD

UPS Modular three-phase double conversion VFI

Configuration examples

UPS up to 125 kVA

25
Power: 25 kVA
Back-up time: 48 min. when 100% charged
1 Power module
10 Battery drawers



UPS up to 250 kVA

50
Power: 50 kVA
2 Power modules



75

Power: 75 kVA
Autonomy: 11 min. when 100% charged
3 Power modules
10 Battery drawers



100

Power: 100 kVA
4 Power modules



125

Power: 125 kVA
Autonomy: 5.2 min. when 100% charged
5 Power modules
10 Battery drawers



250

Power: 250 kVA
10 Power modules



NOTE: the stated back-up times in minutes are estimated and may vary according to the load characteristics, operating conditions and environment.

Keor MOD

UPS Modular three-phase double conversion VFI

Characteristics										
General specifications										
Nominal power (kVA)	25	50	75	100	125	150	175	200	225	250
Active power (kW)	25	50	75	100	125	150	175	200	225	250
Module power (kW)	25									
Classification	On-Line double conversion VFI-SS-111									
No. Power modules	1	2	3	4	5	6	7	8	9	10
System	Modular, expandable and redundant UPS system									
Input specifications										
Input voltage	400V 3F+N+PE									
Input frequency	45-65 Hz (43.0 ÷ 68.4 Hz)									
Input voltage range	400V +15%/-20% - 230V +15%/-20%									
THD input current	< 3% (at full load)									
Compatibility with power supply units	Yes									
Input power factor	> 0.99									
Output Specifications										
Output voltage	380, 400, 415V									
Efficiency (power module)	Up to 96.8%									
System efficiency	Up to 96.5%									
Efficiency in Eco mode	99%									
Nominal output frequency	50/60 Hz selectable by the user ±2 % (standard), ±14 % (extended)									
Crest factor	3:1									
Waveform	Sinusoidal									
Output voltage tolerance	±1%									
THD output voltage	<0.5% with linear load, <1% with non-linear load									
Overload capacity	10 minutes at 125%, 60 seconds at 150%									
Bypass	Automatic bypass (static and electromechanical) and manual maintenance bypass									
Batteries										
Battery module	Plug & play									
Battery series type/voltage	VRLA - AGM 12 V, 9 Ah - 11 Ah									
Autonomy	Configurable									
Battery charger	Smart charge technology. 3-stage advanced cycle									
Independent battery configuration	Yes, maximum 5 sets of independent batteries (configurable as common or separate units)									
Communication and management										
Display	10-inch rotating colour touch screen									
Communication ports	2 x RS485 ports (one for external accessories), 11 input floating contacts, 8 output floating contacts, 1 interface slot, USB host port									
Back feed protection	NC/NO auxiliary contact									
Emergency Power Off (EPO)	Yes									
Cold start push-button	Yes									
Remote management	Available									
Mechanical characteristics										
Height (mm)	1990									
Width (mm)	600									
Depth (mm)	1000									
Installable power modules	Up to 5					Up to 10				
Installable battery drawers	Up to 10					—				
Net weight kg	256					233				
Ambient Conditions										
Operating temperature/humidity	0 - 40°C / 0 - 95% non condensing									
Protection rating	IP20									
Maximum audible noise at 1 m from the unit (dBA)	< 80 dBA									
Conformity										
Certifications	EN 62040-1, EN 62040-2, EN 62040-3									
Services:										
Installation	Modular architecture with "plug & play" power modules and batteries									
Maintenance	Availability of optional services provided by the manufacturer									
Ease of management	Advanced diagnostic functions via the touch screen display									

CUSTOMER CARE SERVICES



RELIABLE

We are physically present in over 70 countries, which means we are able to intervene and provide support in over 150 countries worldwide. A team of qualified technicians is at your service to provide support and guarantee the correct functioning of your UPS; this aims to ensure high quality power and availability of energy even at the most critical loads.

EXCELLENCE

Legrand's competitive advantage lies in its capacity to provide high added value UPS and services for end users and business partners alike. Legrand's vision sees the creation of value as finding low energy consumption solutions, but also integration of solutions in the process of global development. With a catalogue of over 200,000 articles, the Group supplies all the products necessary for the realisation of electrical and digital systems, in particular integrated systems, aimed at finding solutions to meet everyone's needs.

TAILOR-MADE

Legrand provides a complete range of specific solutions and services to meet customer requirements:

- Pre-sale technical support during the design phase
- Final factory inspection and testing
- Supervision during installation, final testing and commissioning.
- On-site acceptance tests
- Training for operators
- On-site audits
- Extended warranties
- Annual maintenance contract
- Swift intervention in case of emergency calls





SUPPORT TRAINING MAINTENANCE

SUPPORT

Site inspection, installation supervision

We conduct a complete inspection of the environment in which the UPS will be installed to ensure its safety and failure free operation. Our technicians provide recommendations for the technical office or the electrical installer, and supervise the installation of the UPS before commissioning.

On-site tests, commissioning

Our technicians conduct thorough on-site tests and complete configuration of the UPS before commissioning. They also perform final inspection and testing operations according to your needs. The UPS commissioning operations are performed by our qualified engineers, to guarantee maximum functionality and the elimination of any problems after start-up.



TRAINING

We provide on-site training to guarantee safe use and efficient operation of your UPS. Maintenance courses are also held at our training centre with equipment available for practical sessions.



MAINTENANCE

Preventive maintenance

Electronic equipment and electrical systems, like UPS devices, contain components and parts with a limited service life that must be periodically replaced according to the manufacturer's specifications; these replacement times are influenced by many factors, such as the ambient temperature, the nature of the load etc. To guarantee optimal performance and to protect your critical applications, as far as possible, from potential downtimes, it is essential to perform regular preventive maintenance and replace worn parts whenever necessary.

Our servicing contracts include cleaning, IR thermography, measuring, functional testing, event logs and power quality analysis, battery life checks, hardware and software updates and technical reports. A preventive maintenance plan is one of the most convenient ways to preserve your investment and ensure the continuity of your business operations.

Corrective maintenance, emergency intervention

Thanks to the use of state-of-the-art equipment, custom made servicing software and regular training courses, our technicians are able to minimise analysis times and guarantee a short MTTR (Mean Time To Repair). The malfunctioning parts will be replaced, and corrective actions, adjustments and updates will be performed to swiftly return the UPS to its normal operational status.





**World Headquarters and
International Department**
87045 Limoges Cedex - France
☎ : + 33 (0) 5 55 06 87 87
Fax : + 33 (0) 5 55 06 74 55

In accordance with its policy
of continuous improvement, the
Company reserves the right to change
specifications and designs without
notice. All illustrations, descriptions,
dimensions and weights in this
catalogue are given as a guide only.